 
 
 

SST AND SSM

 
	Page
SST (SPECIAL SERVICE TOOLS)	C-2
SSM (SPECIAL SERVICE MATERIALS)	C-8

[illegible]

SST (SPECIAL SERVICE TOOLS) (Cont'd)

 
Section			MA	EM	FI	CO	LU	ST	CH	CL	MT	AT	PR	FA	RA	BR	SR	BE	BO
Illustration	• Part No.	• Part Name																	
	09285-76010	(Injection Camshaft Bearing Cone Replacer)						●	●										
	09286-46011	(Injection Pump Spline Shaft puller)						●	●										
	09301-20020	(Clutch Guide Tool)								●									
	09302-30031	(Clutch Diaphragm Spring Hight No. 3 Gauge)								●									
	09303-35011	(Input Shaft Front Bearing Puller)								●									
	09304-30012	(Input Shaft Front Bearing Replacer)								●									
	09307-30010	(Extension Housing Bushing Replacer)									●								
	09308-00010	(Oil Seal Puller)									●				●				
	09308-10010	(Oil Seal Puller)									●	●			●				
	09312-20011	(Transmission Gear Remover & Replacer)									●								
	09313-30021	(Detent Ball Plug Socket)									●								
	09315-00010	(Clutch Release Bearing Remover & Replacer)								●									
	09316-60010	(Transmission & Transfer Bearing Replacer)									●								
	09325-20010	(Transmission Oil Plug)		●							●	●	●						

SST (SPECIAL SERVICE TOOLS) (Cont'd)

Section			MA	EM	FI	CO	LU	ST	CH	CL	MT	AT	PR	FA	RA	BR	SR	BE	BO
Illustration	• Part No.	• Part Name																	
	09330-00020	(Companion Flange) Holding Tool												●	●				
	09333-00012	(Clutch Diaphragm) Spring Aligner								●									
	09350-20013	(TOYOTA Automatic Transmission Tool Set)										●							
	09504-00011	(Differential Side Bearing Adjusting Nut Wrench)													●				
	09504-22010	(Differential Side Wash Remover & Replacer)													●				
	09506-30011	(Differential Drive Pinion Bearing Cone Replacer)													●				
	09506-35010	(Differential Drive Pinion Rear Bearing Replacer)									●								
	09515-21010	(Rear Axle Shaft Bearing Replacer)													●				
	09517-30010	(Rear Axle Shaft Oil Seal Replacer)													●				
	09520-00031	(Rear Axle Shaft) Puller													●				
	09520-22011	(Differential Side) Gear Shaft Puller													●				
	09527-20011	(Rear Axle Shaft) Bearing Remover															●		
	09527-21011	(Rear Axle Shaft) Bearing Remover													●				
	09550-10012	("B" Replacer Set)													●				

 
[illegible][illegible]

SST (SPECIAL SERVICE TOOLS) (Cont'd)

Section			MA	EM	FI	CO	LU	ST	CH	CL	MT	AT	PR	FA	RA	BR	SR	BE	BO
Illustration	Part No.	Part Name																	
	09616-00010	(Steering Worm Bearing Adjusting Socket)															●		
	09620-30010	(Steering Gear Box Replacer Set)															●		
	09630-24013	(Steering Rack Oil Seal Tool Set)															●		
	09631-20040	(Oil Seal B Replacer)															●		
	09631-22020	(Power Steering Hose Nut 14 x 17 Wrench)															●		
	09703-30010	(Brake Shoe Return Spring Tool)														●			
	09710-14012	(Rear Suspension Bushing Tool Set)													●				
	09710-22041	(Rear Suspension Bushing Tool Set)													●				
	09720-00011	(Shock Absorber Overhaul Tool Set)												●					
	09726-10010	(Lower Suspension Arm Bushing Remover & Replacer)													●				
	09726-12022	(Lower Suspension Arm Bushing Remover & Replacer)												●					
	09727-22032	(Front Coil Spring Compressor)												●					
	09729-22031	(Front Spring Upper Seat Holder)												●					
	09737-00010	(Brake Booster Push Rod Gauge)														●			

[illegible]

SST (SPECIAL SERVICE TOOLS) (Cont'd)

Section			MA	EM	FI	CO	LU	ST	CH	CL	MT	AT	PR	FA	RA	BR	SR	BE	BO
Illustration	• Part No.	• Part Name																	
	09992-00093	(Oil Pressure Gauge) Set										●							

SSM (SPECIAL SERVICE MATERIALS)

Part Name	Part No.	Sec.	Use etc.
Seal packing No. 102	08826-00080	EM	Engine oil pan
THREE BOND 1324	08833-00070	SR	Gear housing Rack guide spring cap and lock nut Pinion adjusting screw and lock nut Cylinder end stopper nut