
ELECTRICAL WIRING DIAGRAMS


SYSTEM INDEX


CELICA

1985 Model (Page 1 to Page 4)

SYSTEMS	LOCATION	SYSTEMS	LOCATION
Air Conditioner, Cooler and Heater	 1-6	Radio and Tape Player	 4-3
Auto Antenna	 4-2	Rear Window Defogger	 2-2
Back-up Lights	 2-3	Rear Wiper and Washer	 3-2
Charging	 1-5	Remote Control Mirrors	 4-1
Cigarette Lighter	 4-2	Starting	 1-1
Clock	 4-2	Stop Lights	 2-6
Combination Meter	 1-7, 2-1	Sun Roof	 2-4
Cruise Control	 2-5	Taillights and Illumination	 3-4
Door Locks	 4-4	Turn Signal and Hazard	 2-7
EFI	 1-3	Unlock and Seat Belt Warning	 3-8
Front Wiper and Washer	 3-1		
Headlights	 3-6		
Horn	 2-8		
Ignition	 1-2		
Interior Lights	 3-7		
Overdrive	 2-5		
Power Source	 1-1		
Power Windows	 2-3		

CELICA ELECTRICAL WIRING DIAGRAM-1985 Model (Page 1 to Page 4)

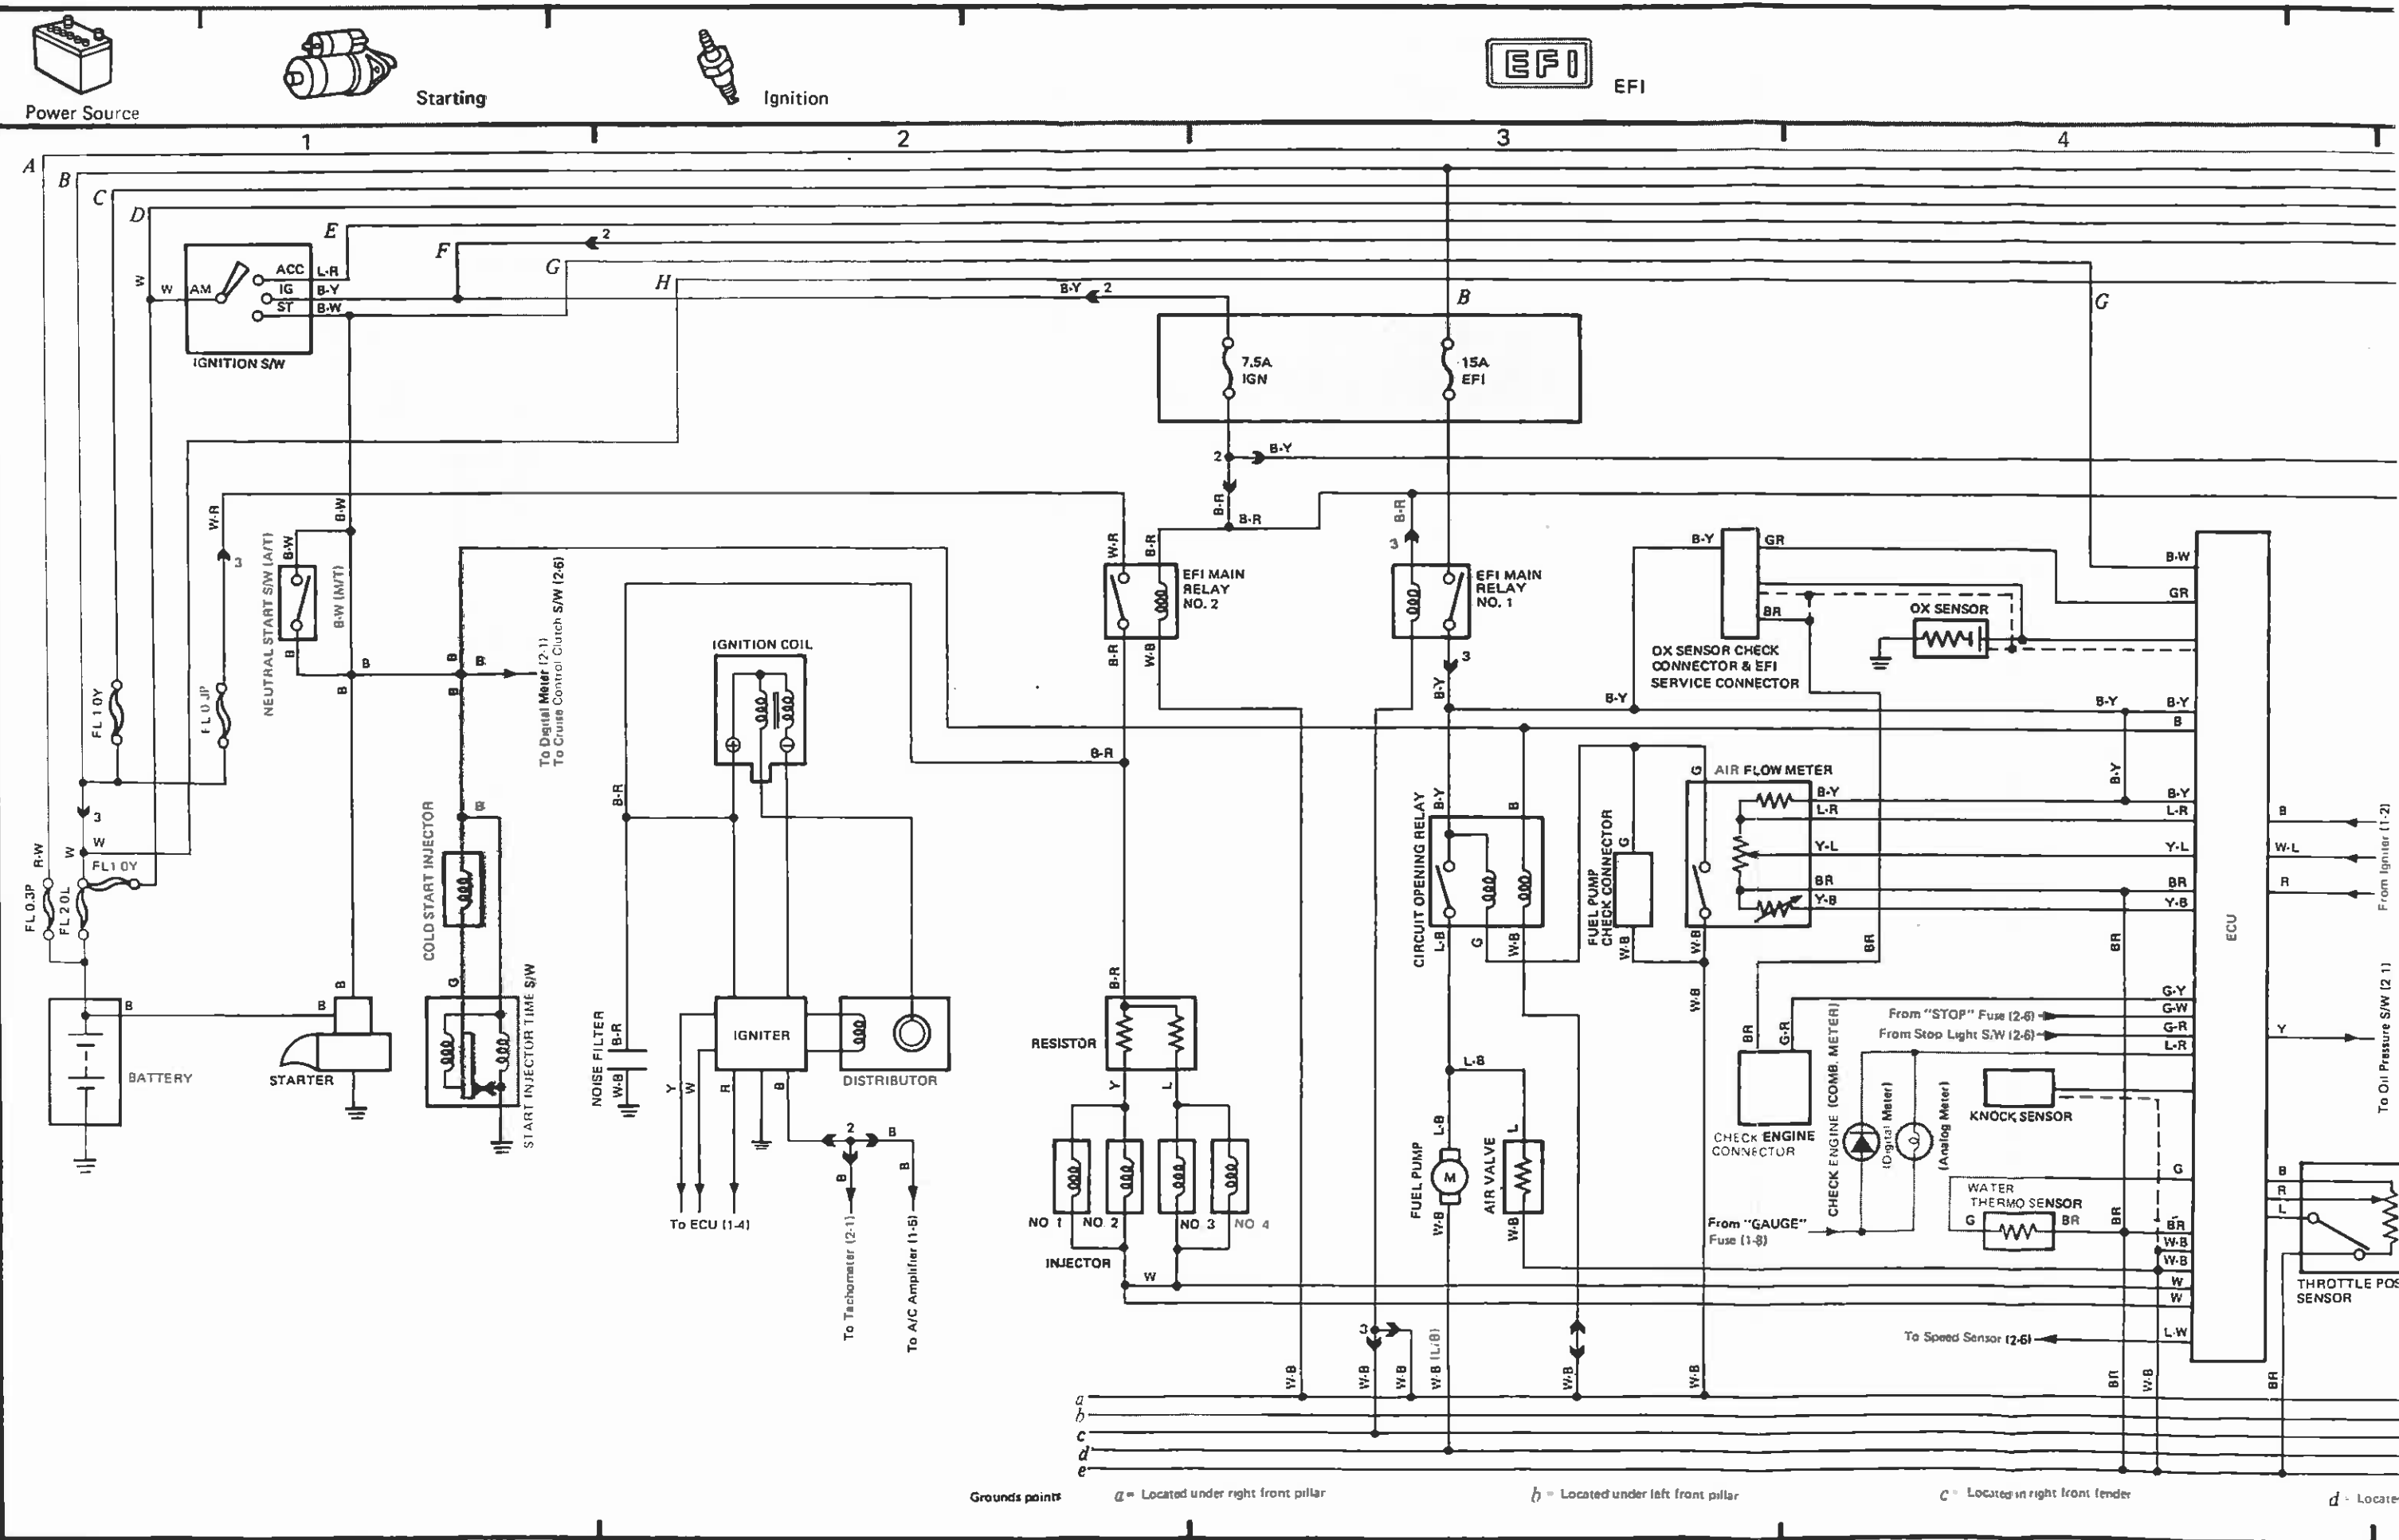


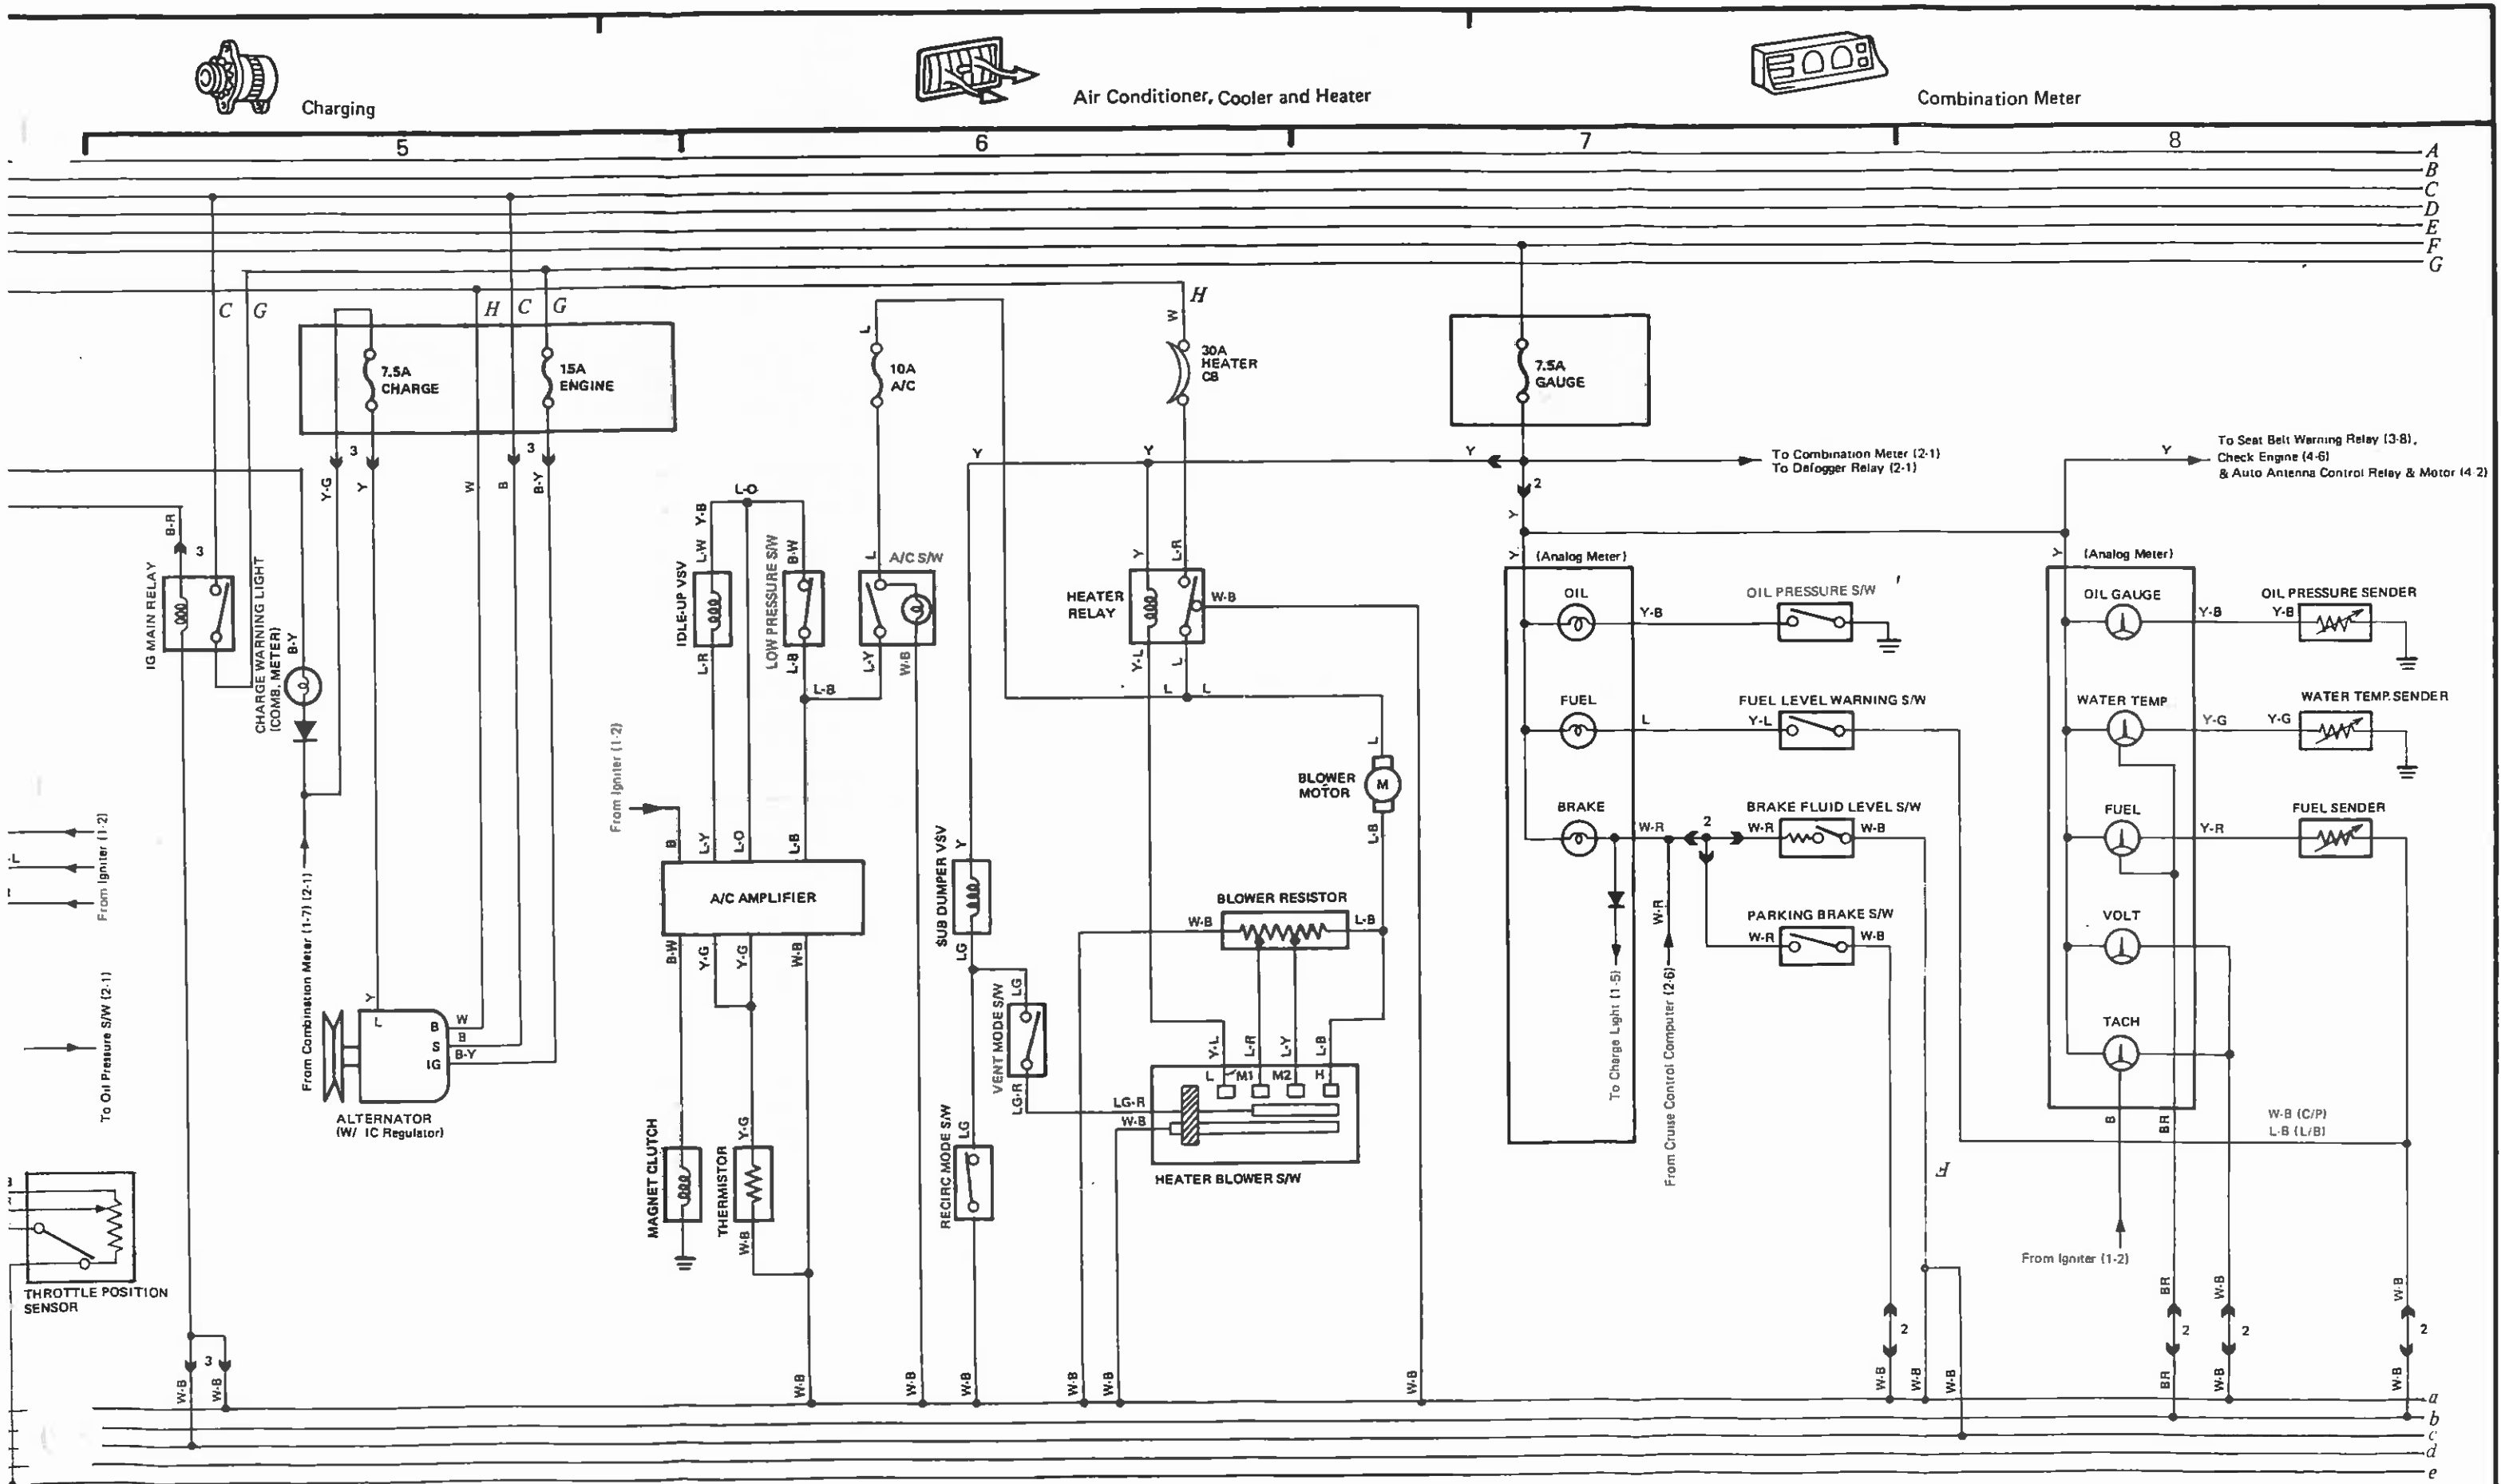

d - Located in back panel near door key cylinder

e - Located on front side of cylinder head cover

2 CELICA (Cont'd)

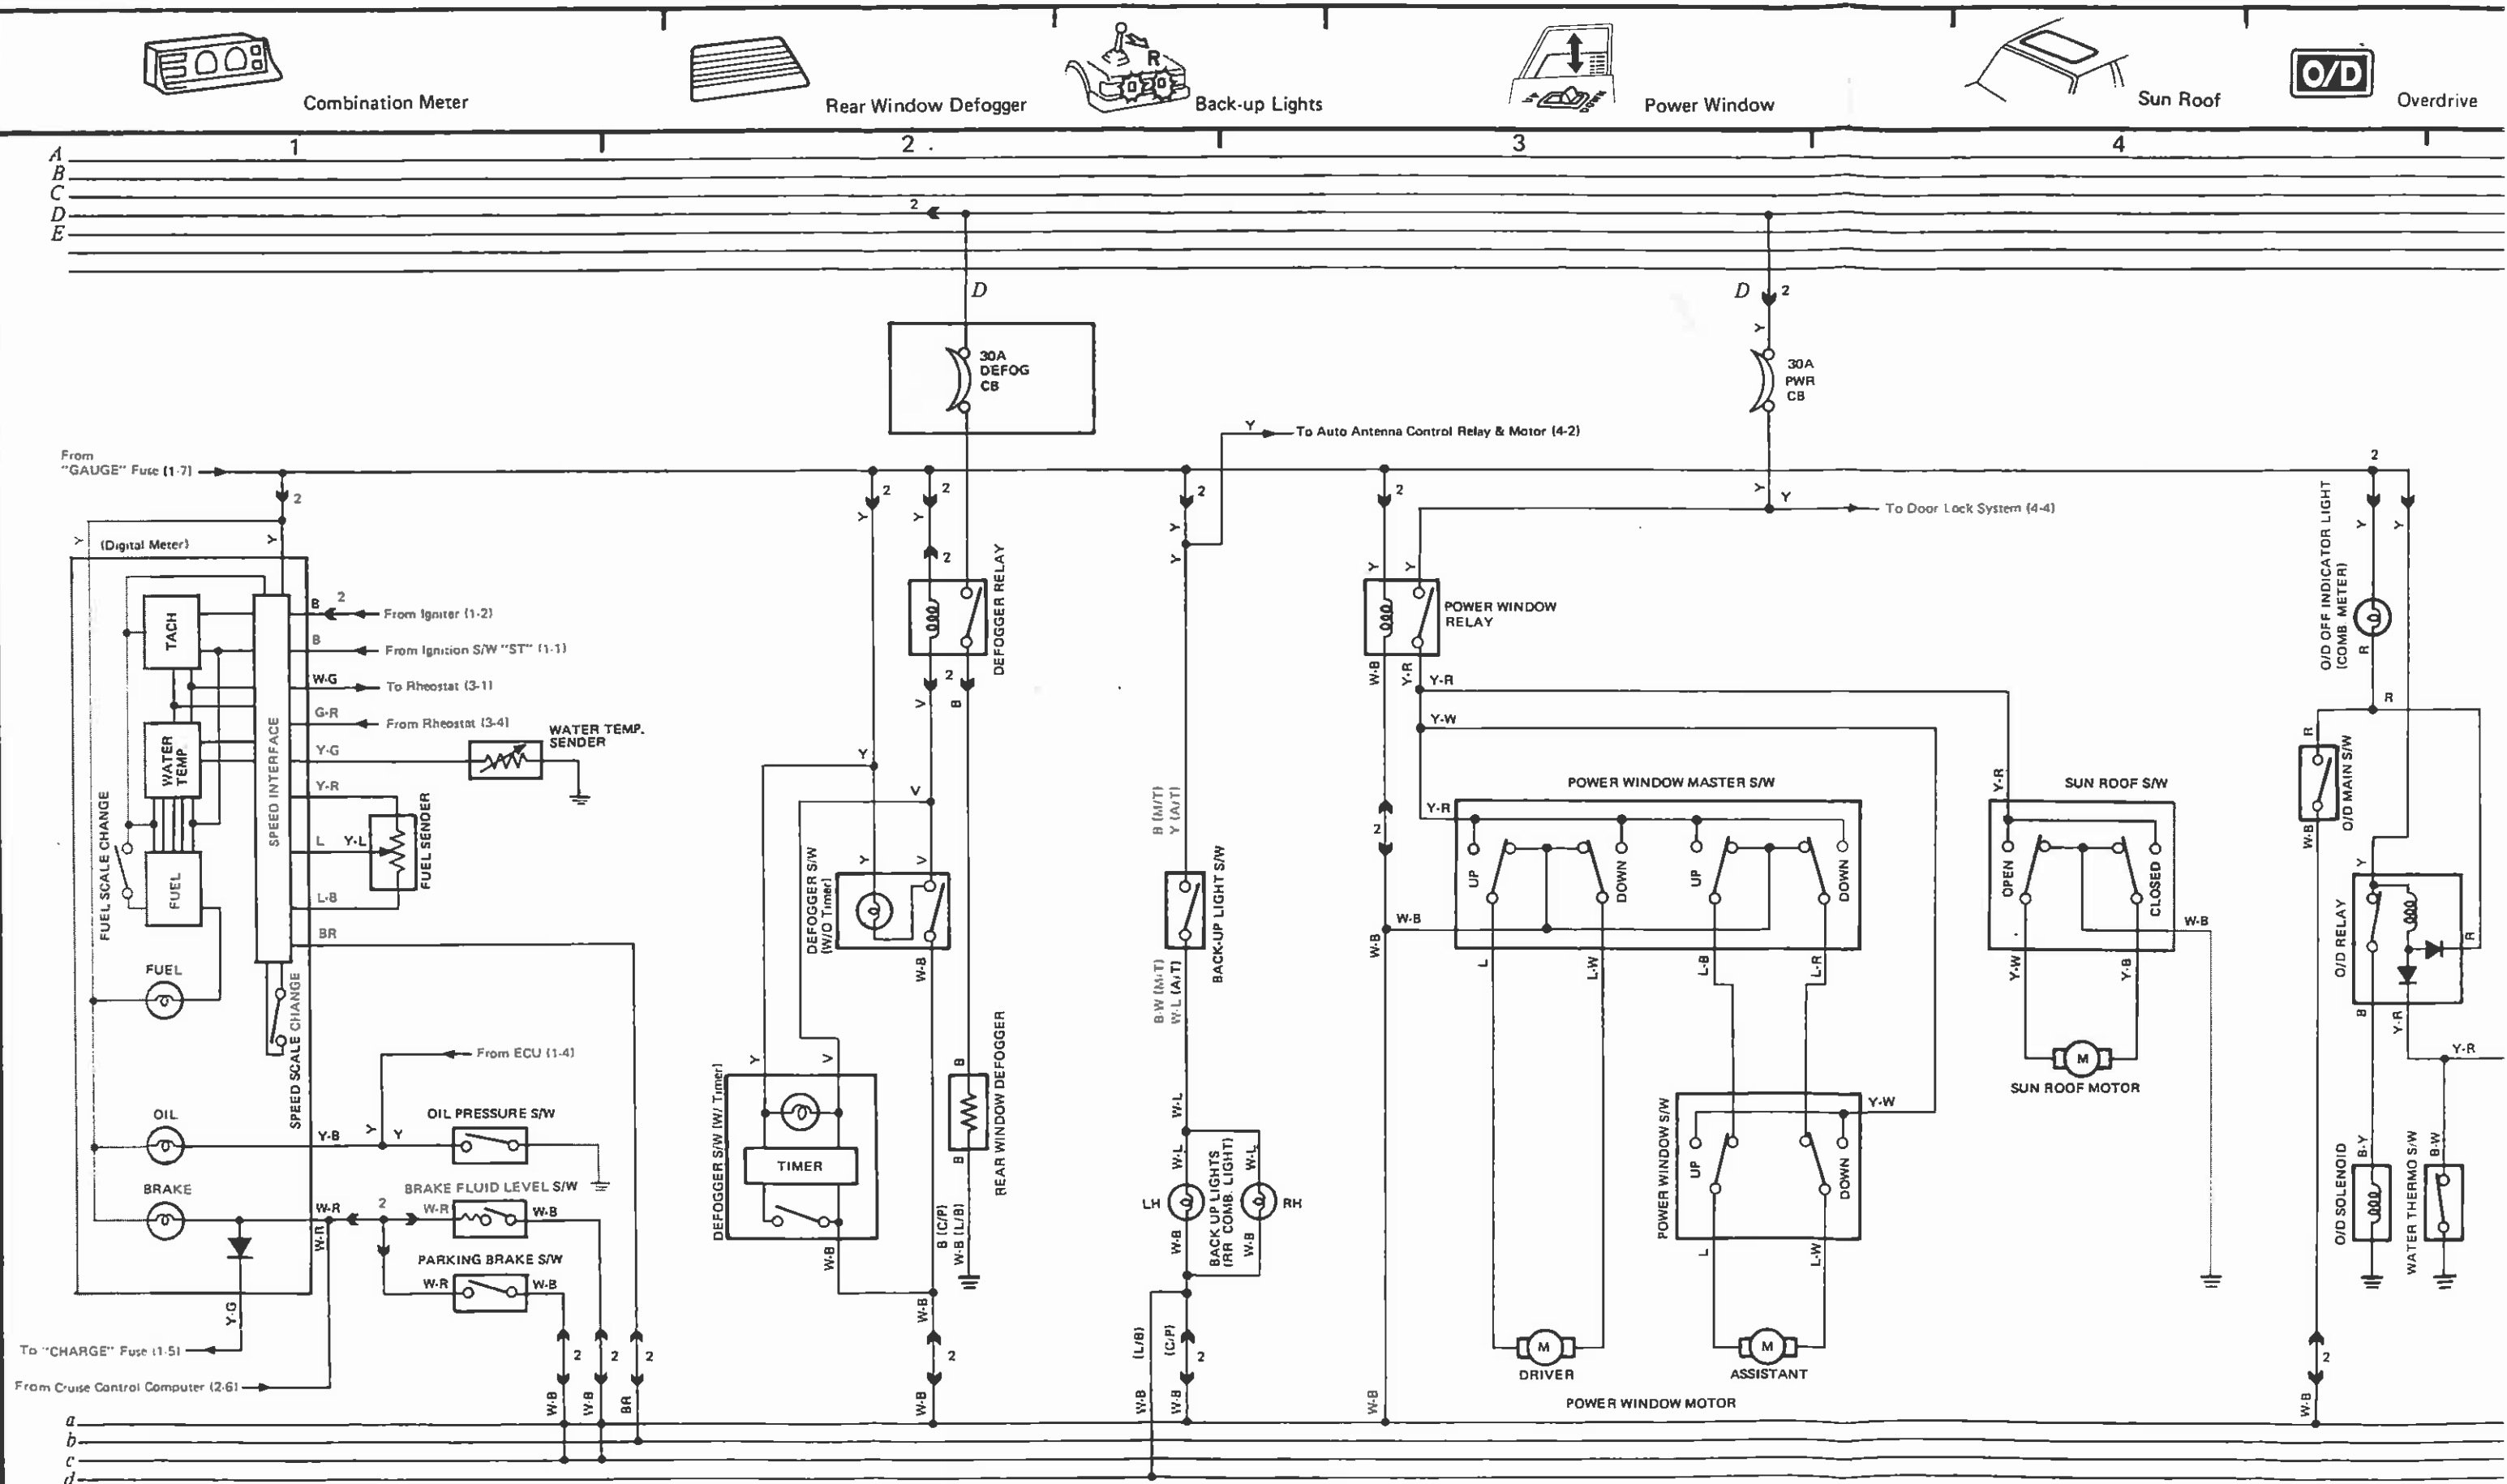


Ground points


U = Located under right front pillar

h₁ = Located under left front pillar

C = Located in right front fender

d = Located in back panel near door key cylinder

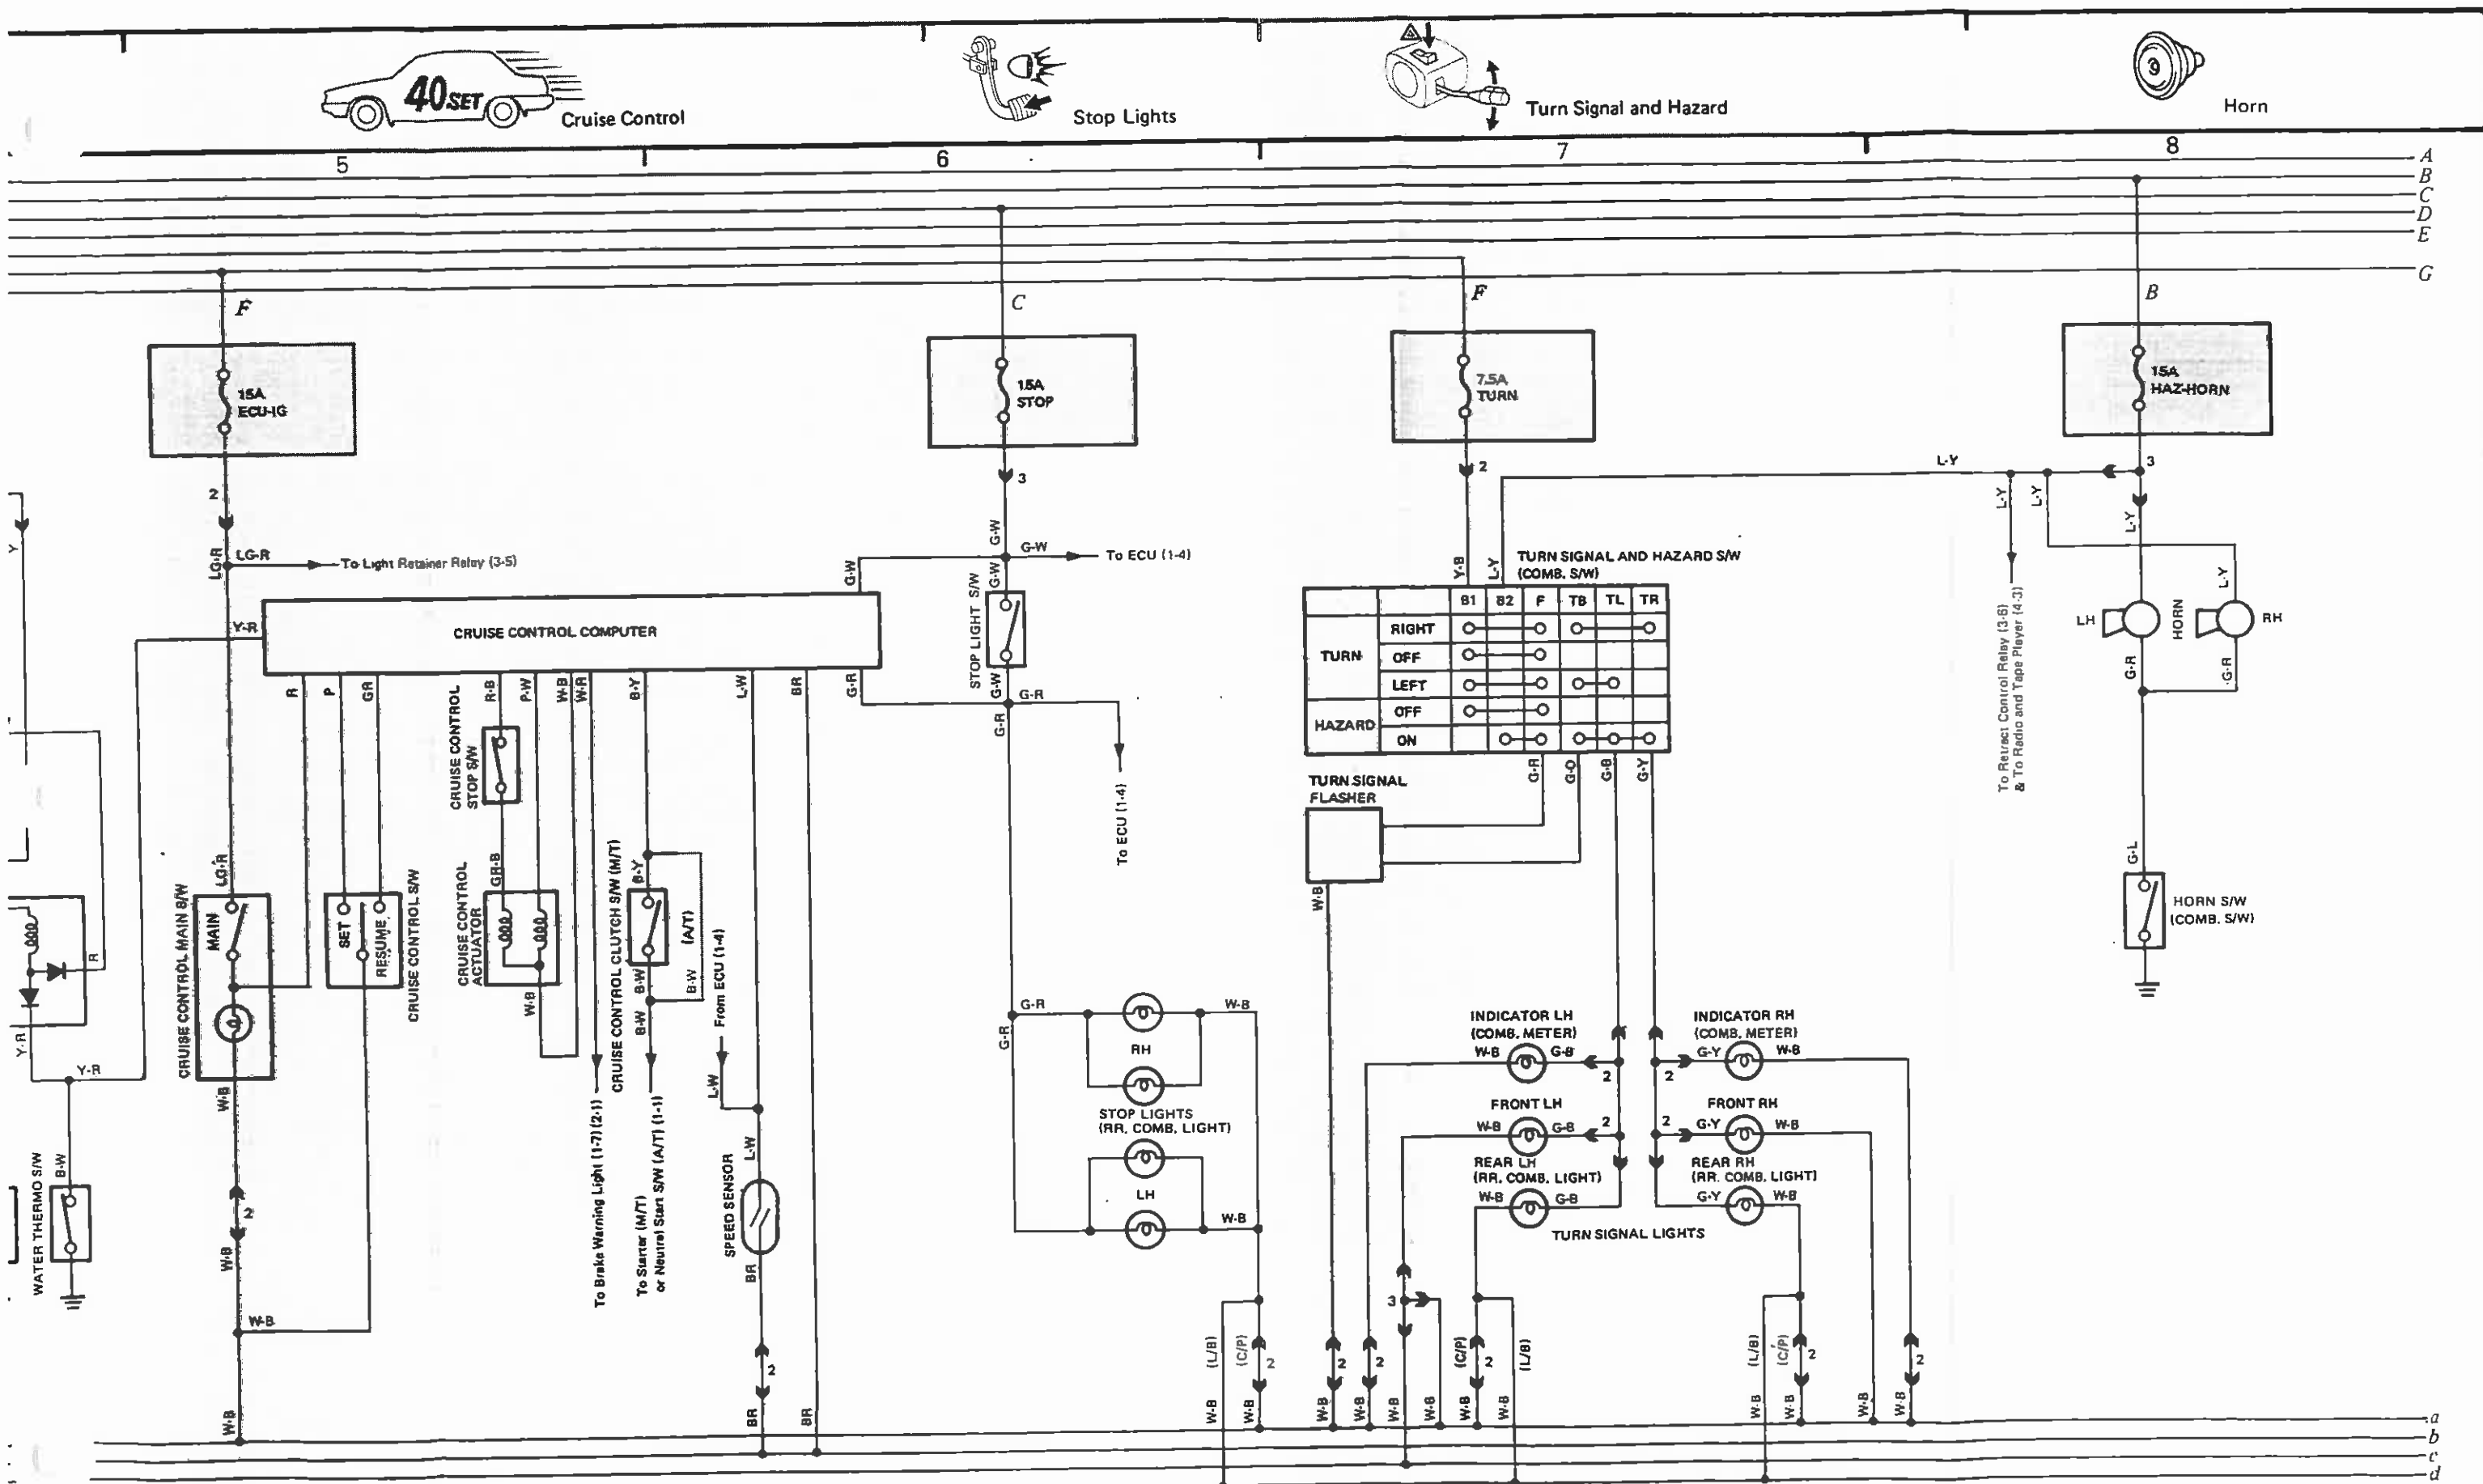

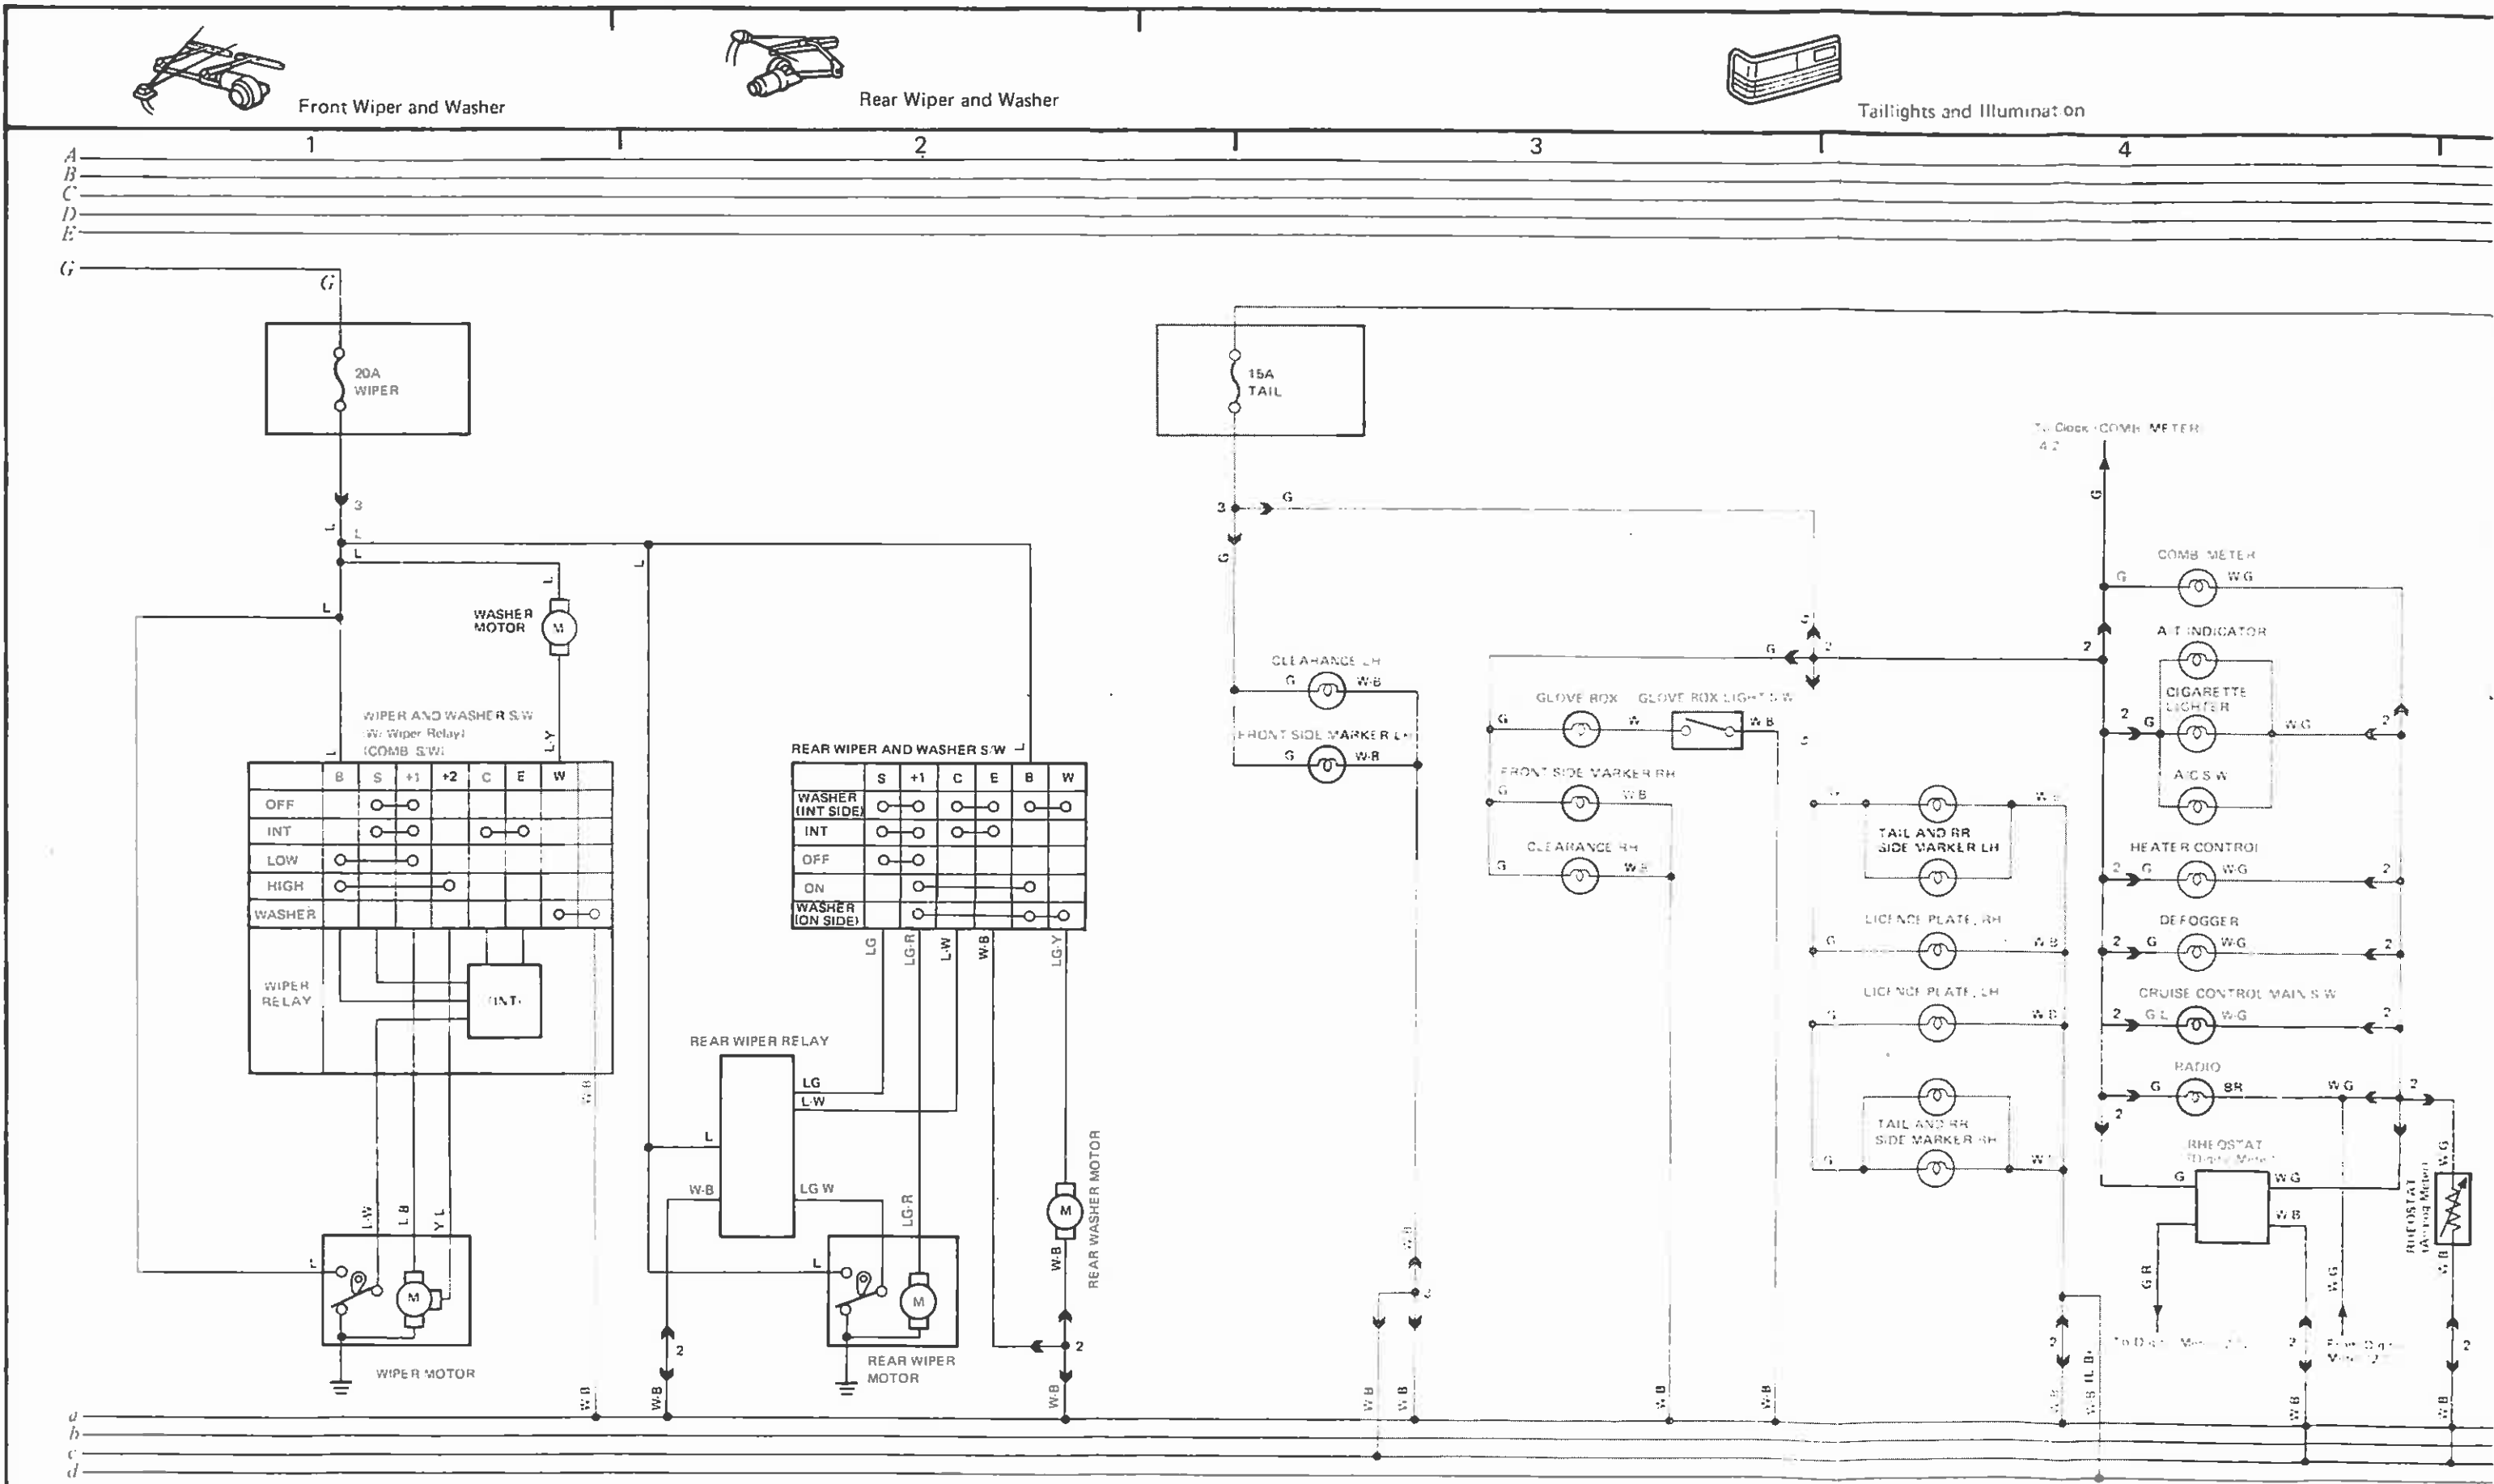

Ground points

a = Located under right front pillar

b = Located under left front pillar

c = Located in right front fender

d = Located in back panel near door key cylinder




Headlights



Interior Lights



Unlock and Seat Belt Warning

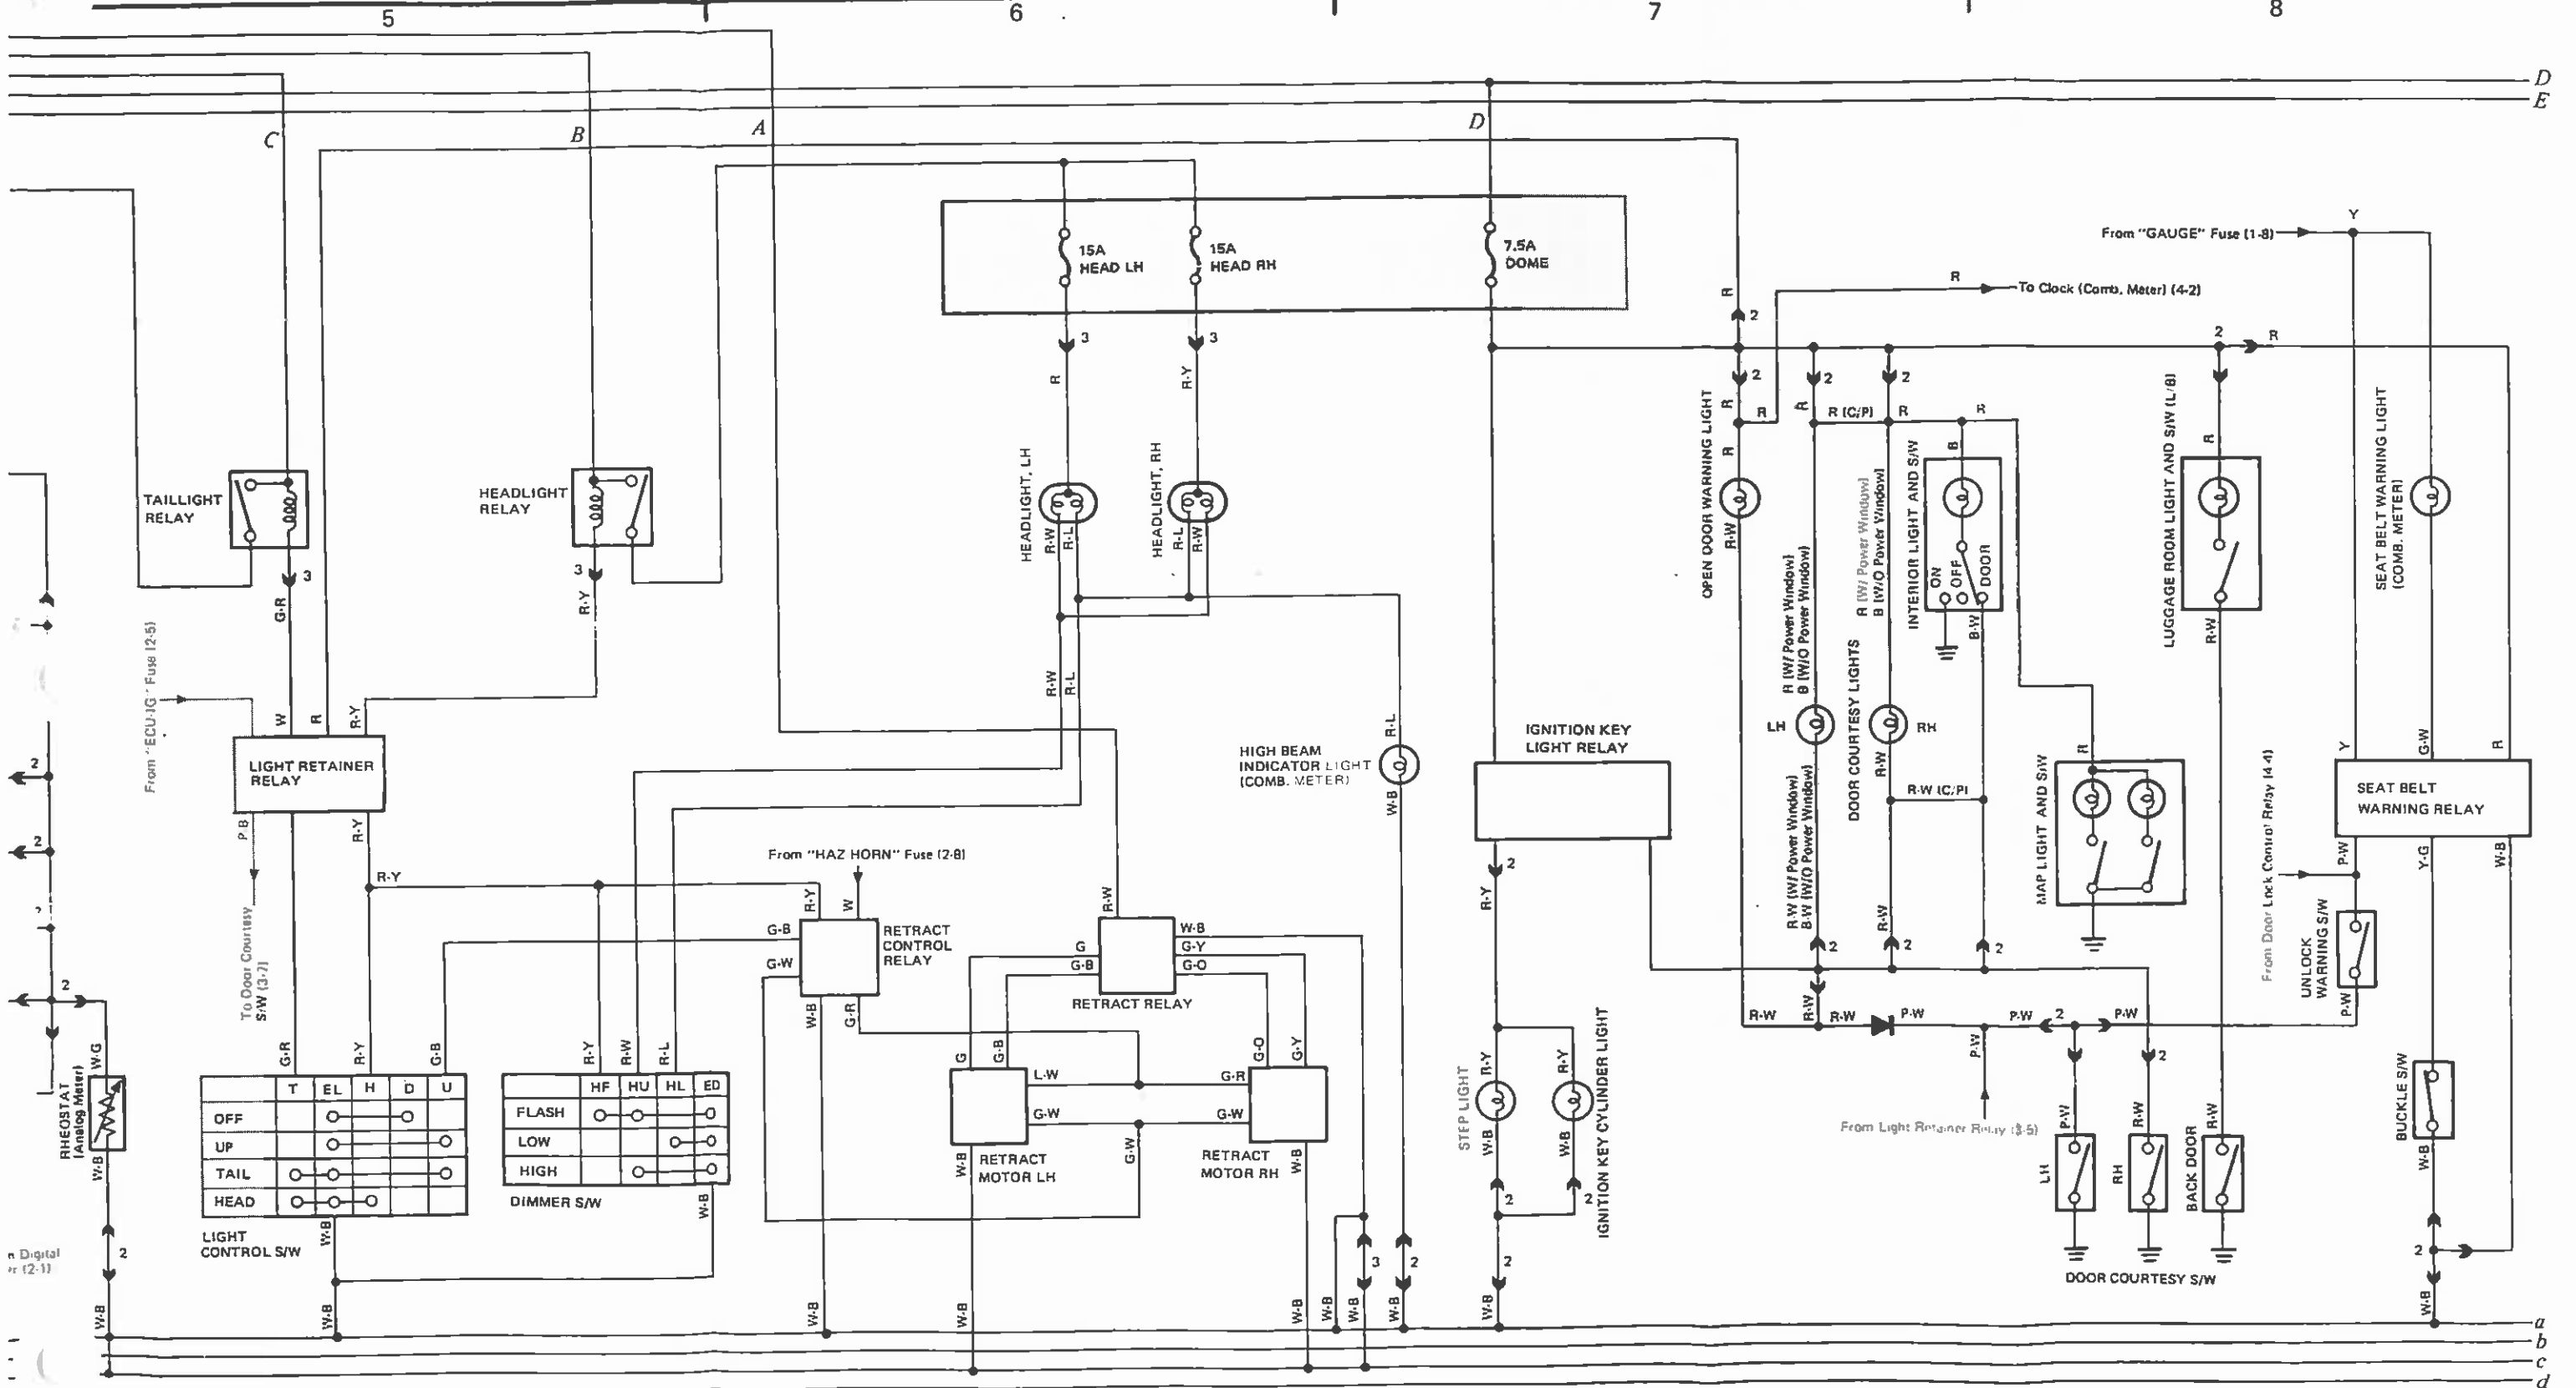

4 CELICA (Cont'd)



Remote Control Mirrors




Clock



Cigarette Lighter




Auto Antenna

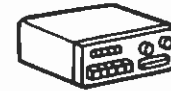

Radio and Tape Player



Door Locks

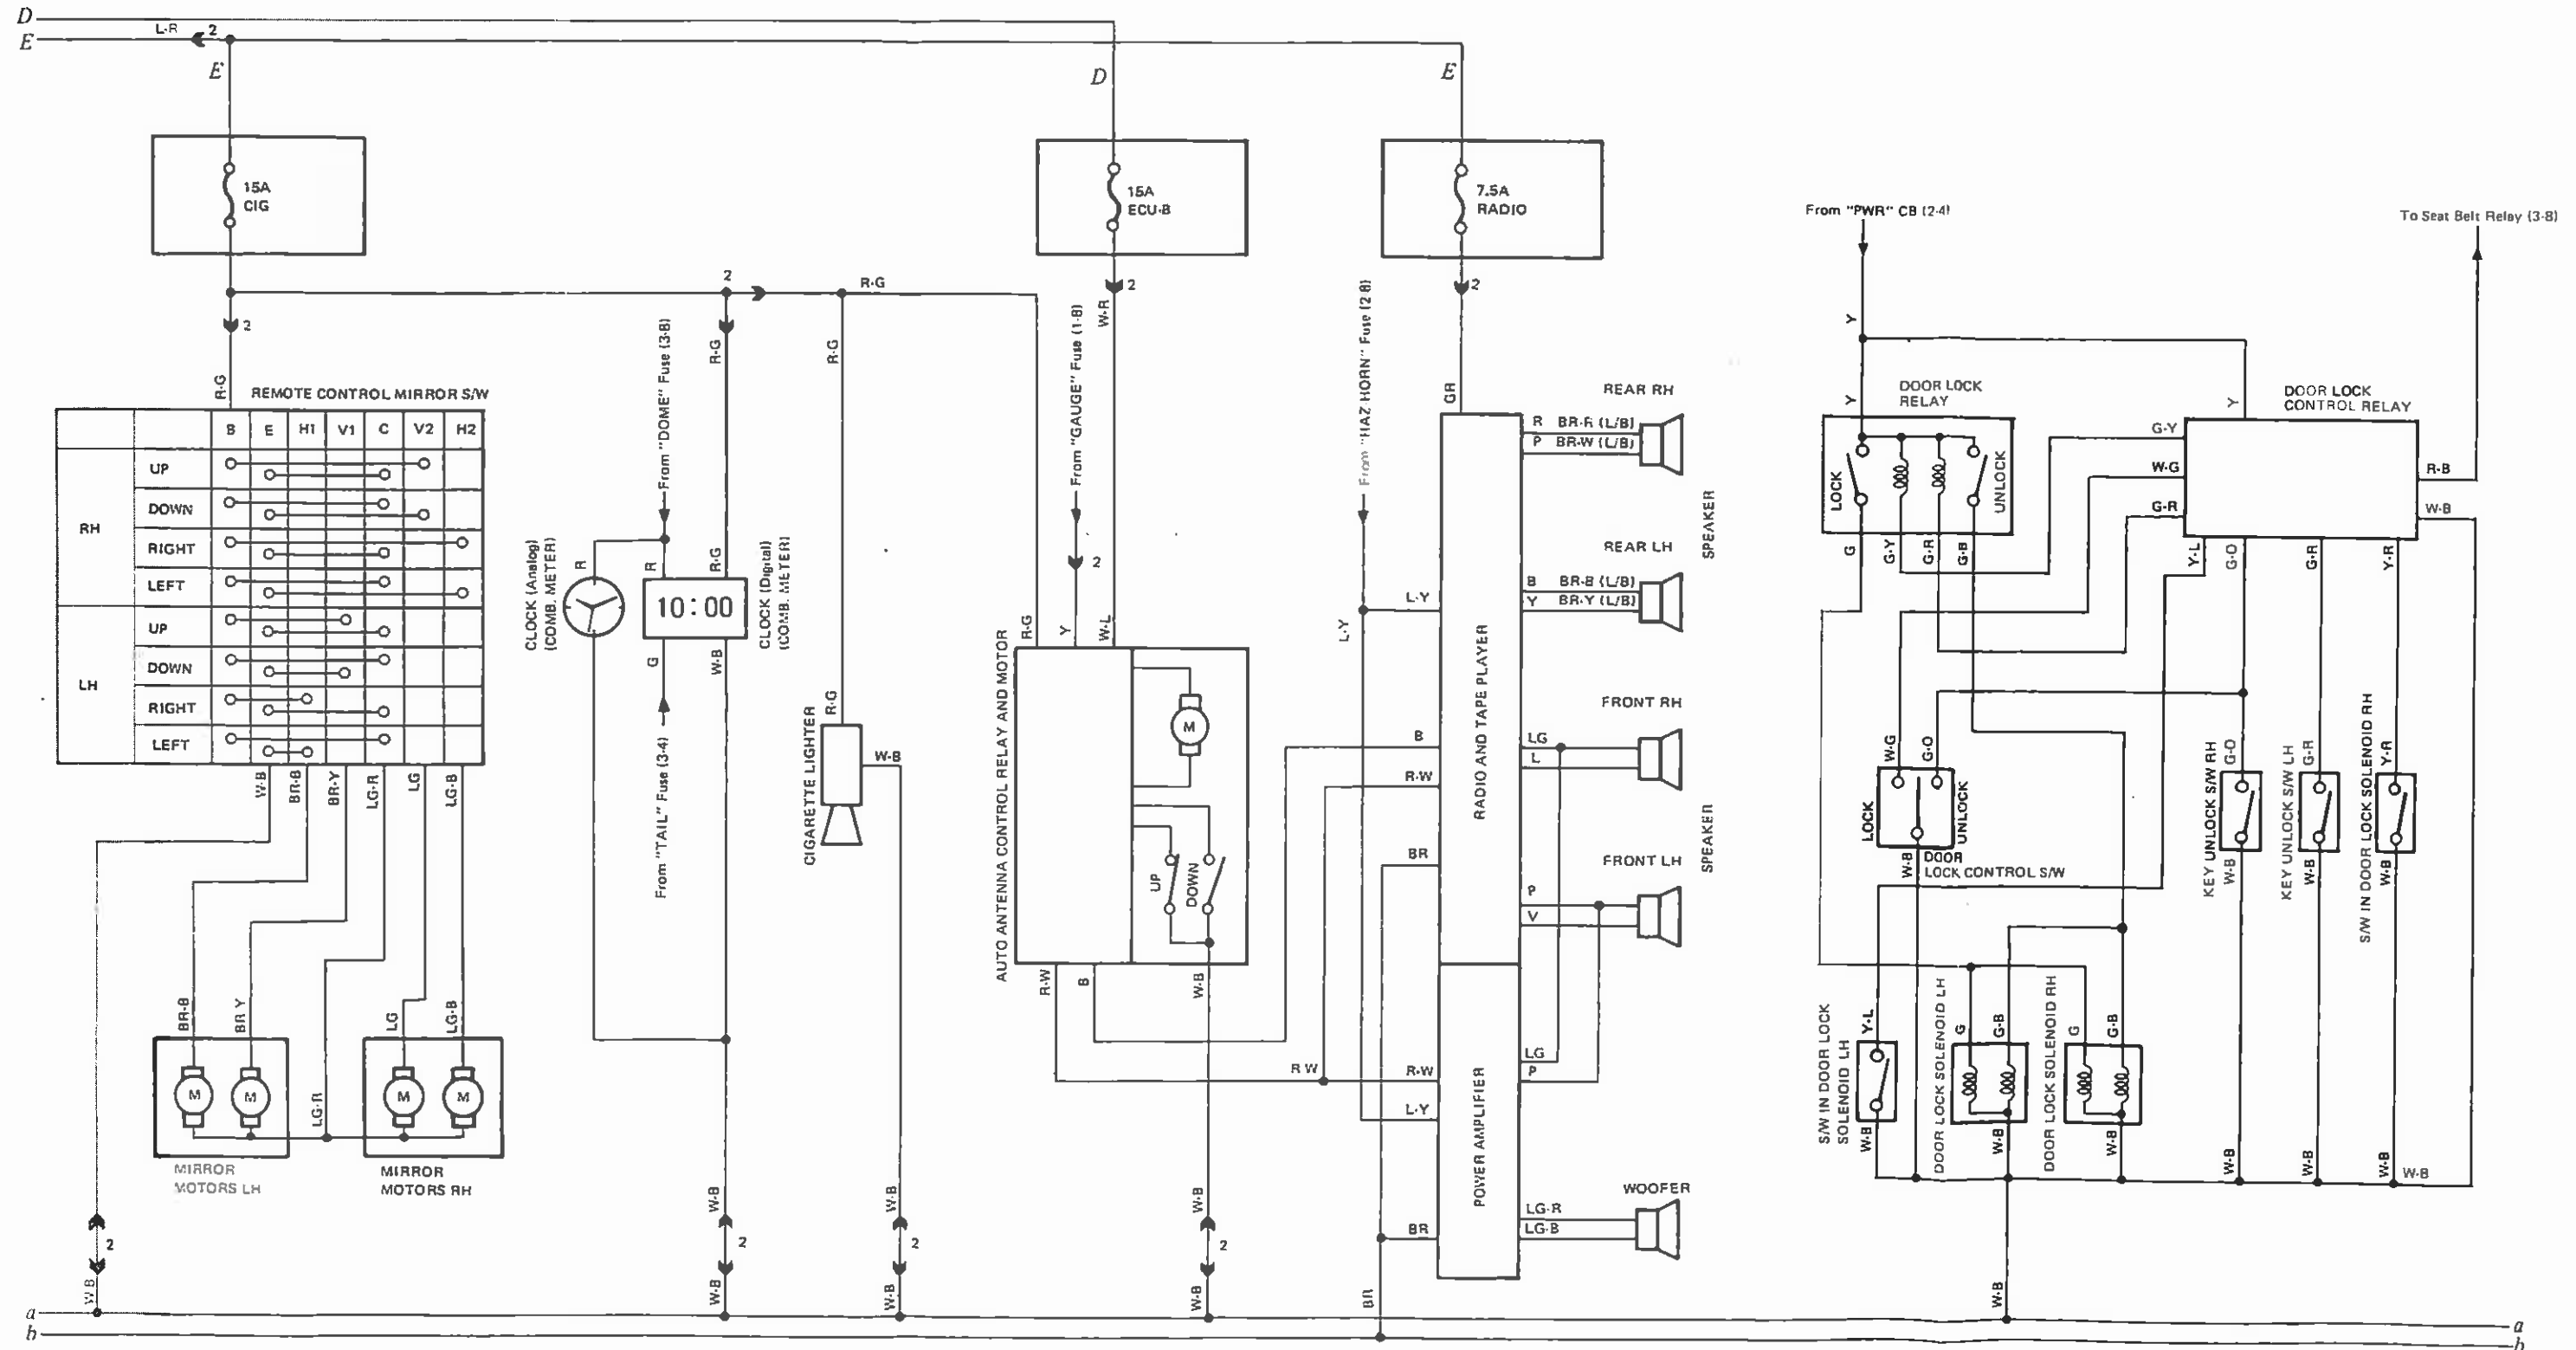

Ground points

a - Located under right front pillar

b - Located under left front pillar