


DEFOG C.B
PUSH ON

PWR C.B
PUSH ON


HEATER FUSE
IS LOCATED
BEHIND ASSIST
KICK PANEL

GAUGE 7.5A	RADIO 7.5A	ECU-B 15A	HEAD(RTR) 7.5A	IGN 7.5A
DOME 7.5A	CIG 15A	ECU-IG 15A	TURN 7.5A	FOG 15A

USE THE DESIGNATED FUSES ONLY
 UTILISEZ SEULEMENT LES FUSIBLES DESIGNES


DEFOG C.B
PUSH ON

PWR C.B
PUSH ON


HEATER FUSE
IS LOCATED
BEHIND ASSIST
KICK PANEL

GAUGE 7.5A	RADIO 7.5A	ECU-B 15A	HEAD(RTR) 7.5A	IGN 7.5A
DOME 7.5A	CIG 15A	ECU-IG 15A	TURN 7.5A	FOG 15A

USE THE DESIGNATED FUSES ONLY
 UTILISEZ SEULEMENT LES FUSIBLES DESIGNES


DEFOG C.B
PUSH ON

PWR C.B
PUSH ON


HEATER FUSE
IS LOCATED
BEHIND ASSIST
KICK PANEL

GAUGE 7.5A	RADIO 7.5A	ECU-B 15A	HEAD(RTR) 7.5A	IGN 7.5A
DOME 7.5A	CIG 15A	ECU-IG 15A	TURN 7.5A	FOG 15A

USE THE DESIGNATED FUSES ONLY
 UTILISEZ SEULEMENT LES FUSIBLES DESIGNES