



DEFOG C.B
PUSH ON

PWR C.B
PUSH ON



HEATER FUSE
IS LOCATED
BEHIND ASSIST
KICK PANEL

GAUGE 7.5A	RADIO 7.5A	ECU-B 15A	MIR-HTR 10A	IGN 7.5A
DOME 7.5A	CIG 15A	ECU-IG 15A	TURN 7.5A	FOG 20A

USE THE DESIGNATED FUSES ONLY
 UTILISEZ SEULEMENT LES FUSIBLES DESIGNES



DEFOG C.B
PUSH ON

PWR C.B
PUSH ON



HEATER FUSE
IS LOCATED
BEHIND ASSIST
KICK PANEL

GAUGE 7.5A	RADIO 7.5A	ECU-B 15A	MIR-HTR 10A	IGN 7.5A
DOME 7.5A	CIG 15A	ECU-IG 15A	TURN 7.5A	FOG 20A

USE THE DESIGNATED FUSES ONLY
 UTILISEZ SEULEMENT LES FUSIBLES DESIGNES



DEFOG C.B
PUSH ON

PWR C.B
PUSH ON



HEATER FUSE
IS LOCATED
BEHIND ASSIST
KICK PANEL

GAUGE 7.5A	RADIO 7.5A	ECU-B 15A	MIR-HTR 10A	IGN 7.5A
DOME 7.5A	CIG 15A	ECU-IG 15A	TURN 7.5A	FOG 20A

USE THE DESIGNATED FUSES ONLY
 UTILISEZ SEULEMENT LES FUSIBLES DESIGNES