 
 
 


# SST AND SSM

|                                              | <b>Page</b> |
|----------------------------------------------|-------------|
| <b>SST (SPECIAL SERVICE TOOLS) .....</b>     | <b>C-2</b>  |
| <b>SSM (SPECIAL SERVICE MATERIALS) .....</b> | <b>C-12</b> |

[illegible]

## SST (SPECIAL SERVICE TOOLS) (Cont'd)

| Section                                                                            | Classification | Part Name                                       | Part No. | Illustration | EM | FI | LU | ST | CH | CL | MT | AT | PR | FA | RA | BR | SR | BE | BO |
|------------------------------------------------------------------------------------|----------------|-------------------------------------------------|----------|--------------|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|
|    | 09286-46011    | (Injection Pump Spline Shaft Puller)            | C        |              |    |    |    | ●  | ●  |    |    |    |    |    |    |    |    |    |    |
|    | 09301-20020    | (Clutch Guide Tool)                             | A        |              |    |    |    |    |    | ●  |    |    |    |    |    |    |    |    |    |
|    | 09302-30031    | (Clutch Diaphragm Spring Height No. 3 Gauge)    | B        |              |    |    |    |    |    | ●  |    |    |    |    |    |    |    |    |    |
|    | 09303-35011    | (Input Shaft Front Bearing Puller)              | A        |              |    |    |    |    |    | ●  |    |    |    |    |    |    |    |    |    |
|  | 09304-30012    | (Input Shaft Front Bearing Replacer)            | A        |              |    |    |    |    |    | ●  |    |    |    |    |    |    |    |    |    |
|  | 09307-30010    | (Transmission Extension Housing Metal Replacer) | B        |              |    |    |    |    |    |    | ●  |    |    |    |    |    |    |    |    |
|  | 09308-00010    | (Oil Seal Puller)                               | A        |              |    |    |    |    |    |    | ●  |    |    |    | ●  |    |    |    |    |
|  | 09308-10010    | (Oil Seal Puller)                               | A        | ●            |    |    |    |    |    |    | ●  | ●  |    |    | ●  |    |    |    |    |
|  | 09312-20011    | (Transmission Gear Remover & Replacer)          | B        |              |    |    |    |    |    |    | ●  |    |    |    |    |    |    |    |    |
|  | 09313-30021    | (Detent Ball Plug Socket)                       | A        |              |    |    |    |    |    |    | ●  |    |    |    |    |    |    |    |    |
|  | 09315-00010    | (Clutch Release Bearing Remover & Replacer)     | A        |              |    |    |    |    |    | ●  |    |    |    |    |    |    |    |    |    |
|  | 09316-60010    | (Transmission & Transfer Bearing Replacer)      | B        |              |    |    |    |    |    |    | ●  |    |    |    | ●  |    |    |    |    |



## SST (SPECIAL SERVICE TOOLS) (Cont'd)

| Section                                                                             | Classification | Part Name                                              | Part No. | Illustration | EM | FI | LU | ST | CH | CL | MT | AT | PR | FA | RA | BR | SR | BE | BO |
|-------------------------------------------------------------------------------------|----------------|--------------------------------------------------------|----------|--------------|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|
|    | 09506-30011    | (Differential Drive Pinion Rear Bearing Cone Replacer) | B        |              |    |    |    |    |    |    |    |    |    |    | ●  |    |    |    |    |
|    | 09506-35010    | (Differential Drive Pinion Rear Bearing Replacer)      | B        | ●            |    |    |    |    |    |    | ●  |    |    |    |    |    |    |    |    |
|     | 09520-00031    | (Rear Axle Shaft Puller)                               | A        |              |    |    |    |    |    |    |    |    |    |    | ●  |    |    |    |    |
|     | 09520-22011    | (Differential Side Gear Shaft Puller)                  | A        |              |    |    |    |    |    |    |    |    |    |    | ●  |    |    |    |    |
|   | 09550-10012    | ("B" Replacer Set)                                     | B        |              |    |    |    |    |    |    |    |    |    |    | ●  |    |    |    |    |
|   | (09252-10010)  | (No. 1 Replacer Handle)                                |          |              |    |    |    |    |    |    |    |    |    |    | ●  |    |    |    |    |
|  | (09557-10010)  | (Differential Drive Pinion Front Bearing Replacer)     |          |              |    |    |    |    |    |    |    |    |    |    | ●  |    |    |    |    |
|  | (09558-10010)  | (Rear Axle Shaft Oil Seal Replacer)                    |          |              |    |    |    |    |    |    |    |    |    |    | ●  |    |    |    |    |
|   | 09550-22011    | (Rear Axle Bearing & Differential Tool Set)            | B        |              |    |    |    |    |    |    |    |    |    |    | ●  |    |    |    |    |
|   | (09550-00020)  | (Handle)                                               |          |              |    |    |    |    |    |    |    |    |    |    | ●  |    |    |    |    |
|  | (09550-00031)  | (Replacer)                                             |          |              |    |    |    |    |    |    |    |    |    |    | ●  |    |    |    |    |
|  | (09550-00040)  | (Replacer)                                             |          |              |    |    |    |    |    |    |    |    |    |    | ●  |    |    |    |    |

## SST (SPECIAL SERVICE TOOLS) (Cont'd)

| Section                                                                             | Classification | Part Name                                         | Part No. | Illustration | EM | FI | LU | ST | CH | CL | MT | AT | PR | FA | RA | BR | SR | BE | BO |
|-------------------------------------------------------------------------------------|----------------|---------------------------------------------------|----------|--------------|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|
|     | 09557-22022    | (Companion Flange Remover & Replacer)             | A        |              |    |    |    |    |    |    |    |    |    |    | ●  |    |    |    |    |
|     | 09608-20012    | (Front Hub & Drive Pinion Bearing Tool Set)       | B        |              |    |    |    |    |    |    | ●  |    |    |    |    |    |    |    |    |
|    | (09608-00080)  | (Replacer)                                        |          |              |    |    |    |    |    |    | ●  |    |    |    |    |    |    |    |    |
|     | (09608-03020)  | (Handle)                                          |          |              |    |    |    |    |    |    | ●  |    |    |    |    |    |    |    |    |
|   | 09608-30012    | (Front Hub & Drive Pinion Bearing Tool Set)       | B        |              |    |    |    |    |    |    |    |    |    |    |    |    | ●  |    |    |
|   | (09608-04030)  | (Front Hub Inner Bearing Cone Replacer)           |          |              |    |    |    |    |    |    |    |    |    |    |    |    | ●  |    |    |
|   | 09608-30022    | (Front Hub Bearing Replacer Set)                  | B        |              |    |    |    |    |    |    |    |    |    |    | ●  |    |    |    |    |
|   | (09550-00050)  | (Replacer)                                        |          |              |    |    |    |    |    |    |    |    |    |    | ●  |    |    |    |    |
|   | (09608-05010)  | (Handle)                                          |          |              |    |    |    |    |    |    |    |    |    |    | ●  |    |    |    |    |
|  | (09608-05040)  | (Replacer)                                        |          |              |    |    |    |    |    |    |    |    |    |    | ●  |    |    |    |    |
|   | 09608-35014    | (Axle Hub & Drive Pinion Bearing Tool Set)        | B        |              |    |    |    |    |    |    | ●  |    |    |    | ●  |    |    |    |    |
|   | (09608-06020)  | (Handle)                                          |          |              |    |    |    |    |    |    | ●  |    |    |    | ●  |    |    |    |    |
|  |                | (Front Hub Outer & Drive Pinion Bearing Replacer) |          |              |    |    |    |    |    |    | ●  |    |    |    |    |    |    |    |    |

[illegible]

## SST (SPECIAL SERVICE TOOLS) (Cont'd)

| Section | Classification | Part Name | Part No.      | Illustration                           | EM | FI | LU | ST | CH | CL | MT | AT | PR | FA | RA | BR | SR | BE | BO |
|---------|----------------|-----------|---------------|----------------------------------------|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|
|         |                |           |               |                                        |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |
|         |                |           | 09630-24013   | (Steering Rack Oil Seal Tool Set)      | B  |    |    |    |    |    |    |    |    |    |    |    | ●  |    |    |
|         |                |           | (09620-24010) | (Valve Cap Oil Seal Remover)           |    |    |    |    |    |    |    |    |    |    |    |    | ●  |    |    |
|         |                |           | (09631-24020) | (Piston Ring Guide)                    |    |    |    |    |    |    |    |    |    |    |    |    | ●  |    |    |
|         |                |           | (09631-24030) | (Piston Ring Tool)                     |    |    |    |    |    |    |    |    |    |    |    |    | ●  |    |    |
|         |                |           | (09631-24041) | (Ring)                                 |    |    |    |    |    |    |    |    |    |    |    |    | ●  |    |    |
|         |                |           | (09631-24050) | (Ring Adapter)                         |    |    |    |    |    |    |    |    |    |    |    |    | ●  |    |    |
|         |                |           | (09631-24060) | (Cylinder End Stopper Nut Wrench)      |    |    |    |    |    |    |    |    |    |    |    |    | ●  |    |    |
|         |                |           | (09631-24070) | (Oil Seal Replacer)                    |    |    |    |    |    |    |    |    |    |    |    |    | ●  |    |    |
|         |                |           | 09710-22041   | (Rear Suspension Bushing Tool Set)     | B  |    |    |    |    |    |    |    |    |    |    | ●  |    |    |    |
|         |                |           | 09720-00011   | (Shock Absorber Overhaul Tool Set)     | B  |    |    |    |    |    |    |    |    | ●  |    |    |    |    |    |
|         |                |           | (09721-00071) | (Front Shock Absorber Ring Nut Wrench) |    |    |    |    |    |    |    |    |    | ●  |    |    |    |    |    |
|         |                |           | (09721-00080) | (Front Shock Absorber Stand)           |    |    |    |    |    |    |    |    |    | ●  |    |    |    |    |    |

## 522

[illegible]

## SST (SPECIAL SERVICE TOOLS) (Cont'd)

| Section | Classification | Part Name | Part No. | Illustration                                                                       | EM          | FI                           | LU | ST | CH | CL | MT | AT | PR | FA | RA | BR | SR | BE | BO |
|---------|----------------|-----------|----------|------------------------------------------------------------------------------------|-------------|------------------------------|----|----|----|----|----|----|----|----|----|----|----|----|----|
|         |                |           |          |    | 09842-30050 | (Wiring "A" EFI Inspection)  | B  | ●  |    |    |    |    |    |    |    |    |    |    |    |
|         |                |           |          |     | 09921-00010 | (Spring Tension Tool)        | A  |    |    |    | ●  | ●  |    |    |    |    |    |    |    |
|         |                |           |          |    | 09950-00020 | (Bearing Remover)            | B  |    |    |    | ●  |    |    |    | ●  |    |    |    |    |
|         |                |           |          |    | 09950-00030 | (Bearing Remover Attachment) | B  |    |    |    |    |    |    |    | ●  |    |    |    |    |
|         |                |           |          |   | 09950-20016 | (Universal Puller)           | A  | ●  |    |    | ●  |    |    |    | ●  |    |    |    |    |
|         |                |           |          |  | 09992-00093 | (Oil Pressure Gauge Set)     | A  |    |    |    |    | ●  |    |    |    |    |    |    |    |