

Basic Diagnostic Procedure

BODY CONTROL SYSTEM (DIAGNOSTICS)

1. Basic Diagnostic Procedure

A: PROCEDURE

CAUTION:

- **Subaru Select Monitor is required for reading DTC, performing diagnosis and reading current data.**
- **Remove foreign matter (dust, water, oil, etc.) from the body integrated unit connector during removal and installation.**
- **Registration of immobilizer may be needed after the replacement of control modules, etc. For detailed procedure, refer to the “REGISTRATION MANUAL FOR IMMOBILIZER”.**

NOTE:

- To check harness for open or short circuits, shake the suspected trouble spot or connector.
- Check List for Interview <Ref. to BC(diag)-3, Check List for Interview.>

Step	Check	Yes	No
1 CHECK PRE-INSPECTION. Ask the customer when and how the trouble occurred using the interview check list. <Ref. to BC(diag)-3, Check List for Interview.>	Did you interview the customer?	Go to step 2.	Interview the customer.
2 BASIC INSPECTION. Check components which might affect body control. <Ref. to BC(diag)-4, INSPECTION, General Description.>	Is the component that might influence the body control problem normal?	Go to step 3.	Repair or replace each component.
3 CHECK DTC. 1) Read the DTC. <Ref. to BC(diag)-10, OPERATION, Read Diagnostic Trouble Code (DTC).> NOTE: If the communication function of the Subaru Select Monitor cannot be executed properly, check the communication circuit. <Ref. to LAN(w/o HEV)(diag)-10, COMMUNICATION FOR INITIALIZING IMPOSSIBLE, Subaru Select Monitor.> <Ref. to LAN(HEV)(diag)-10, COMMUNICATION FOR INITIALIZING IMPOSSIBLE, Subaru Select Monitor.> 2) Record all DTCs, time stamp and freeze frame data. NOTE: For time stamp, refer to “LAN SYSTEM”. <Ref. to LAN(w/o HEV)(diag)-6, TIME STAMP, CAUTION, General Description.> <Ref. to LAN(HEV)(diag)-6, TIME STAMP, CAUTION, General Description.>	Is DTC displayed on Subaru Select Monitor?	Go to step 5.	Go to step 4.
4 PERFORM GENERAL DIAGNOSTICS. Inspect using the “General Diagnostic Table”. <Ref. to BC(diag)-45, General Diagnostic Table.>	Is result of inspection OK?	The body control system is normal.	Go to step 5.
5 PERFORM DIAGNOSIS. 1) Correct the cause of trouble. 2) Perform the Clear Memory Mode. <Ref. to BC(diag)-11, OPERATION, Clear Memory Mode.> 3) Read the DTC. <Ref. to BC(diag)-10, OPERATION, Read Diagnostic Trouble Code (DTC).>	Is DTC displayed on Subaru Select Monitor?	Repeat step 5 until DTC is not shown.	Finish the diagnosis.