

General Description

BODY CONTROL SYSTEM (DIAGNOSTICS)

3. General Description

A: CAUTION

1. SRS AIRBAG SYSTEM

Airbag system wiring harness is routed near the body integrated unit and body control circuits.

CAUTION:

- Do not use the electrical test equipment on all airbag system wiring harnesses and connectors.
- Be careful not to damage the airbag system wiring harness, when servicing the body control system.

B: INSPECTION

Before performing diagnosis, check the following items which might affect body control system problems.

1) Check the battery. <Ref. to SC(H4DO(w/o HEV))-52, Battery.>

NOTE:

For HEV model, check the 12 volt auxiliary battery. <Ref. to SC(H4DO(HEV))-39, Battery.>

2) Check the fuse condition.

Make sure that ampere of the fuse is setting value, and it is not blown out.

3) Check the connecting condition of harness and harness connector.

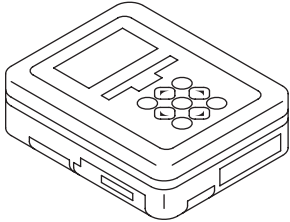
4) Confirm settings of body integrated unit are corresponded to vehicle equipment. <Ref. to BC(diag)-21, OPERATION, Registration Body Integrated Unit.>

5) Make sure that the User Customizing of the body integrated unit matches the vehicle equipment. <Ref. to BC(diag)-18, OPERATION, User Customizing.>

6) Confirm "Factory initial setting" of body integrated unit registrations is "Market".

C: PREPARATION TOOL

1. SPECIAL TOOL

ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
 ST1B022XU0	1B022XU0	SUBARU SELECT MONITOR III KIT	Used for setting of each function and troubleshooting for electrical system. NOTE: For detailed operation procedures of SUBARU SELECT MONITOR III, refer to "PC application help for Subaru Select Monitor".

2. GENERAL TOOL

TOOL NAME	REMARKS
Circuit tester	Used for measuring resistance, voltage and current.