


2. Relay and Fuse

A: LOCATION

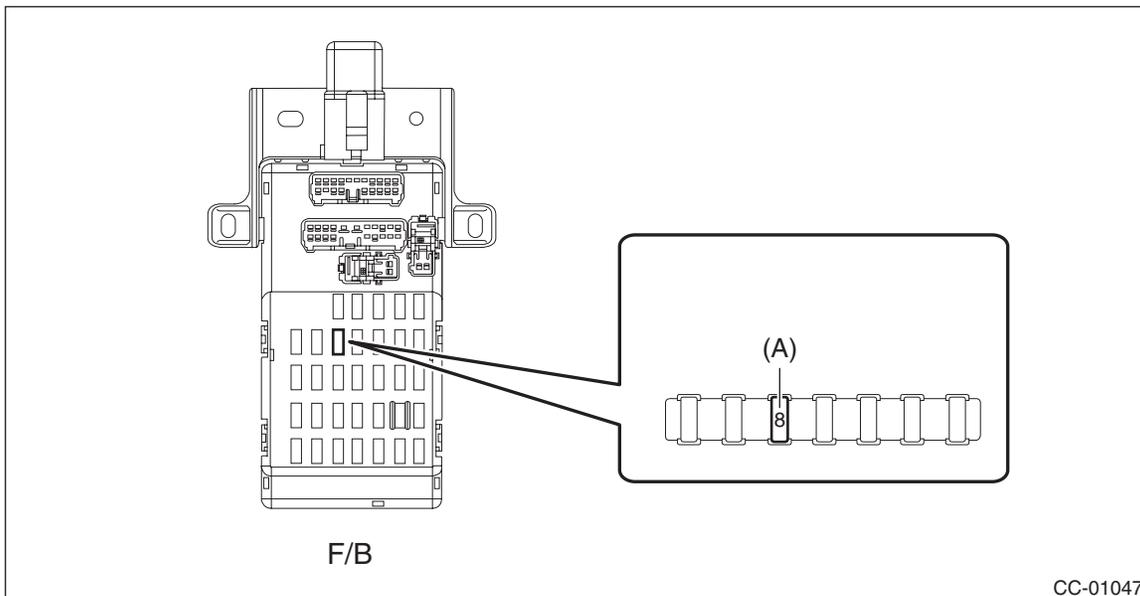

CC-01047

Relay & fuse box	Fuse 15 A (stop light and brake switch, brake relay)	(A)
------------------	------------------------------------------------------	-----

NOTE:

For other related fuses, refer to the wiring diagram.

- Gasoline engine model: <Ref. to WI(w/o HEV)-16, Power Supply Circuit.>
- HEV model: <Ref. to WI(HEV)-21, Power Supply Circuit.>

B: INSPECTION

1. CHECK FUSE

- 1) Remove the fuse and inspect visually.
- 2) If the fuse is blown out, replace the fuse.

NOTE:

If the fuse is blown again, check the system wiring harness.