

4. Cruise Control Module

A: NOTE

Cruise control system is controlled by the following modules.

- Engine control module (ECM)
- Hybrid powertrain control module (HEV model)

B: REMOVAL

For removal, refer to the removal procedure of each module.

- Engine control module (ECM)

Gasoline engine model: <Ref. to FU(H4DO(w/o HEV))-100, REMOVAL, Engine Control Module (ECM).>

HEV model: <Ref. to FU(H4DO(HEV))-85, REMOVAL, Engine Control Module (ECM).>

- Hybrid powertrain control module (HEV model): <Ref. to HEV-37, NOTE, Hybrid Powertrain Control Module.>

C: INSTALLATION

For installation, refer to the installation procedure of each module.

- Engine control module (ECM)

Gasoline engine model: <Ref. to FU(H4DO(w/o HEV))-101, INSTALLATION, Engine Control Module (ECM).>

HEV model: <Ref. to FU(H4DO(HEV))-87, INSTALLATION, Engine Control Module (ECM).>

- Hybrid powertrain control module (HEV model): <Ref. to HEV-37, NOTE, Hybrid Powertrain Control Module.>