
3. Electrical Component Location

A: LOCATION

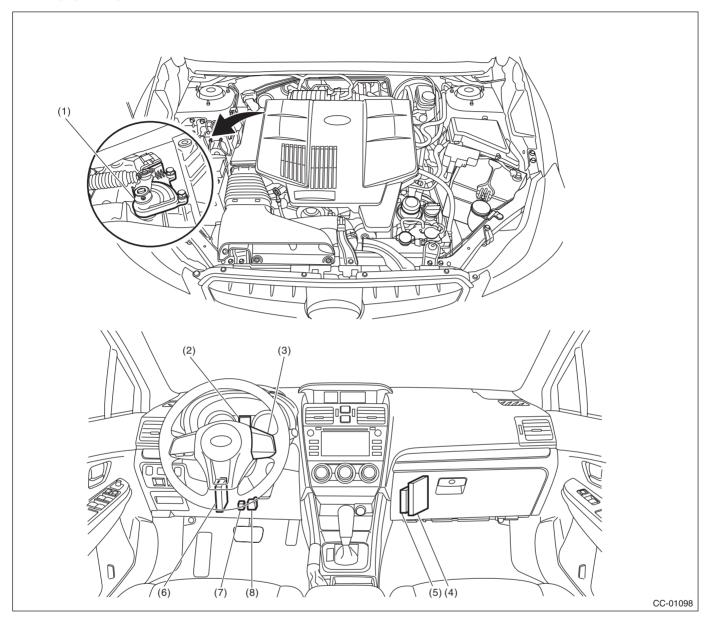

- (1) Inhibitor switch
- (2) Cruise indicator light and cruise set indicator light
- (3) Cruise control command switch
- (4) Engine control module (ECM)
- (5) Hybrid powertrain control module (HPCM)
- (6) Transmission control module (TCM)
- (7) Brake stroke sensor (brake pedal ASSY)
- (8) Stop light and brake switch

NOTE:

Brake stroke sensor cannot be disassembled from the brake pedal assembly.