

### 4. Engine Control Module (ECM) I/O Signal

#### A: ELECTRICAL SPECIFICATION

For details on the input/output signals for the engine control module, refer to ENGINE (DIAGNOSTICS). <Ref. to EN(H4DO w/o HEV)(diag)-19, ELECTRICAL SPECIFICATION, Engine Control Module (ECM) I/O Signal.>

#### B: WIRING DIAGRAM

Refer to “Cruise Control System” in the wiring diagram. <Ref. to WI(w/o HEV)-86, WIRING DIAGRAM, Cruise Control System.>