


Front Under Cover

EXTERIOR/INTERIOR TRIM

2. Front Under Cover

A: REMOVAL

- 1) Lift up the vehicle.
- 2) Remove the bolts and clips, and remove the under cover - front.

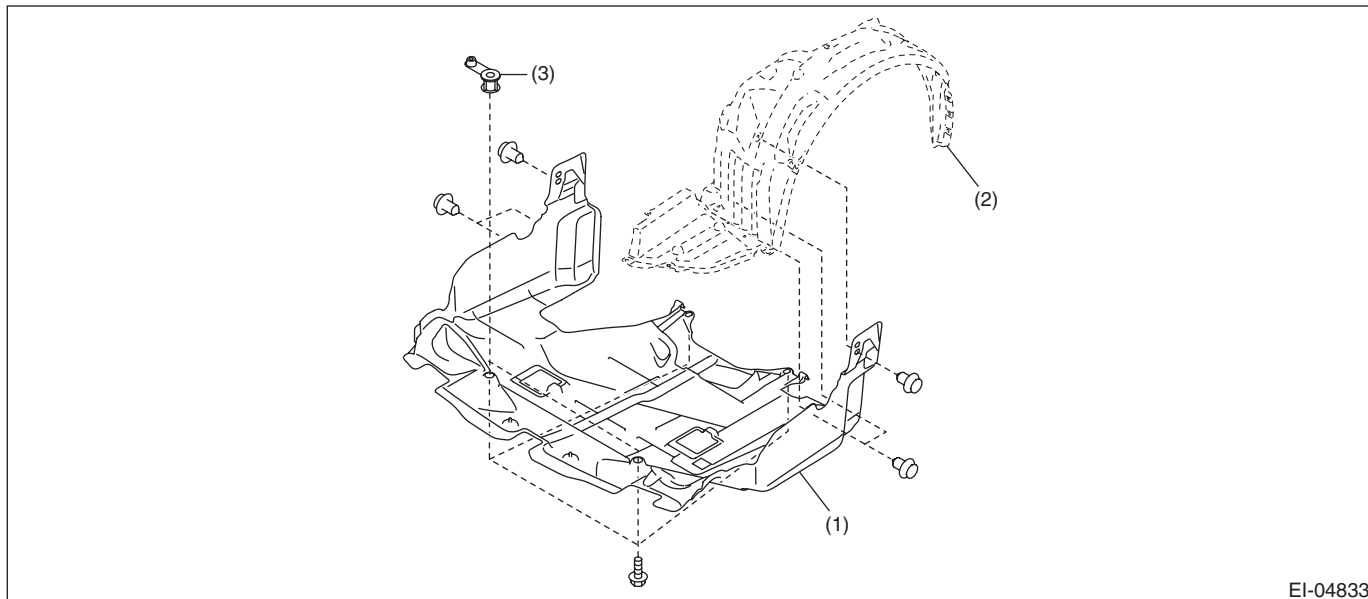

EI-04833

(1) Under cover - front


(2) Mud guard - front

(3) Spacer - under cover (XV model)

B: INSTALLATION

CAUTION:

Install so that the front end of the under cover (b) comes inside the bumper face - front (a), and the front end of the mud guard (c) comes outside the bumper face - front (a).

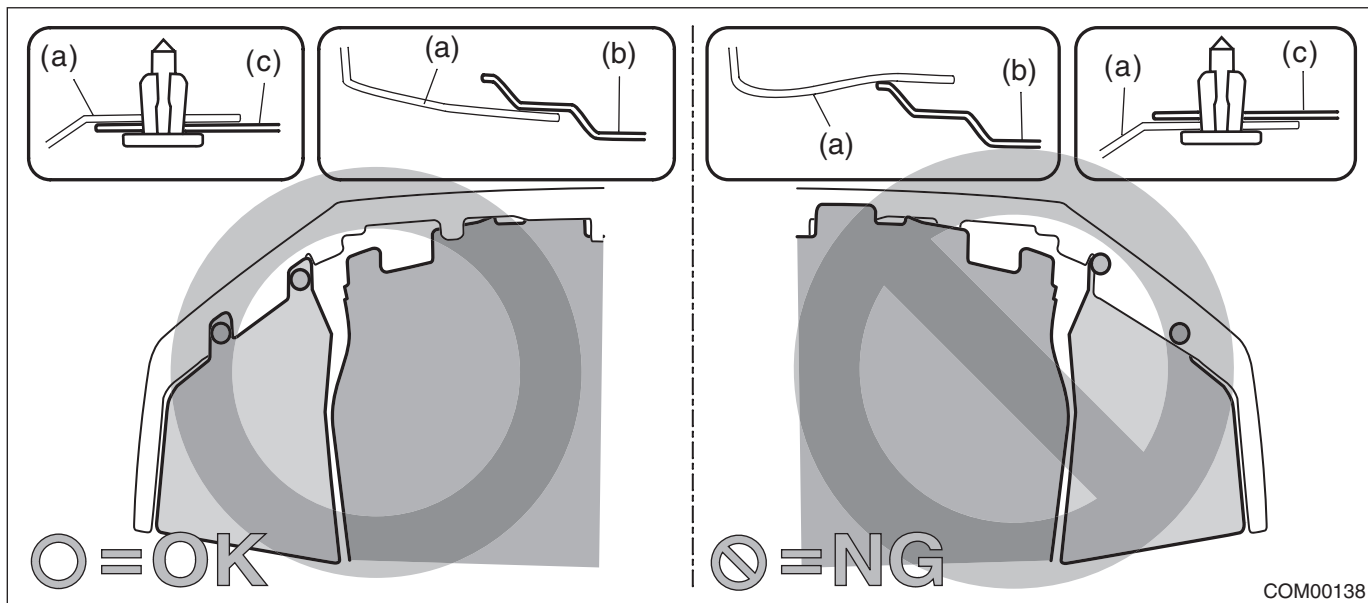

COM00138

Install each part in the reverse order of removal.

Tightening torque:

18 N·m (1.84 kgf·m, 13.3 ft·lb)