

5. Fuel Tank Protector

A: NOTE

- Refer to “FUEL INJECTION” section for removal and installation procedure of the fuel tank protector. (Gasoline engine model) <Ref. to FU(H4DO(w/o HEV))-114, Fuel Tank Protector.>
- Refer to “FUEL INJECTION” section for removal and installation procedure of the fuel tank protector. (HEV model) <Ref. to FU(H4DO(HEV))-104, Fuel Tank Protector.>