

## 14. Roof Spoiler

### A: REMOVAL

1) Disconnect the ground cable from battery. <Ref. to NT-5, BATTERY, NOTE, Note.>

#### NOTE:

For the 12 volt engine restart battery of HEV model, disconnect the ground terminal from 12V engine restart battery sensor.

2) Remove the trim panel - rear gate UPR. <Ref. to EI-158, REMOVAL, Rear Gate Trim.>


3) Remove the roof spoiler assembly.

(1) Disconnect the connector of high-mounted stop light.

(2) Remove the caps, and remove the bolts.

(3) Remove the nuts.

(4) Remove the nuts, and then remove the roof spoiler assembly.

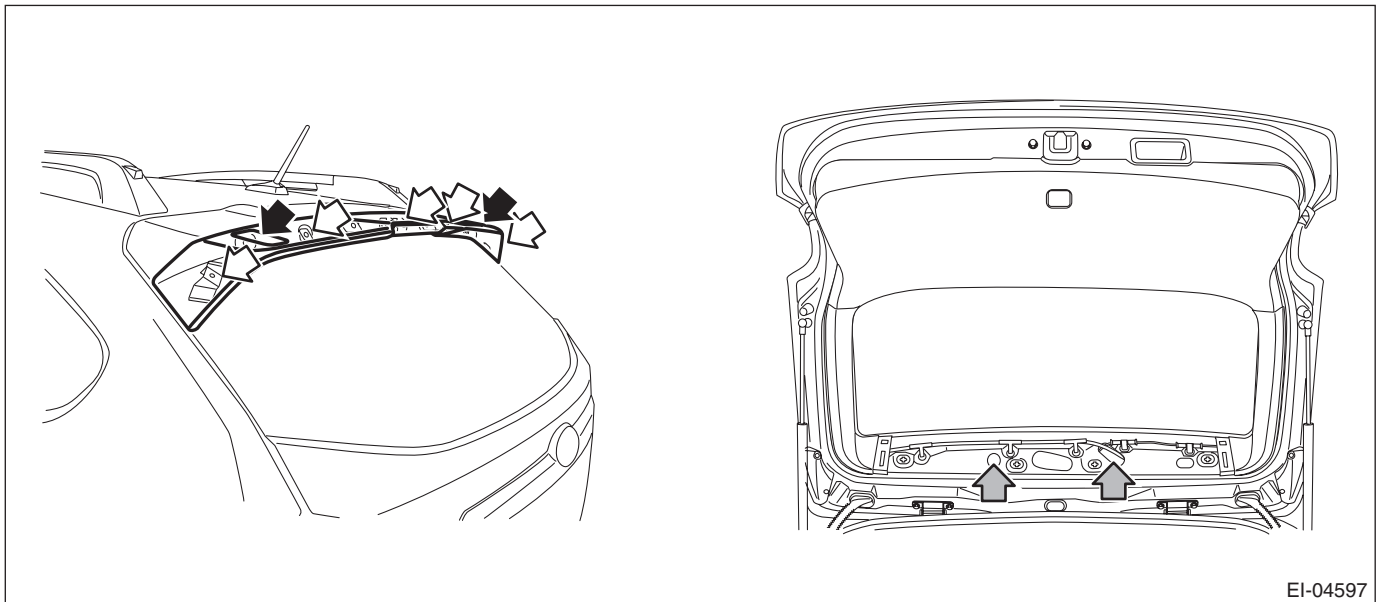

EI-04597

### B: INSTALLATION

#### CAUTION:

- Make sure that packings are attached on the clips of the roof spoiler assembly. If a gasket is not attached, water leakage may occur.
- Make sure the bolt is tightened securely because improper installation may cause the water leakage.

1) Install the roof spoiler assembly.

#### Tightening torque:

**7.5 N·m (0.76 kgf-m, 5.5 ft-lb)**

2) Connect the connector of high-mounted stop light.

3) Install the trim panel - rear gate UPR. <Ref. to EI-159, INSTALLATION, Rear Gate Trim.>

4) Connect the ground terminal to battery sensor. <Ref. to NT-5, BATTERY, NOTE, Note.>