

17. Glove Box


A: REMOVAL

NOTE:

Refer to "Security and Locks" section for key cylinder replacement. <Ref. to SL-79, GLOVE BOX LID, REPLACEMENT, Key Lock Cylinders.>

1) Remove the pocket assembly.


- (1) Attach the protective tape (a) to the panel center LWR.
- (2) Remove the damper COMPL - pocket.
- (3) Release the stoppers and remove the pocket assembly by pulling it toward you.

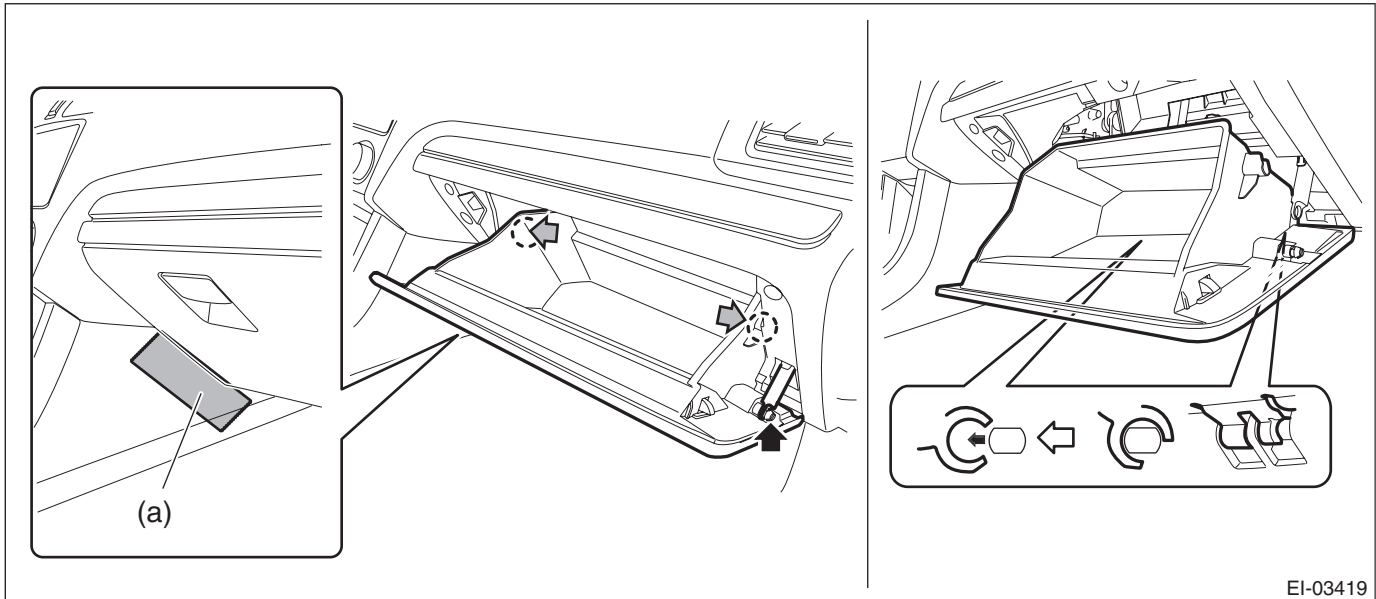

EI-03419

2) Remove the back panel - pocket.

- (1) Release the clips, and remove the under cover assembly - passenger.

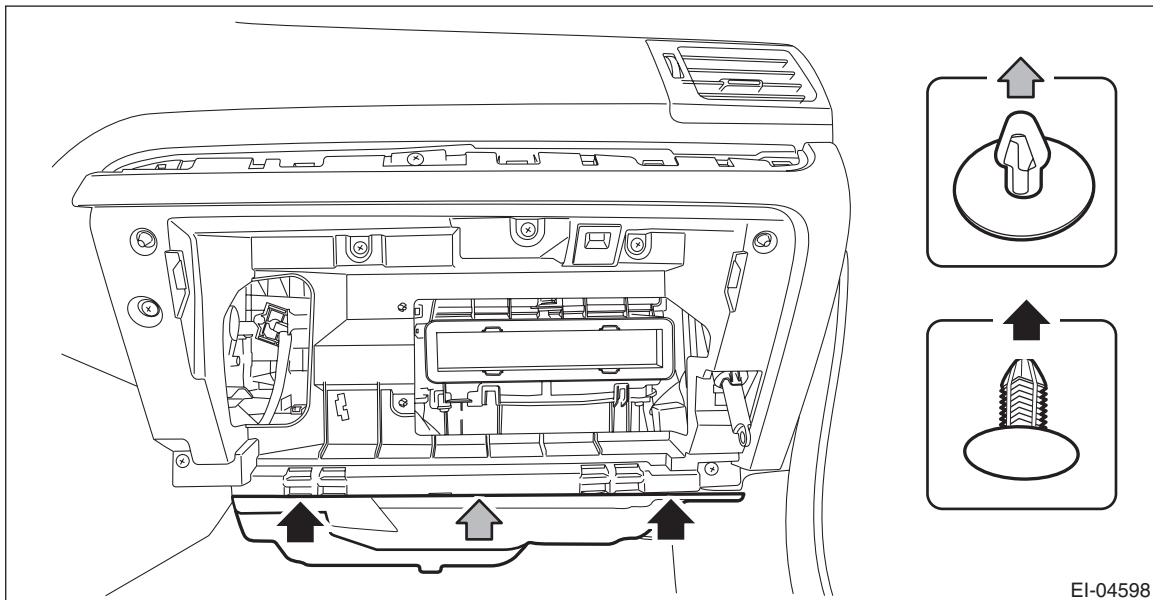


EI-04598

- (2) Remove the clips, and remove the cover - instrument panel side RH.

NOTE:

Remove the cover - instrument panel side RH by using a plastic remover.


- (3) Release the clips, and remove the ornament - panel assembly passenger.

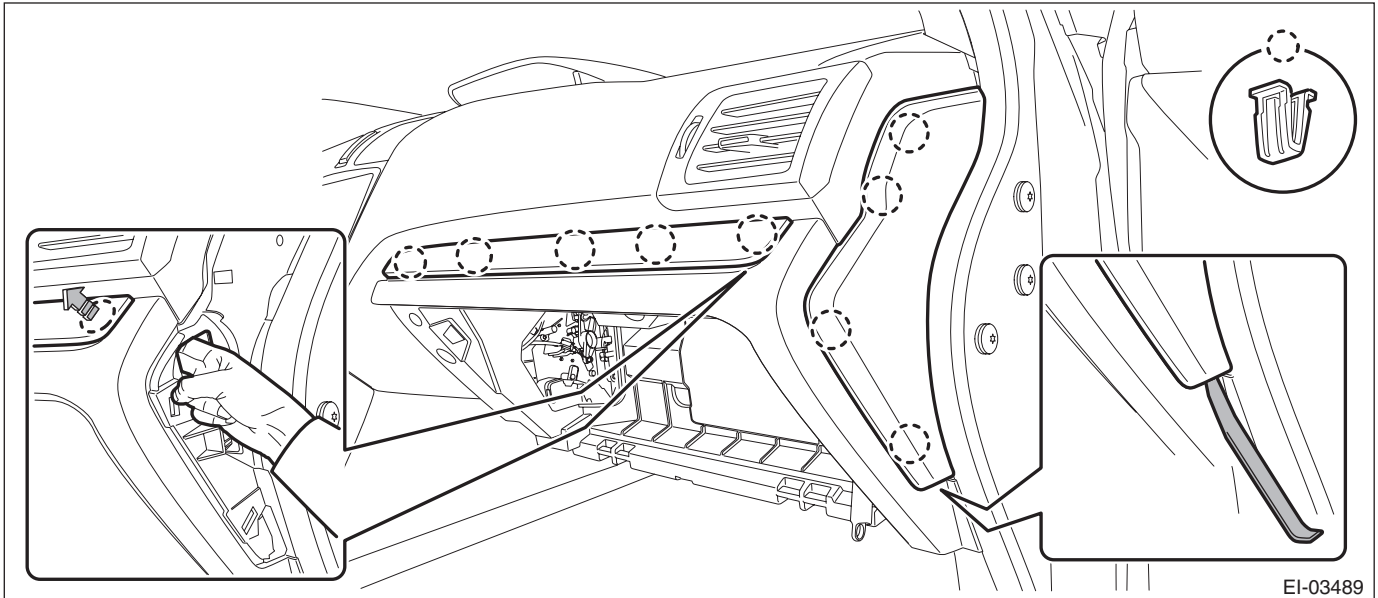

NOTE:

To facilitate the removal, push the clip of the ornament - panel assembly passenger from the backside.

- (4) Remove the screws, claws and harness clamp, then remove the back panel - pocket.

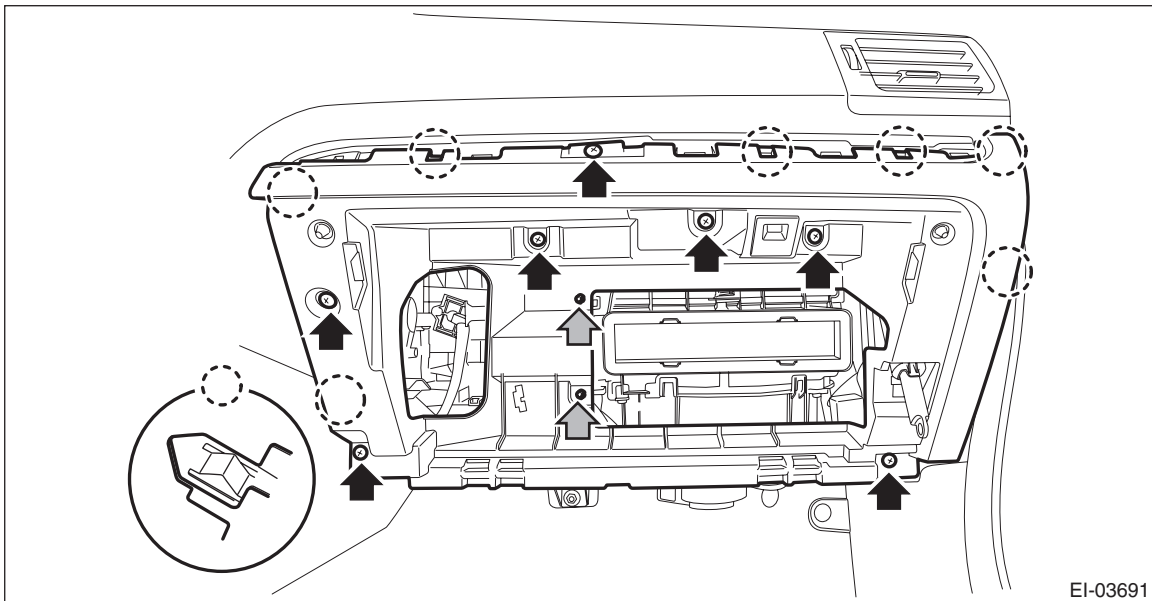

- (5) Disconnect the glove box light LED connector.

B: INSTALLATION

Install each part in the reverse order of removal.