

32.Rear Gate Garnish

A: REMOVAL

1) Disconnect the ground cable from battery. <Ref. to NT-5, BATTERY, NOTE, Note.>


NOTE:

For the 12 volt engine restart battery of HEV model, disconnect the ground terminal from 12V engine restart battery sensor.

2) Remove the trim panel - rear gate UPR.

(1) Remove the claws on the trim edge.


(2) Release the claws in the center of trim, and remove the trim panel - rear gate UPR.

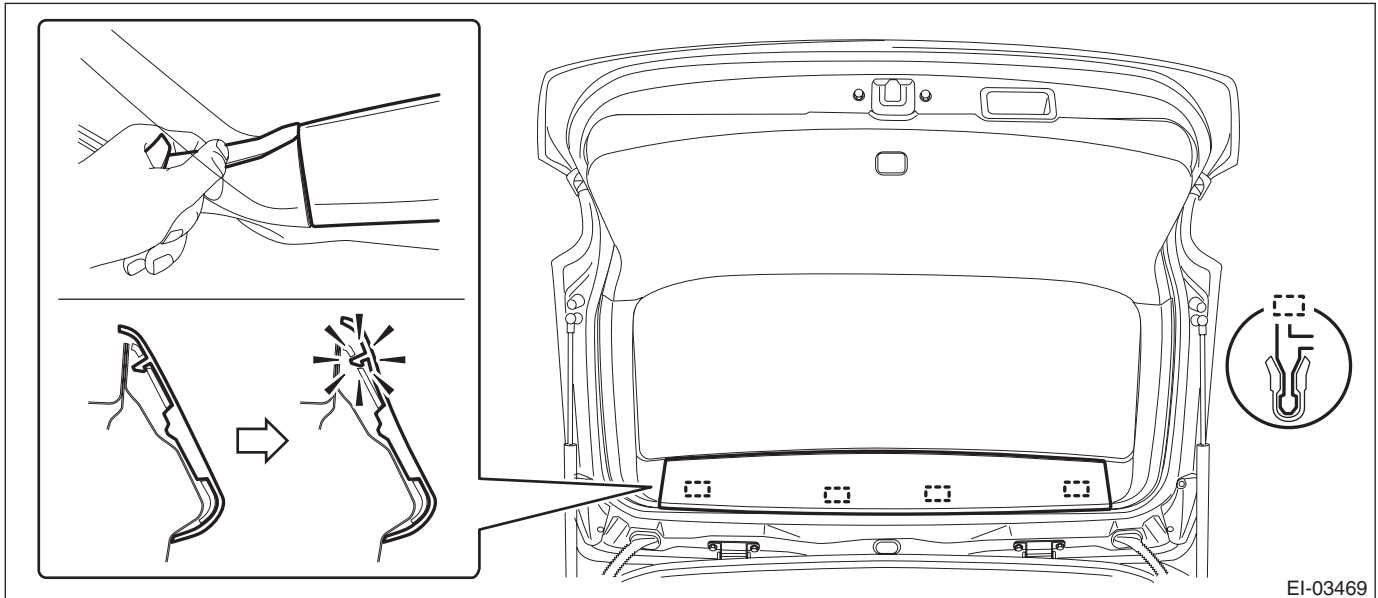

3) Remove the trim panel - rear gate pillar side.

(1) Release the claws.


(2) Remove the claws on the bottom of trim, and remove the trim panel - rear gate pillar side.

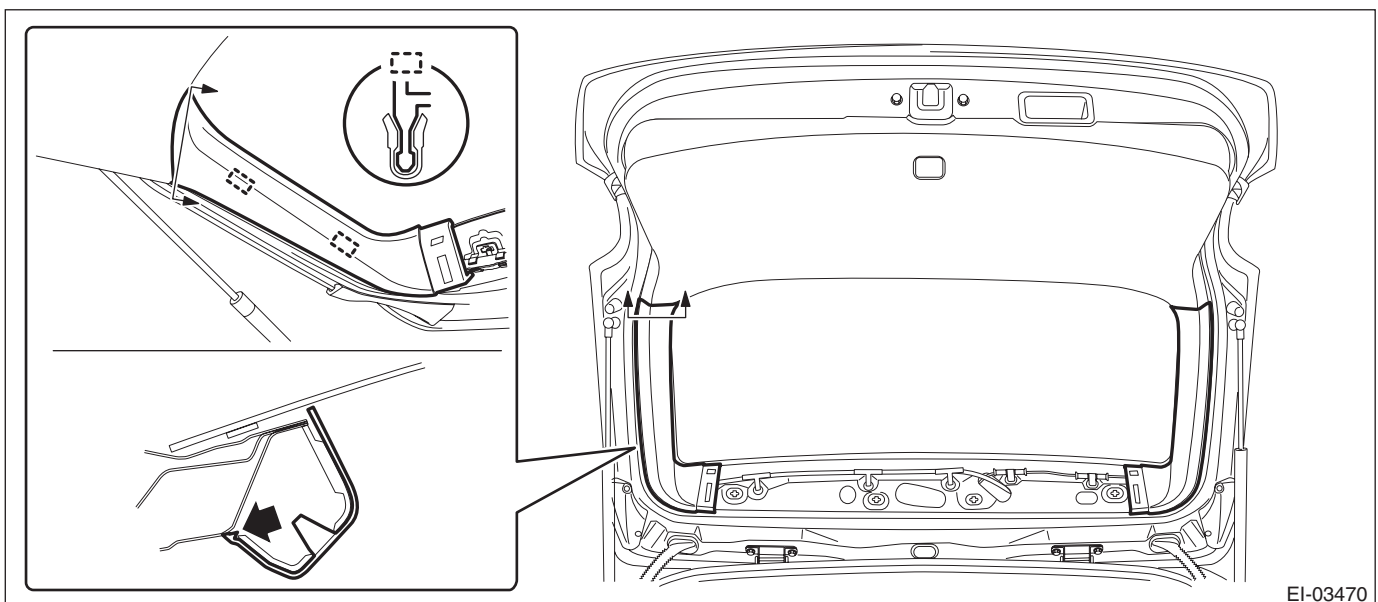


Rear Gate Garnish

EXTERIOR/INTERIOR TRIM


- 4) Remove the trim panel - rear gate LWR.
 - (1) Remove the clips on both ends.
 - (2) Release the clips, and remove the trim panel - rear gate LWR.

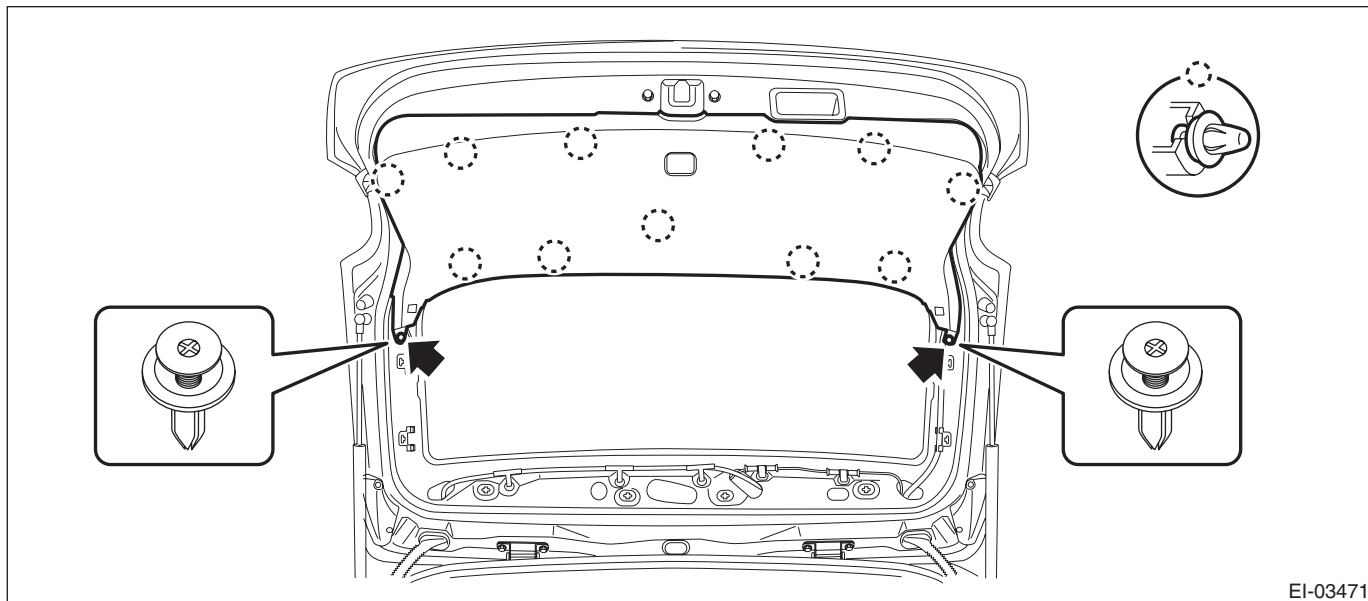


- 5) Remove the arm assembly - rear wiper.
 - (1) Remove the cover - rear wiper arm.
 - (2) Remove the nut, and remove the arm assembly - rear wiper.

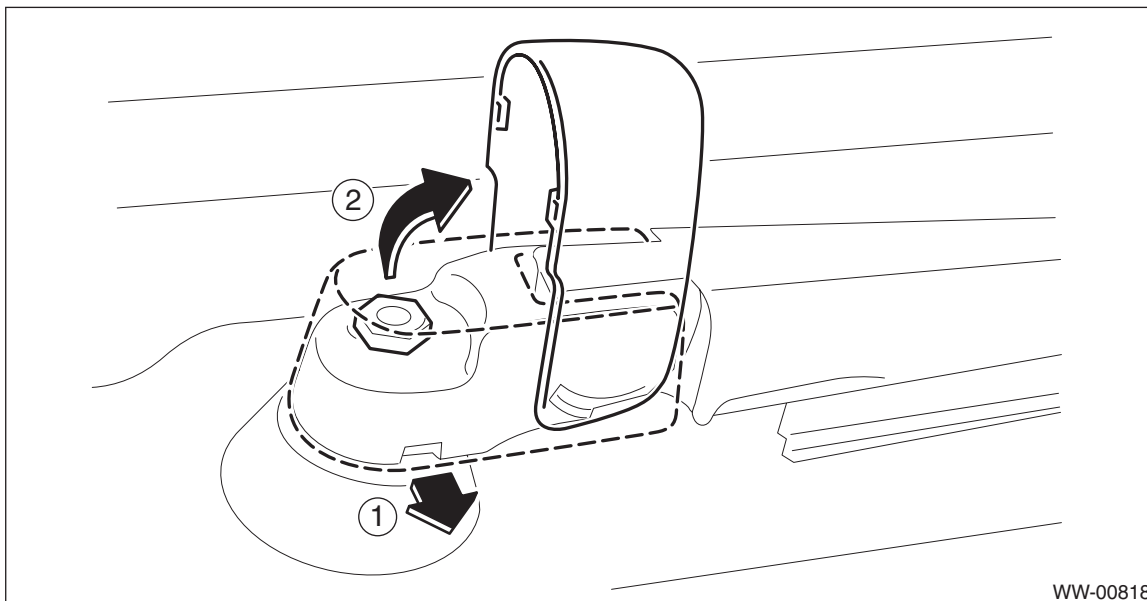

- 6) Remove the motor assembly - rear wiper.
- (1) Disconnect the harness connector of the motor assembly - rear wiper.
 - (2) Remove the bolts, and remove the motor assembly - rear wiper.

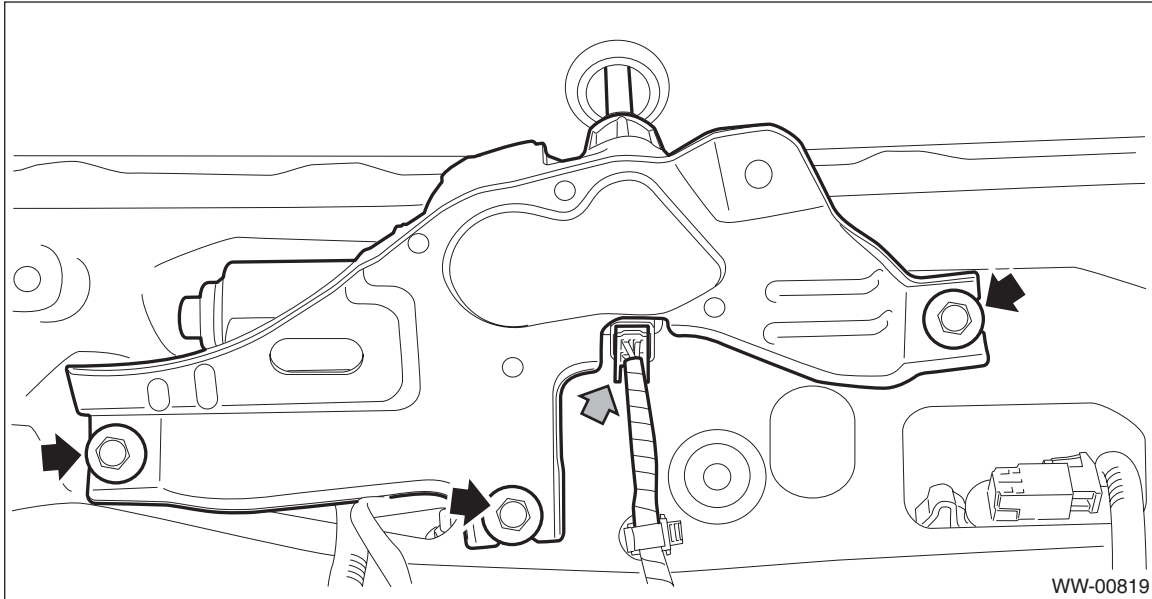

- 7) Remove the garnish assembly - rear gate.
- (1) Disconnect the harness connector of license plate light assembly.
 - (2) Remove the nuts.
 - (3) Remove the clips and remove the garnish assembly - rear gate.

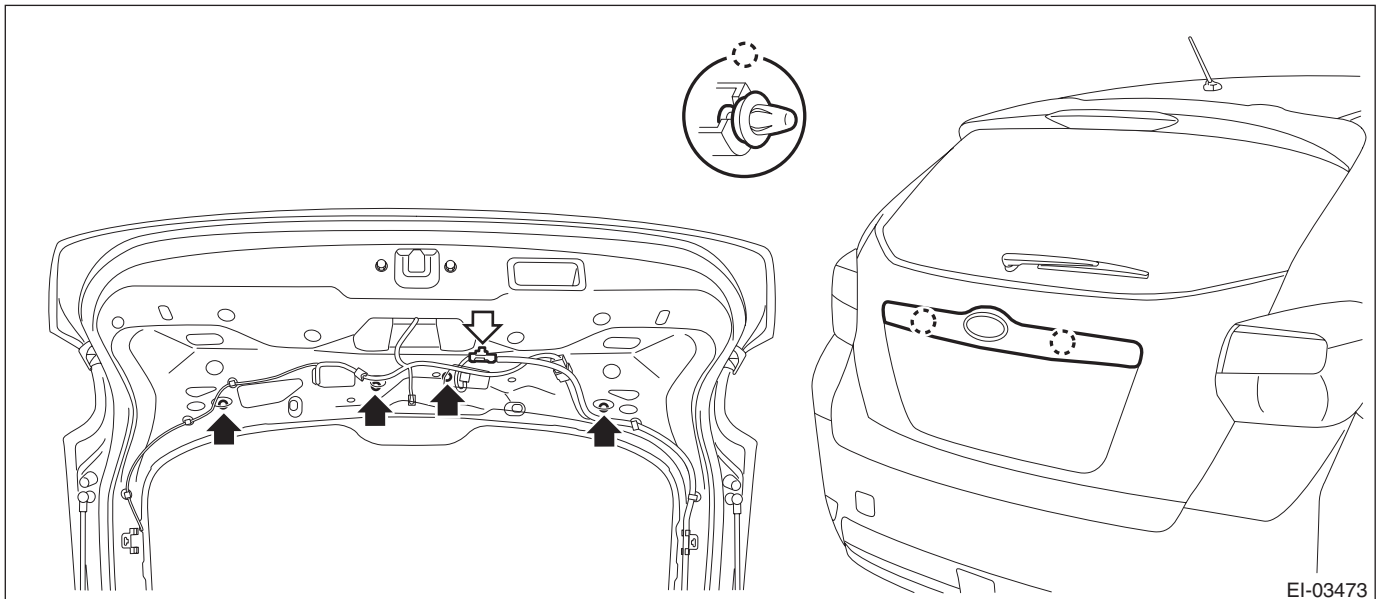

B: INSTALLATION

CAUTION:

Make sure that the harness grommet is securely installed.

If not properly installed, this may cause leaks.

Install each part in the reverse order of removal.

Tightening torque

Garnish assembly - rear gate: 4.5 N·m (0.46 kgf-m, 3.3 ft-lb)

Motor assembly - rear wiper: 6 N·m (0.61 kgf-m, 4.4 ft-lb)

Arm assembly - rear wiper: 8 N·m (0.82 kgf-m, 5.9 ft-lb)