

8. Real-time Diagnosis

A: OPERATION

- 1) On «EyeSight (from 2009MY)» display, select «Current Data Display & Save».
- 2) Check that the display changes and the contents are correct when performing the operations as follows.
 - Depress and release the brake pedal. (Stop light switch and brake switch are turned ON.)
 - Item «Brake Lamp SW (BIU)» «Brake SW Input» «Brake Lamp SW (VDC)»
 - Turn the main switch to ON.
 - Item «Cruise Control SW»
 - Turn the “SET/–” switch to ON.
 - Item «Cruise Control SW»
 - Turn the “RES/+” switch to ON.
 - Item «Cruise Control SW»
 - Turn the “Vehicle distance” switch to ON.
 - Item «Cruise Control SW»
 - Operate the shift lever.
 - Item «Current gear position»
 - Press and hold the pre-collision brake OFF switch.
 - Item «Pre-Collision Brake OFF Indicator»
 - Press and hold the lane departure warning OFF switch.
 - Item «Lane Departure Warning OFF Indicator»

NOTE:

For detailed operation procedures, refer to “PC application help for Subaru Select Monitor”.