


2. Relay and Fuse

A: LOCATION

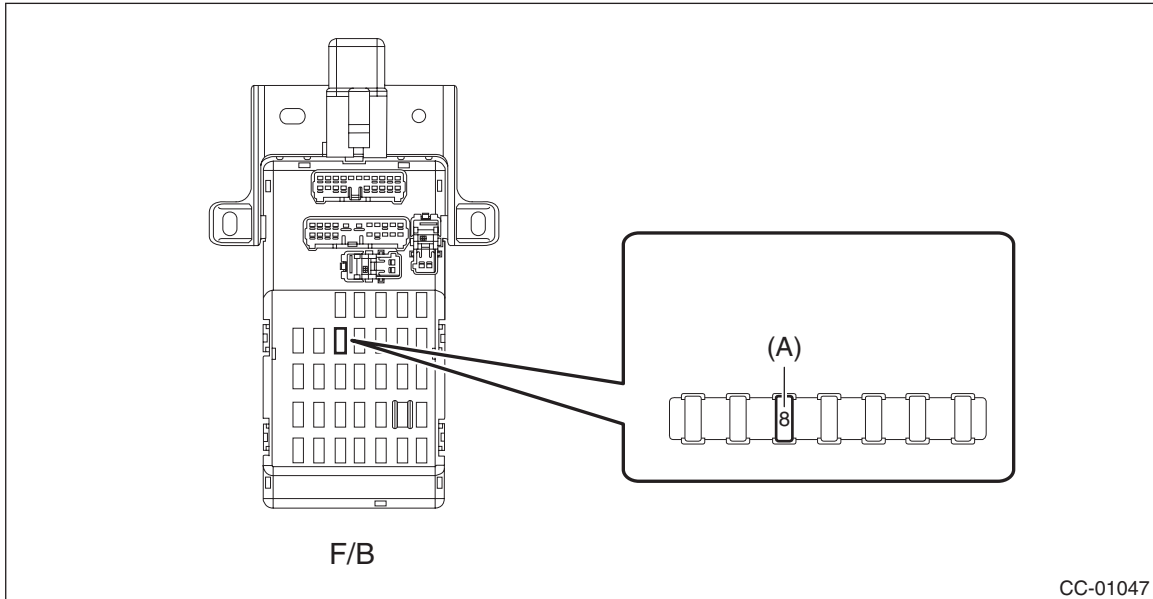

Relay & fuse box	Fuse 15 A (stop light and brake switch, brake relay)	(A)
------------------	--	-----

NOTE:

For other related fuses, refer to the wiring diagram. <Ref. to WI(w/o HEV)-16, Power Supply Circuit.>

B: INSPECTION

1. CHECK FUSE

- 1) Remove the fuse and inspect visually.
- 2) If the fuse is blown out, replace the fuse.

NOTE:

If the fuse is blown again, check the system wiring harness.

2. CHECK RELAY

- 1) Measure the resistance between relay terminals.

Terminal No.	Inspection conditions	Standard	Circuit
1 — 2	Always	1 M Ω or more	<p style="text-align: right;">ADA00304</p>
1 — 4	Always	Less than 1 Ω	
1 — 2	Apply battery voltage between terminals 3 and 5.	Less than 1 Ω	

- 2) Replace the relay if the inspection result is not within the standard value.