

## 3. EyeSight System

### A: WIRING DIAGRAM

Refer to “EyeSight System” in the wiring diagram. <Ref. to WI(w/o HEV)-126, WIRING DIAGRAM, EyeSight System.>

### B: INSPECTION

Refer to “Basic Diagnostic Procedure” of “EyeSight (DIAGNOSTICS)” section. <Ref. to ES(diag)-2, Basic Diagnostic Procedure.>

### C: NOTE

For procedure of each component in the EyeSight system, refer to the respective section.

- Control module: <Ref. to ES-6, Control Unit.>
- Stereo camera: <Ref. to ES-7, Stereo Camera.>
- Cruise control command switch: <Ref. to ES-33, Cruise Control Command Switch.>
- Combination meter: <Ref. to ES-34, Combination Meter.>
- Transmission control module (TCM): <Ref. to ES-35, Transmission Control Module (TCM).>
- Stop light and brake switch: <Ref. to ES-36, Stop Light & Brake Switch.>
- VDC control module & hydraulic control unit (VDCCM&H/U): <Ref. to ES-37, VDC Control Module and Hydraulic Control Unit (VDCCM&H/U).>
- Multi-function display (MFD): <Ref. to ES-38, Multi-function Display (MFD).>
- Switches and harness: <Ref. to ES-32, Switches and Harness.>
- Power steering control module: <Ref. to ES-39, Power Steering Control Module.>
- Roll connector (steering angle sensor): <Ref. to ES-40, Roll Connector.>
- Body integrated unit: <Ref. to ES-41, Body Integrated Unit.>