

## 4. Control Unit

### A: NOTE

System control of the EyeSight is performed by each module. For procedure, refer to the following sections.

- Engine control module (ECM): <Ref. to FU(H4DO(w/o HEV))-100, Engine Control Module (ECM).>
- Transmission control module (TCM): <Ref. to CVT(TR580)-146, Transmission Control Module (TCM).>
- VDC control module (VDC CM): <Ref. to VDC-10, VDC Control Module and Hydraulic Control Unit (VDC-CM&H/U).>
- Stereo camera: <Ref. to ES-7, Stereo Camera.>