

15.Roll Connector

A: NOTE

For the operation procedures for roll connector (steering angle sensor), refer to “AIRBAG SYSTEM” section.
<Ref. to AB-93, Roll Connector.>