

14. Drive Motor Control Module

A: REMOVAL


1) Disconnect the ground cable from battery. <Ref. to NT-5, BATTERY, NOTE, Note.>

NOTE:

For the 12 volt engine restart battery, disconnect the ground terminal from 12V engine restart battery sensor.


2) Remove the mat - rear floor CTR.

3) Release the clips and claws, then remove the sub-trunk box.

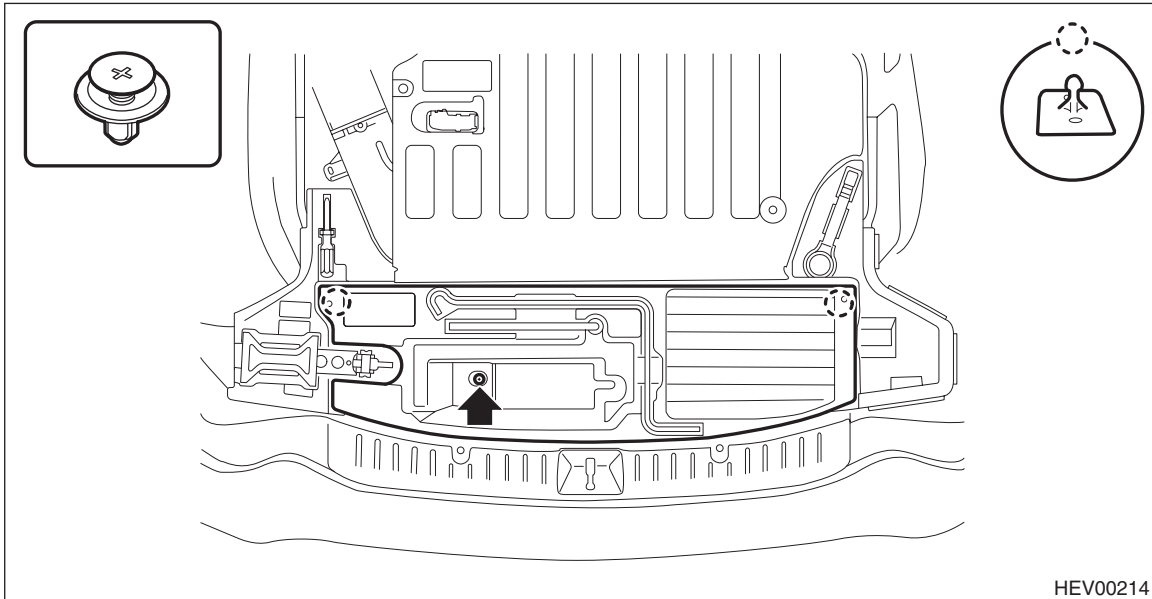

4) Remove the drive motor control module.

(1) Remove the drive motor control module mounting bolts.

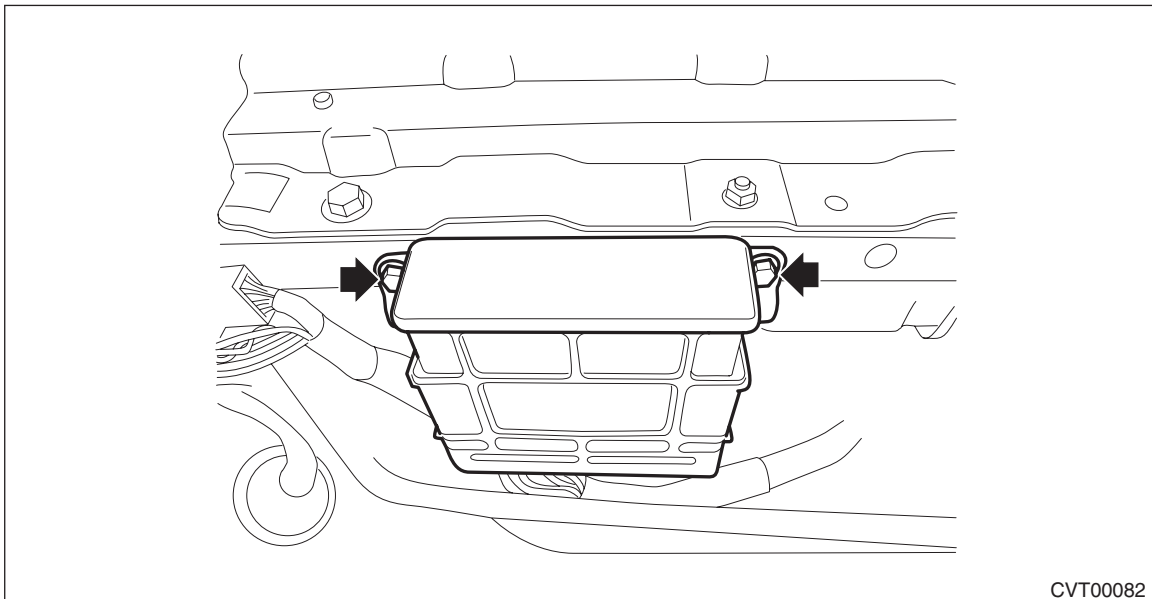

(2) Disconnect the connector from the drive motor control module.

(3) Release the relay holder, ground terminal, and harness clip.

NOTE:

Replace the drive motor control module and the bracket as a set.

B: INSTALLATION

CAUTION:

- If replaced with a new one, install the drive motor control module on the bracket.
- To avoid the damage to bracket and the drive motor control module, do not remove module once installed on the bracket. If installed by mistake, the part must be replaced with a new part.

Install each part in the reverse order of removal.

Tightening torque:

6.5 N·m (0.7 kgf-m, 4.8 ft-lb)