

6. Read Diagnostic Trouble Code (DTC)

A: OPERATION

1. ECM

For operation procedures, refer to the “PC application help for Subaru Select Monitor”.

NOTE:

For details concerning DTC, refer to the List of Diagnostic Trouble Codes (DTC). <Ref. to IM(diag)-14, LIST, List of Diagnostic Trouble Code (DTC).>

2. BODY INTEGRATED UNIT

For operation procedures, refer to the “PC application help for Subaru Select Monitor”.

NOTE:

For details concerning DTC, refer to the List of Diagnostic Trouble Codes (DTC). <Ref. to IM(diag)-14, LIST, List of Diagnostic Trouble Code (DTC).>