## **Clear Memory Mode**

# 7. Clear Memory Mode

## A: OPERATION

### 1. ECM

For operation procedures, refer to the "PC application help for Subaru Select Monitor".

#### NOTF:

Initial diagnosis of electronic throttle control is performed after memory clearance. Wait for 10 seconds or more after turning the ignition switch to ON, and then start the engine.

### 2. BODY INTEGRATED UNIT

For operation procedures, refer to the "PC application help for Subaru Select Monitor".