


Electrical Component Location

KEYLESS ACCESS WITH PUSH BUTTON START SYSTEM (DIAGNOSTICS)

4. Electrical Component Location

A: LOCATION

- Gasoline engine model

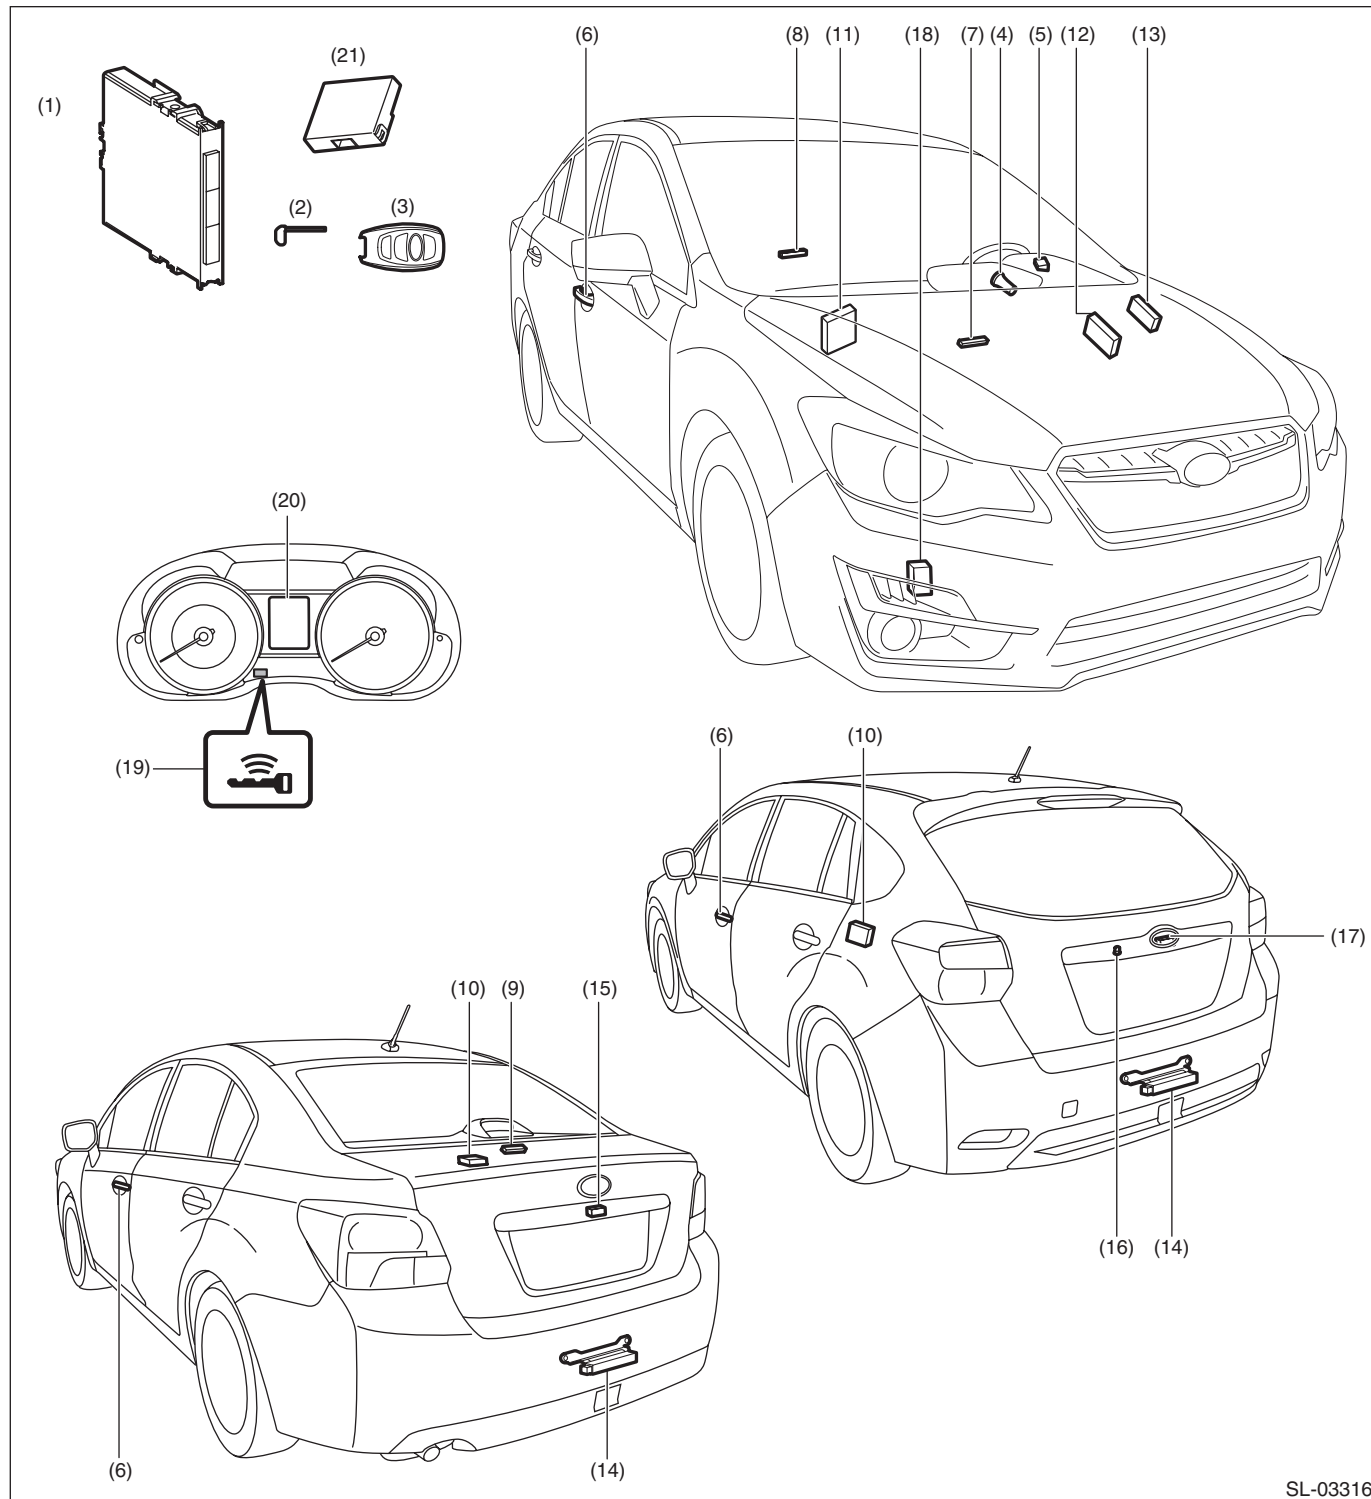

SL-03316

Electrical Component Location

KEYLESS ACCESS WITH PUSH BUTTON START SYSTEM (DIAGNOSTICS)

(1) Keyless access CM	(8) Center interior antenna*1 or rear interior antenna*2	(15) Trunk opener button*1
(2) Mechanical key	(9) Rear interior antenna*1	(16) Rear lock button*2
(3) Access key	(10) Receiver	(17) Rear gate opener button*2
(4) Push button ignition switch	(11) ECM	(18) Access buzzer
(5) Steering lock CM	(12) TCM	(19) Access key warning light
(6) Front outer handle (front exterior antenna) – Touch sensor (lock) – Touch sensor (unlock)	(13) Body integrated unit	(20) Multi-information display
(7) Front interior antenna	(14) Rear exterior antenna	(21) ID code box (For C0 and C5 models only)


*1: 4 door model

*2: 5 door model

Electrical Component Location

KEYLESS ACCESS WITH PUSH BUTTON START SYSTEM (DIAGNOSTICS)

- HEV model

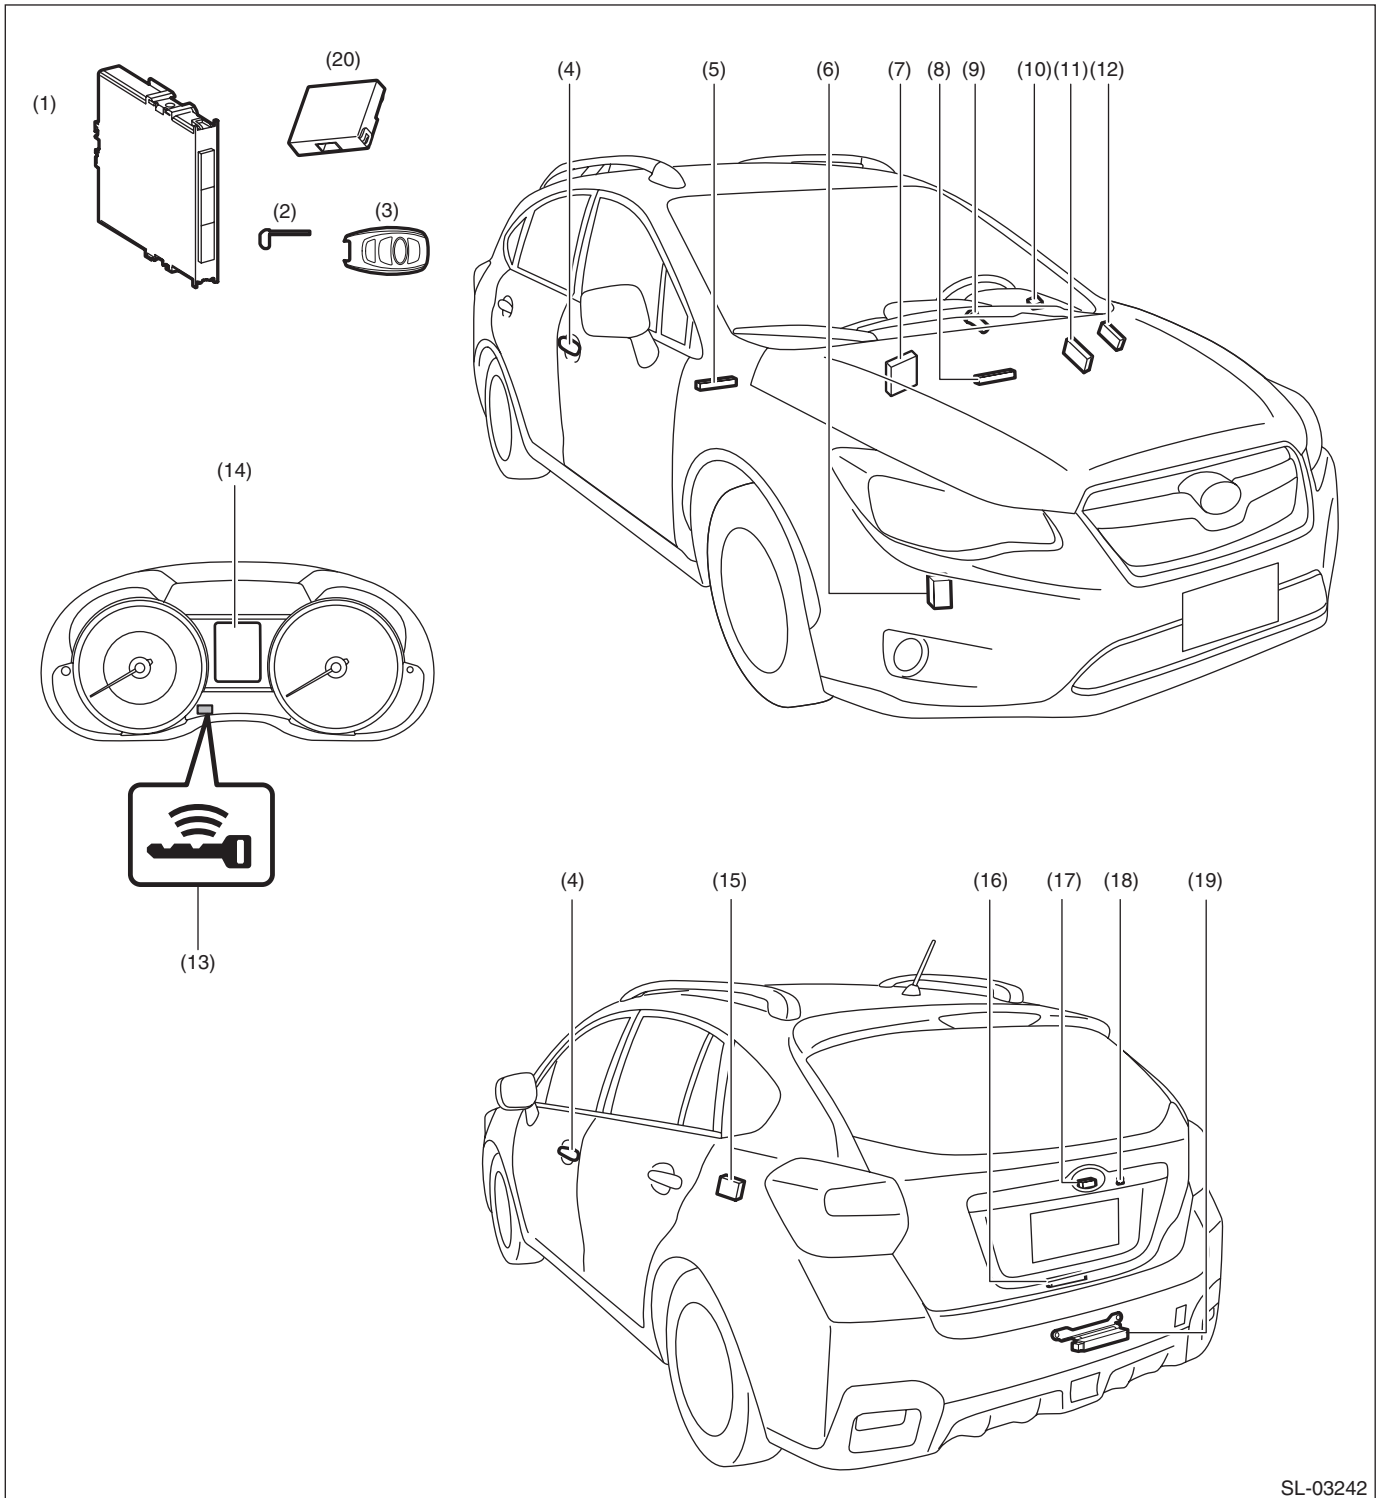

SL-03242

Electrical Component Location

KEYLESS ACCESS WITH PUSH BUTTON START SYSTEM (DIAGNOSTICS)

(1) Keyless access CM	(8) Front interior antenna	(15) Receiver
(2) Mechanical key	(9) Push button ignition switch	(16) Rear interior antenna
(3) Access key	(10) Steering lock CM	(17) Rear gate opener button
(4) Front outer handle (front exterior antenna) – Touch sensor (lock) – Touch sensor (unlock)	(11) TCM	(18) Rear lock button
(5) Center interior antenna	(12) Body integrated unit	(19) Rear exterior antenna
(6) Access buzzer	(13) Access key warning light	(20) ID code box (For C0 and C5 model only)
(7) ECM	(14) Multi-information display	