

Keyless Access System Check

KEYLESS ACCESS WITH PUSH BUTTON START SYSTEM (DIAGNOSTICS)

10.Keyless Access System Check

A: OPERATION

- 1) On «Main Menu» display, select {Each System Check}.
- 2) On «System Selection Menu» display, select {Keyless access system}.
- 3) On «Keyless access system» display, select {Work Support}.
- 4) Select {Function Check Sequence}.
- 5) Select {Keyless access system check}.
- 6) Select the transmitter to be checked and click [OK].
- 7) Select [Exit] to exit the system check. The screen will return to the «Keyless access system check» screen.

Data	Customize setting	Remarks
Keyless access system check	Driver side external transmitter - internal tuner	When the setting content on the left is selected, the access key is neared to the selected transmitter (access antenna) and collation matches, the buzzer will sound.
	Passenger side external transmitter - internal tuner	
	Fr internal transmitter - internal tuner	
	Rr internal transmitter - internal tuner	
	Trunk-internal transmitter - trunk-internal tuner	
	Trunk-external transmitter - trunk-internal tuner	
	R gate internal transmitter - internal tuner	
	R gate external transmitter - internal tuner	
	Immobilizer amplifier transmission	
Collation result history Clear	Execution	
	—	

NOTE:

For detailed operation procedures, refer to “PC application help for Subaru Select Monitor”.