

## 12.General Diagnostic Table

### A: INSPECTION

Item	Operation	Specifications		Note
		YES	NO	
Diagnostic code	DTC is displayed when inspecting all DTCs.	Perform the diagnosis according to DTC.	System is normal.	—
Speedometer	Faster vehicle speed than the actual speed is displayed.	VDC CM data may not be received.	System is normal.	Also, check vehicle speed pulse circuit.
Fuel gauge	Fuel is present, but displayed less than actual amount.	Communication error may be present.	System is normal.	Also, check the fuel gauge.
Fuel level warning light	Fuel is present, but the light illuminates.	Communication error may be present.	System is normal.	Also, check the fuel gauge.
Engine coolant temperature light	Engine coolant temperature light blinks in red and blue alternately.	Communication error may be present.	System is normal.	Check the engine coolant light related items.
[S], [I] or [S#] indicator	Blinking.	Communication error may be present.	System is normal.	Check the intelligent switch.
VDC indicator	Illuminating.	Communication error may be present.	System is normal.	Check that VDC is not operating.
VDC OFF indicator	Illuminating.	Communication error may be present.	System is normal.	Check that VDC is not OFF.
Brake warning, etc.	Illuminating.	Brake fluid may be low in amount, or communication error may be present.	System is normal.	Check brake related items.
Shift position	Not displayed.	Communication error may be present.	System is normal.	Also, check AT system.
AT temperature light	Blinking.	Communication error may be present.	System is normal.	Also, check AT system.
Door indicator	Not displayed when the door is opened. Otherwise, not turn off when the door is closed.	Communication error may be present.	System is normal.	Check the door switch.
Clearance indicator	Not illuminating.	Communication error may be present.	System is normal.	Check the combination switch.
Hi beam indicator	Not illuminating.	Communication error may be present.	System is normal.	Check the combination switch.
Front fog indicator	Not illuminating.	Communication error may be present.	System is normal.	Check the combination switch.
Illumination	Illuminating at the maximum brightness.	Communication error may be present.	System is normal.	Also, check the illumination switch.
Cruise control indicator	Not illuminating.	Communication error may be present.	System is normal.	Check the cruise control system.
AWD indicator	Not illuminating.	Communication error may be present.	System is normal.	Check TCM.
Hill hold indicator	Not illuminating.	Communication error may be present.	System is normal.	Also, check VDC CM.

General Diagnostic Table

LAN SYSTEM (DIAGNOSTICS)

---

# HYBRID ELECTRIC VEHICLE

# *HEV*

---

	Page
1. General Description .....	2
2. Relay and Fuse .....	12
3. Hybrid Electric Vehicle System .....	14
4. Service Plug .....	15
5. High Voltage Battery .....	17
6. Battery Energy Control Module .....	26
7. Drive Motor Inverter Current Sensor .....	27
8. Noise Filter .....	31
9. Hybrid Powertrain Control Module .....	37
10. DC/DC Converter .....	38
11. Inverter .....	42
12. Power Cable .....	52
13. High Voltage Battery Cooling System .....	60
14. Drive Motor Control Module .....	74
15. Drive Motor Assembly .....	76
16. Active Grille Shutter .....	77
17. Diagnostics with Phenomenon .....	79