
2. Relay and Fuse

A: LOCATION

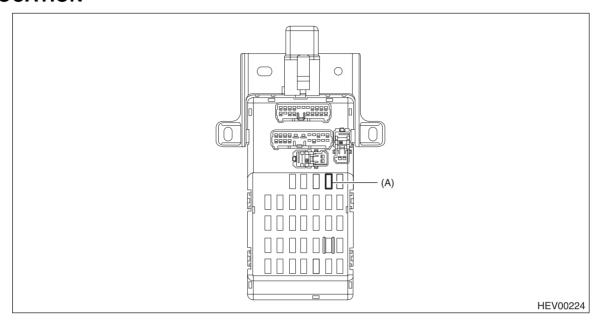

Relay & fuse box	Fuse 10 A (pedestrian alert control unit)	(A)
------------------	---	-----

NOTE:

For other related fuses, refer to the wiring diagram. <Ref. to WI(HEV)-21, Power Supply Circuit.>

B: INSPECTION

1. CHECK FUSE

- 1) Remove the fuse and inspect visually.
- 2) If the fuse is blown out, replace the fuse.

NOTE

If the fuse is blown again, check the system wiring harness.