4. Pedestrian Alert Control Unit


A: REMOVAL

1) Disconnect the ground cable from battery. <Ref. to NT-5, BATTERY, NOTE, Note.>

NOTF:

For the 12 volt engine restart battery, disconnect the ground terminal from 12V engine restart battery sensor.

- 2) Remove the center grille assembly. <Ref. to AC-104, REMOVAL, Air Vent Grille.>
- 3) Remove the audio assembly or navigation assembly. <Ref. to ET-12, REMOVAL, Audio.>
- 4) Remove the pedestrian alert control unit.
 - (1) Remove the screws.
 - (2) Pull out the pedestrian alert control unit toward you, and disconnect the connector.

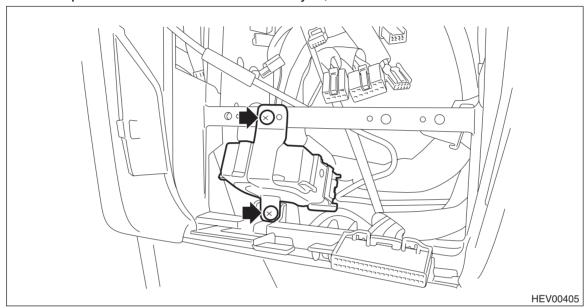

B: INSTALLATION

Install each part in the reverse order of removal.