


## 30.Keyless Access Indoor Antenna

### A: REMOVAL

#### 1. FRONT ANTENNA

- 1) Remove the cover - shift lever. <Ref. to EI-81, REMOVAL, Console Box.>
- 2) Disconnect the connector and remove the front antenna assembly - interior.

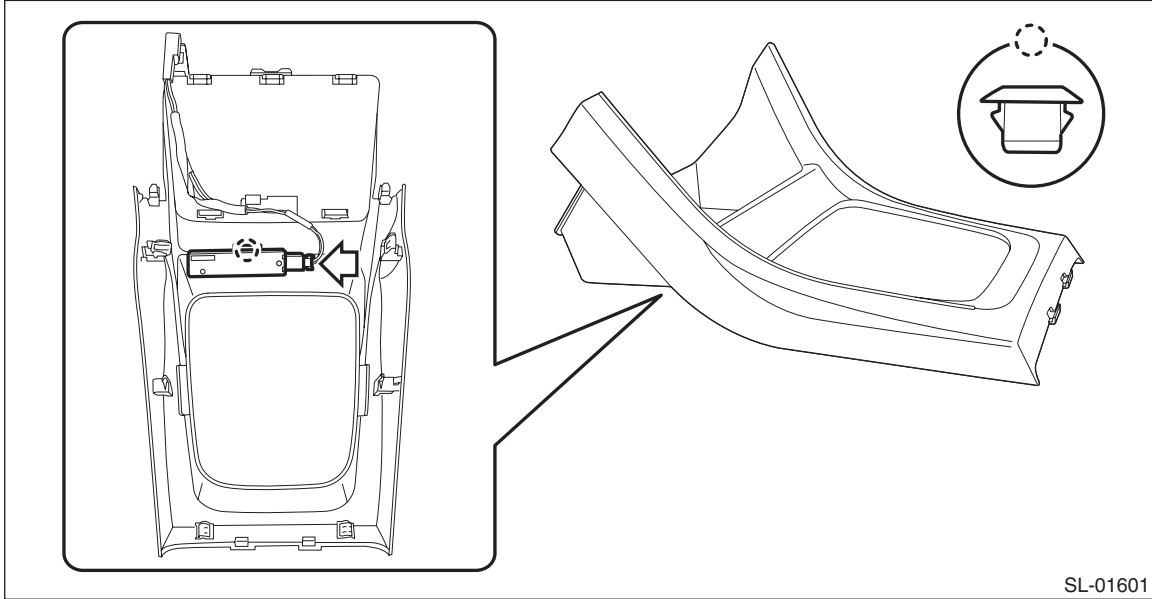

#### 2. CENTER ANTENNA

##### NOTE:

Equipped with 4 door model and HEV model.

- 1) Disconnect the ground cable from battery. <Ref. to NT-5, BATTERY, NOTE, Note.>

##### NOTE:

For the 12 volt engine restart battery of HEV model, disconnect the ground terminal from 12V engine restart battery sensor.

- 2) Remove the rear seat cushion assembly. <Ref. to SE-23, REMOVAL, Rear Seat.>

# Keyless Access Indoor Antenna


## SECURITY AND LOCKS

3) Remove the center antenna assembly - interior.

### NOTE:

Do not remove the antenna assembly from the cover. If removed, the antenna assembly and cover mounting becomes loose, causing abnormal noises.

- (1) Disconnect the connector.
- (2) Remove the screw, and remove the center antenna assembly - interior.

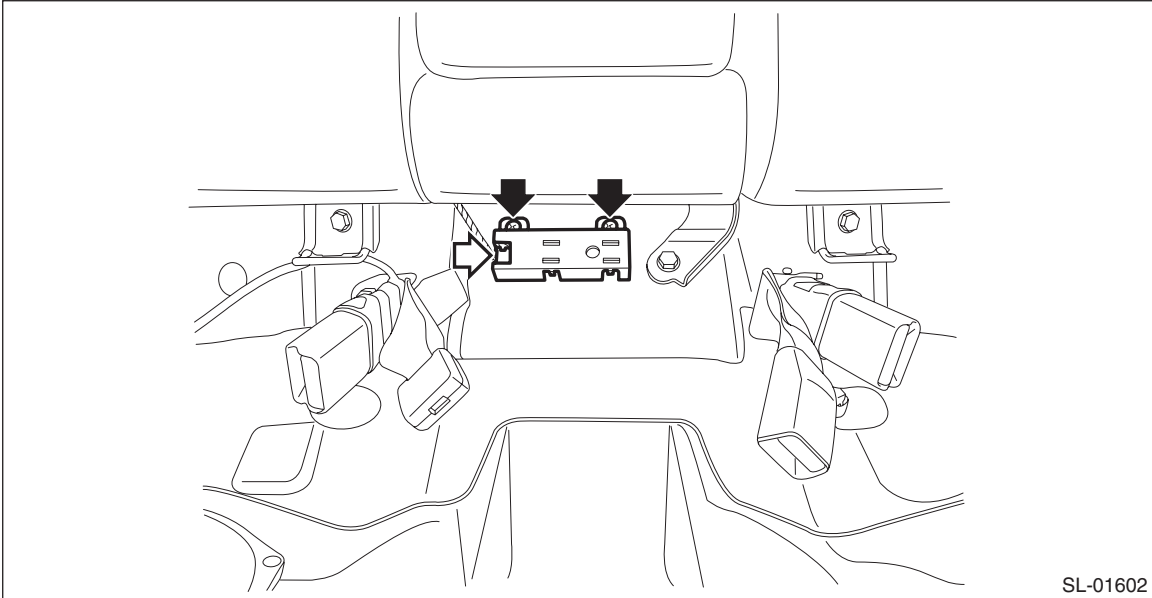


SL-01602

## 3. REAR ANTENNA

### • 4 door model

- 1) Disconnect the ground cable from battery.
- 2) Disconnect the connector and remove the rear antenna assembly - interior.

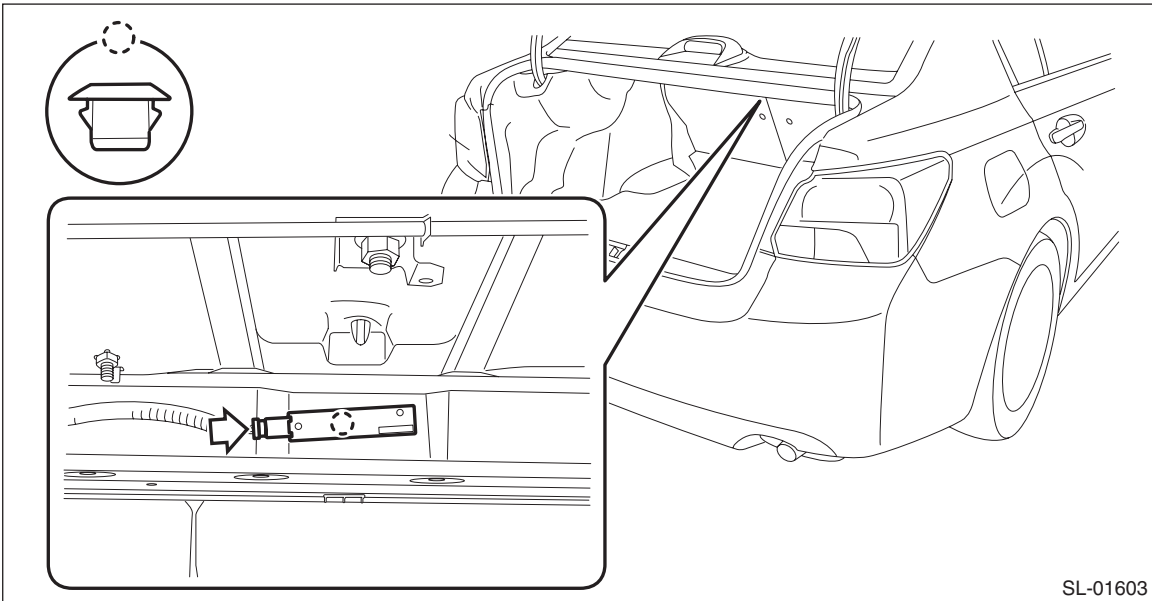

SL-01603


## • 5 door model

- 1) Disconnect the ground cable from battery.
- 2) Remove the rear seat cushion assembly. <Ref. to SE-23, REMOVAL, Rear Seat.>
- 3) Remove the rear antenna assembly - interior.

### NOTE:

Do not remove the antenna assembly from the cover. If removed, the antenna assembly and cover mounting becomes loose, causing abnormal noises.

- (1) Disconnect the connector.
- (2) Remove the screw, and remove the rear antenna assembly - interior.

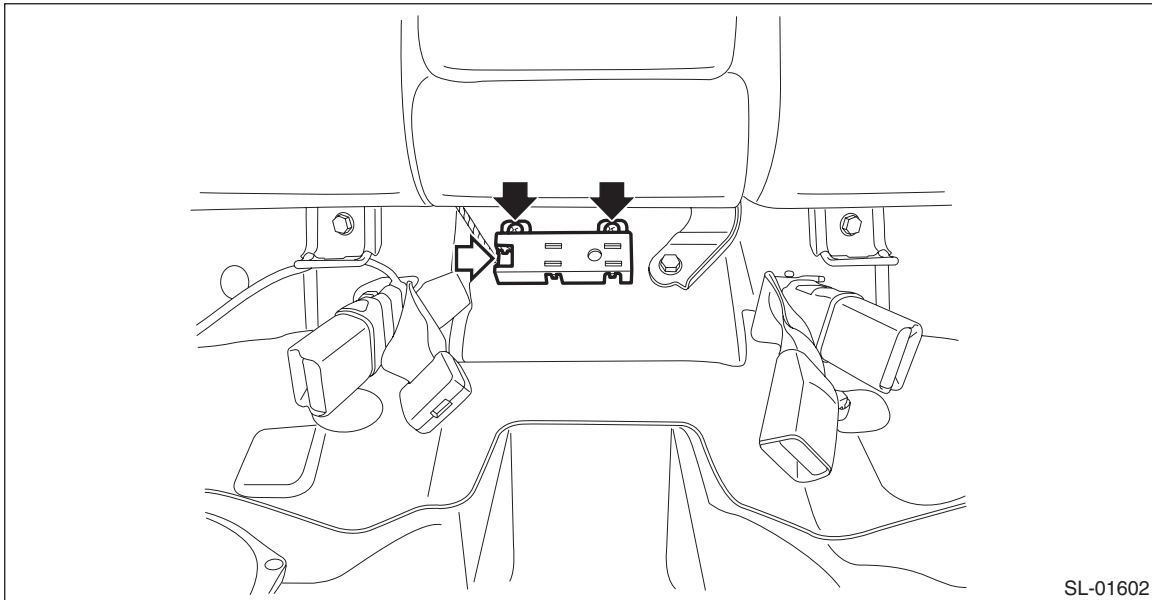

SL-01602


## • HEV model

- 1) Disconnect the ground cable from battery. <Ref. to NT-5, BATTERY, NOTE, Note.>

### NOTE:

For the 12 volt engine restart battery of HEV model, disconnect the ground terminal from 12V engine restart battery sensor.

- 2) Remove the mat - rear floor CTR.
- 3) Remove the clips, and remove the sub-trunk box.

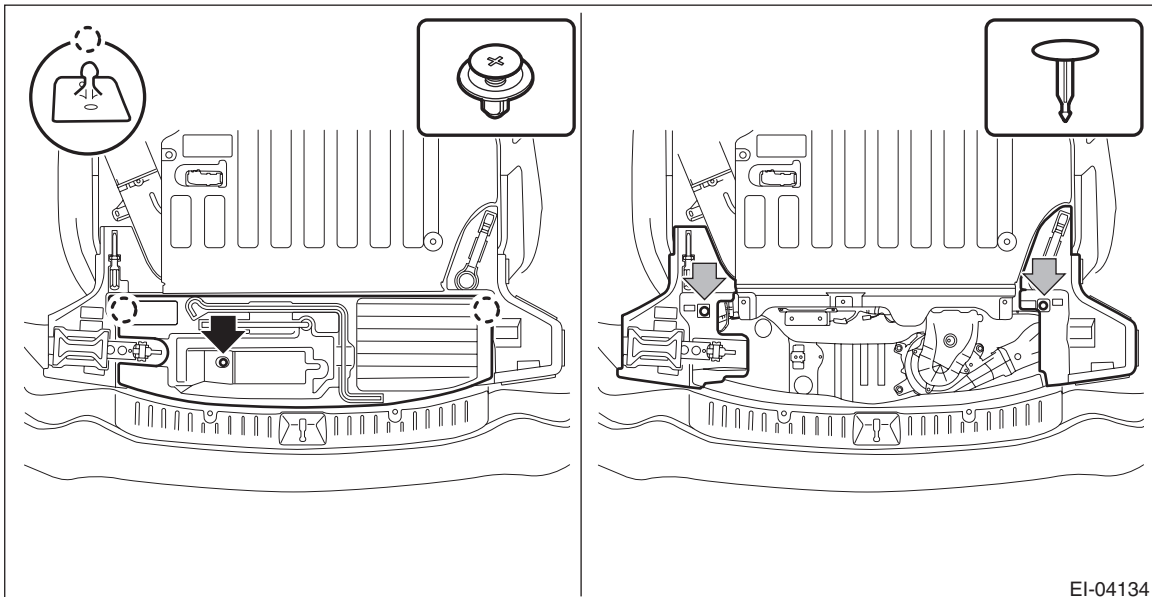


EI-04134

# Keyless Access Indoor Antenna

## SECURITY AND LOCKS

- 4) Remove the rear antenna assembly - interior.
  - (1) Disconnect the connector.
  - (2) Release the claw, and remove the rear antenna assembly - interior.

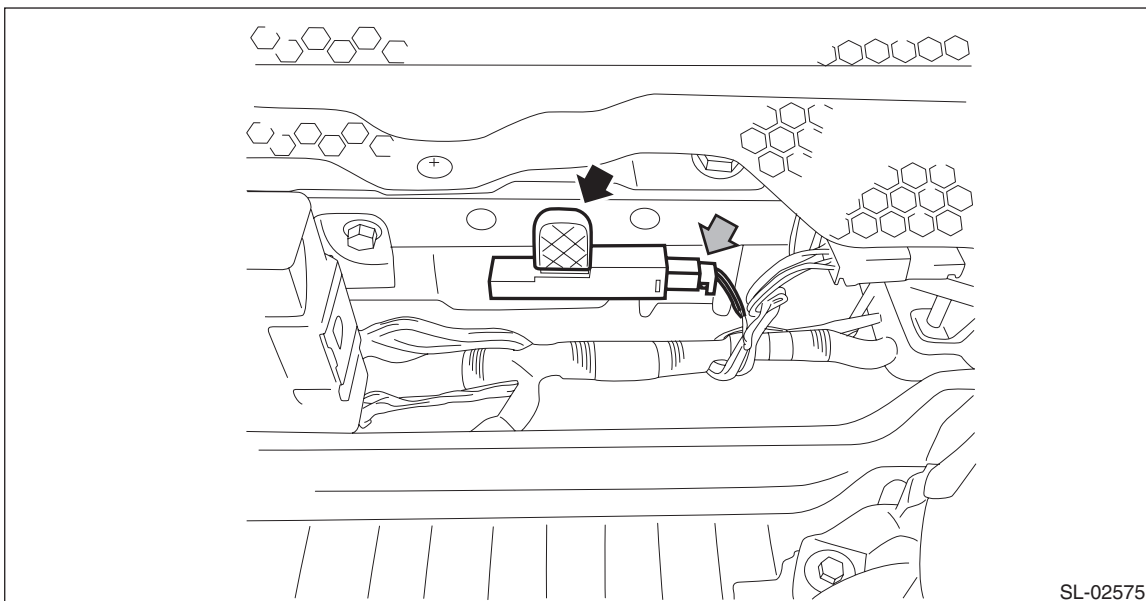

## B: INSTALLATION

Install each part in the reverse order of removal.

## C: INSPECTION

- 1) Check the setting by performing Keyless access system check using the Subaru Select Monitor. <Ref. to KPS(diag)-37, OPERATION, Keyless Access System Check.>
- 2) Disconnect the Subaru Select Monitor. Operate the touch sensor of the door outer handle to check if door lock operates.
- 3) If the system does not operate normally as the result of inspection, refer to “General Diagnostic Table” of the “KEYLESS ACCESS WITH PUSH BUTTON START SYSTEM (DIAGNOSTICS)” section. <Ref. to KPS(diag)-109, KEYLESS ACCESS SYSTEM, INSPECTION, General Diagnostic Table.>