


36.ID Code Box

A: REMOVAL

NOTE:

- Equipped on keyless access model for C0, C5.
 - The installation location of ID code box is the same as that for the security control module.
- 1) Remove the heater and cooling unit assembly. <Ref. to AC-60, REMOVAL, Heater and Cooling Unit.>
 - 2) Remove ID code box.
 - (1) Disconnect the connector.
 - (2) Remove the nut to remove ID code box.

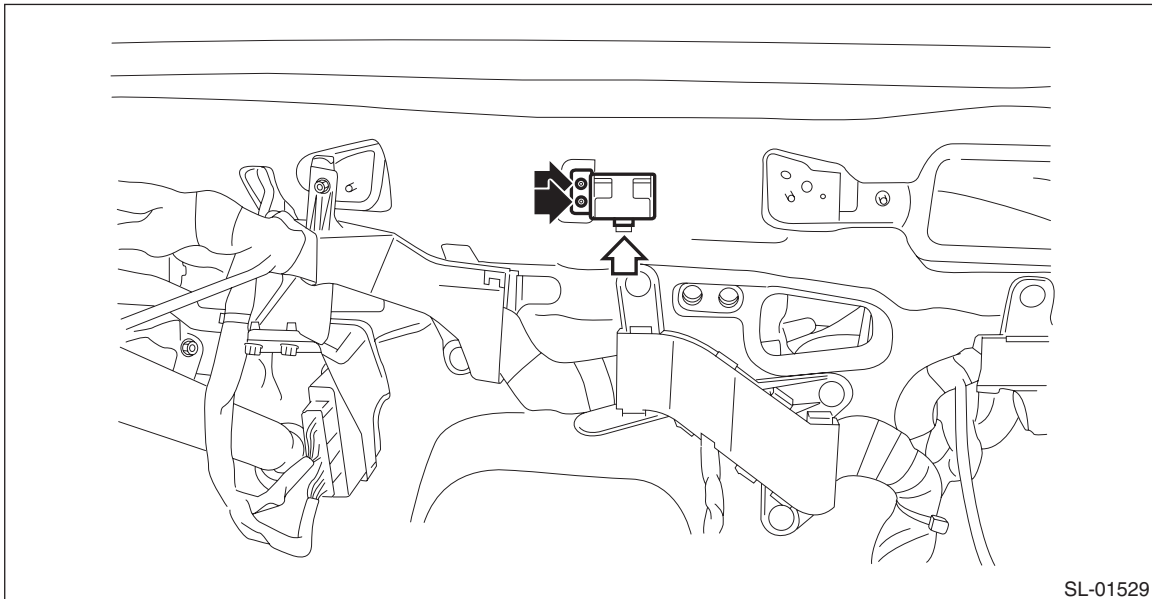

B: INSTALLATION

CAUTION:

Registration of the immobilizer is necessary when a immobilizer-related control module has been replaced. For detailed operation procedure, refer to the “REGISTRATION MANUAL FOR IMMOBILIZER”.

Install each part in the reverse order of removal.

Tightening torque:

Security control module: 7.5 N·m (0.76 kgf-m, 5.5 ft-lb)