



## 41.IG Relay2 (Push Button Start)

### A: REMOVAL

- 1) Remove the cover assembly - instrument panel LWR driver and the knee airbag module. <Ref. to AB-34, REMOVAL, Knee Airbag Module.>
- 2) Release the lock and remove the fuse holder.

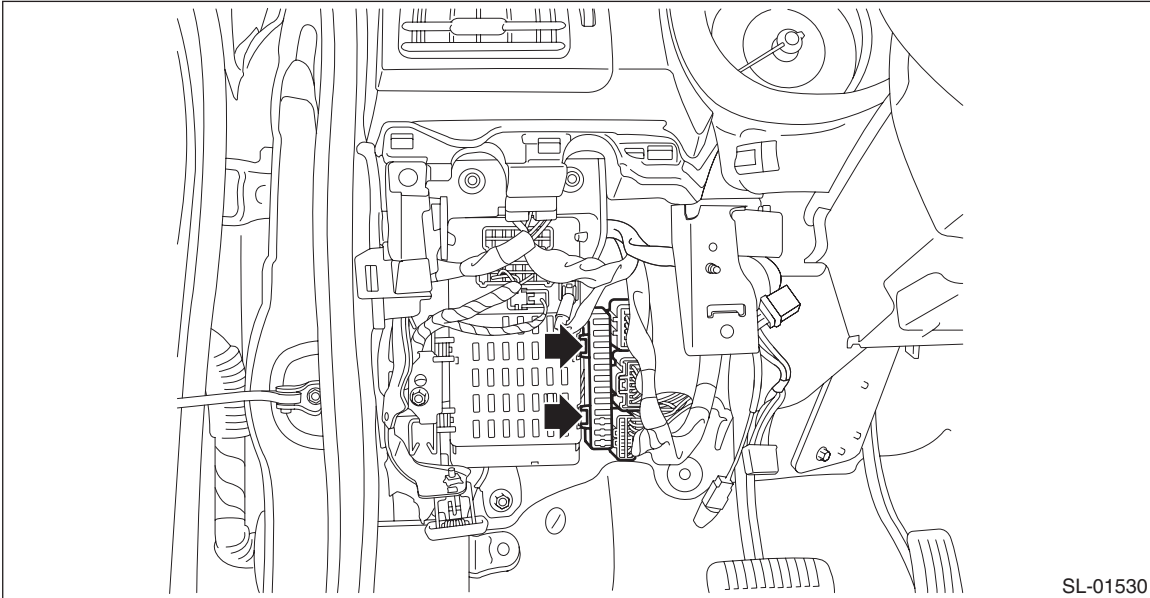

- 3) Remove the relay & fuse box.
  - (1) Disconnect the connector.
  - (2) Remove the bolts and nuts, and remove the relay & fuse box.

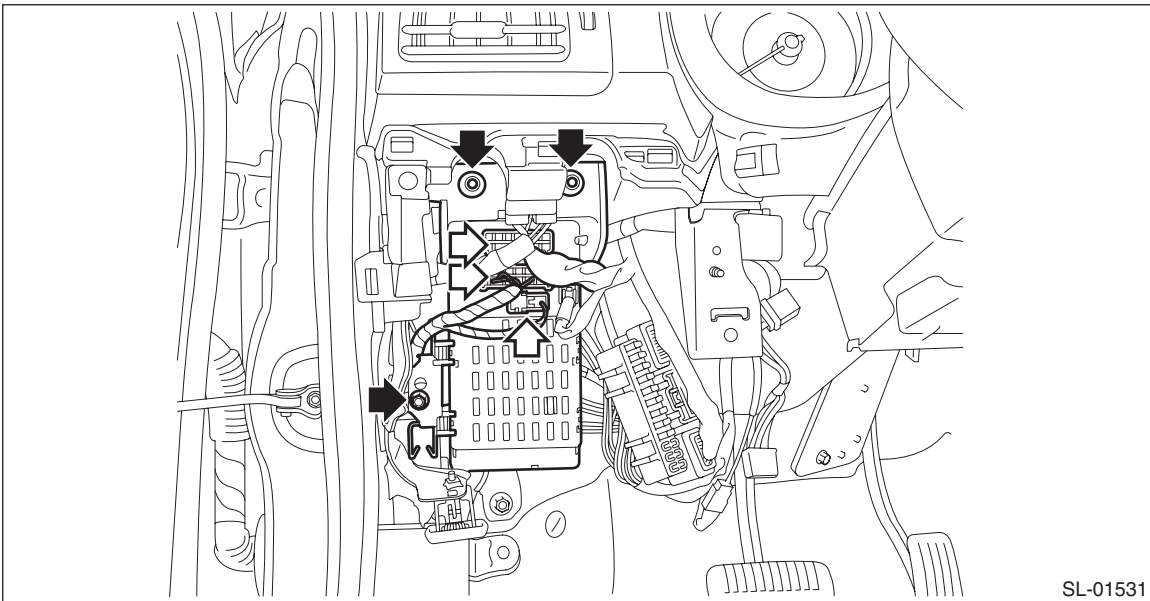


## IG Relay2 (Push Button Start)

### SECURITY AND LOCKS

---

4) Remove IG relay 2 (push button start) (A) from the relay holder.

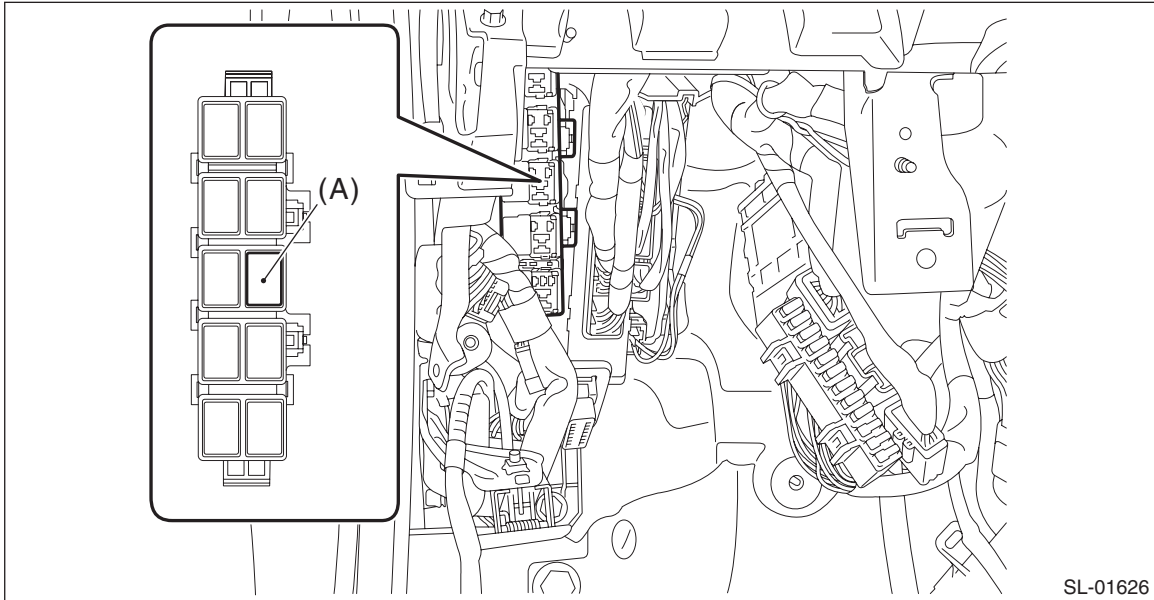

## B: INSTALLATION

*Tightening torque:*

*Relay & fuse box: 7.5 N·m (0.76 kgf-m, 5.5 ft-lb)*

## C: INSPECTION

Refer to "CHECK RELAY" in "Relay and Fuse". <Ref. to SL-13, CHECK RELAY, INSPECTION, Relay and Fuse.>