



43.Starter Cut Relay

A: REMOVAL


- 1) Remove the cover assembly - instrument panel LWR driver and the knee airbag module. <Ref. to AB-34, REMOVAL, Knee Airbag Module.>
- 2) Release the lock and remove the fuse holder.

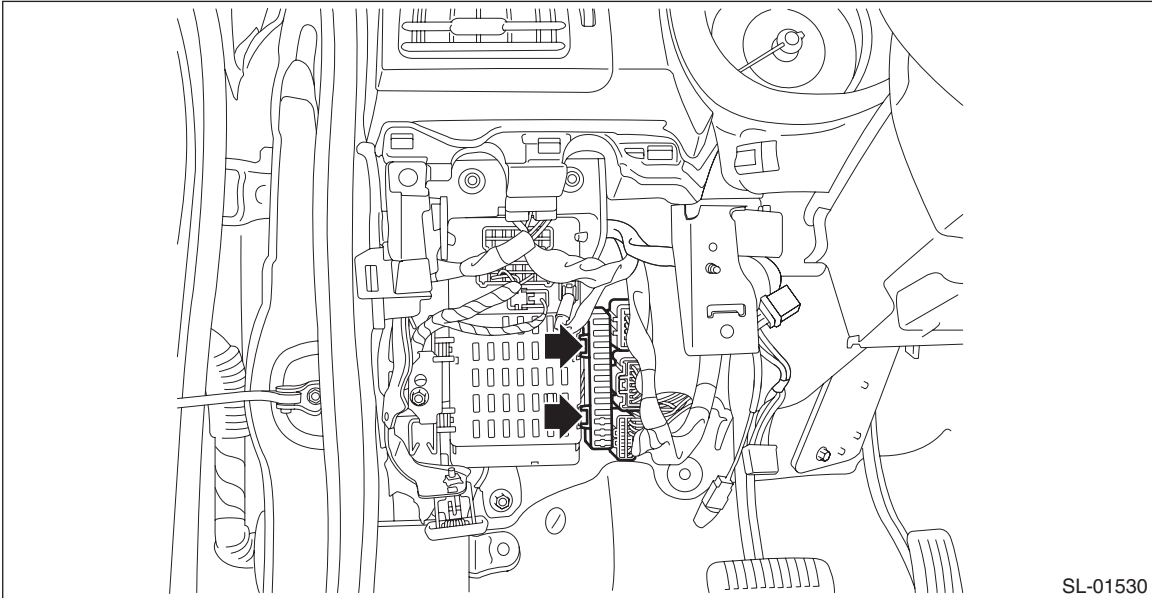

- 3) Remove the relay & fuse box.
 - (1) Disconnect the connector.
 - (2) Remove the bolts and nuts, and remove the relay & fuse box.

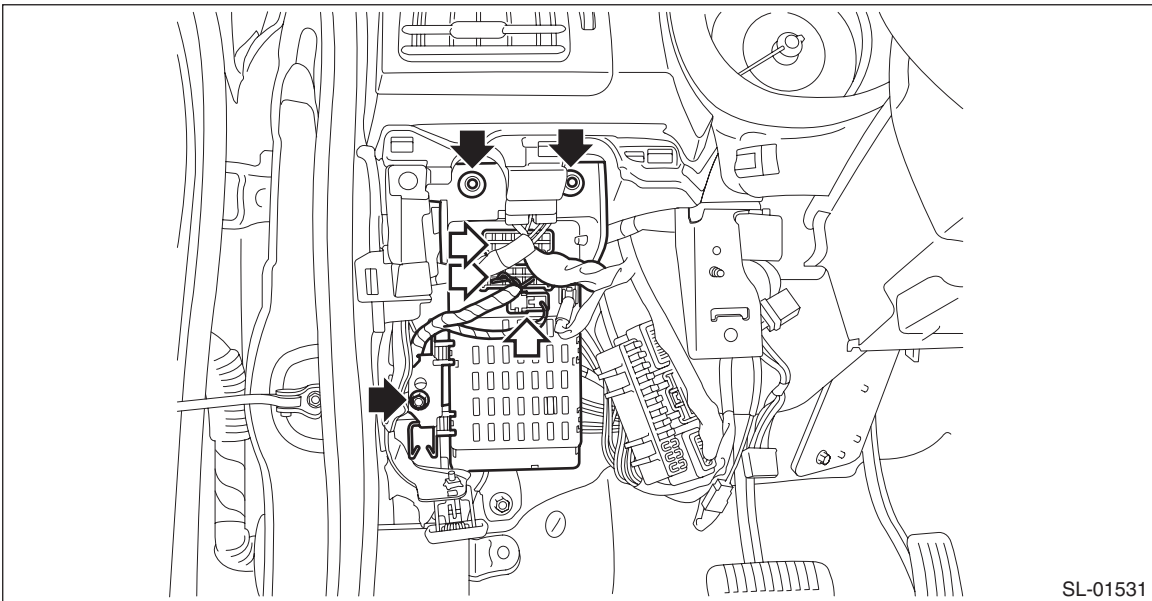

4) Remove the starter cut relay (A) from the relay holder.

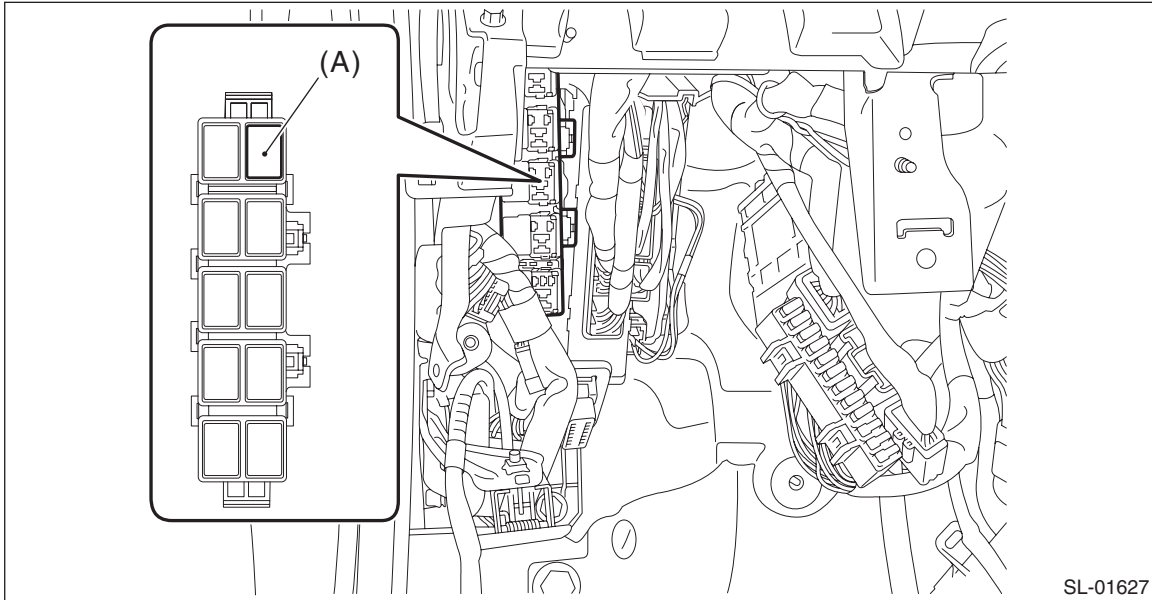

SL-01627

B: INSTALLATION

Install each part in the reverse order of removal.

Tightening torque:

Relay & fuse box: 7.5 N·m (0.76 kgf-m, 5.5 ft-lb)

C: INSPECTION

Refer to "CHECK RELAY" in "Relay and Fuse". <Ref. to SL-13, CHECK RELAY, INSPECTION, Relay and Fuse.>