

## 45. Function Setting (Customize)

### A: OPERATION

#### Disabling/Activating the keyless access system

The following functions are disabled when the keyless access system functions are disabled:

- LOCK function performed by the operation of touch sensor on the door outer handle
- Rear gate LOCK function by rear lock button operation
- UNLOCK function by the door touch sensor
- Rear gate open function by rear gate opener button operation in the rear gate lock condition
- Trunk lid open function by trunk opener button operation in the trunk lid lock condition
- Lockout prevention feature
- Warning function
- Engine starting control using keyless access collation

### B: PROCEDURE

#### 1. METHOD FOR STOPPING KEYLESS ACCESS SYSTEM FUNCTION BY OPENING/CLOSING DOORS

1) Check that the vehicle status is as follows:

- Ignition switch OFF
- One window is completely open
- Keyless access system is activated (or disabled if re-activating)

2) Sit in the driver's seat with the door closed and press the door lock switch to UNLOCK once.

3) Open the driver's door within five seconds.

4) Within 5 seconds, with the driver's door opened, slowly press the door lock switch to UNLOCK twice.

5) Within 30 seconds, perform the closing → opening operation of the driver's door twice.

6) Within 30 seconds, with the driver's door opened, slowly press the door lock switch to UNLOCK twice.

7) Within 30 seconds, perform the closing → opening operation of the driver's door once.

8) Within five seconds, close the driver's door.

NOTE:

- Perform the same procedures to re-activate the keyless access system from the disabled condition.
- If the driver's door is opened or closed in step 4) and step 6), the cancel operation is disabled.

#### 2. METHOD FOR STOPPING KEYLESS ACCESS SYSTEM FUNCTION BY OPERATING ACCESS KEY

1) Open the driver's door and press the door lock knob forward (in the LOCK direction).

2) Press the lock button and the trunk/rear gate button of the access key simultaneously for at least five seconds.

3) A buzzer sounds for two seconds and the function stops.

NOTE:

Perform the same procedures to re-activate the keyless access system from the disabled condition.