


## Relay and Fuse

SUNROOF/T-TOP/CONVERTIBLE TOP (SUNROOF)

## 2. Relay and Fuse

### A: LOCATION

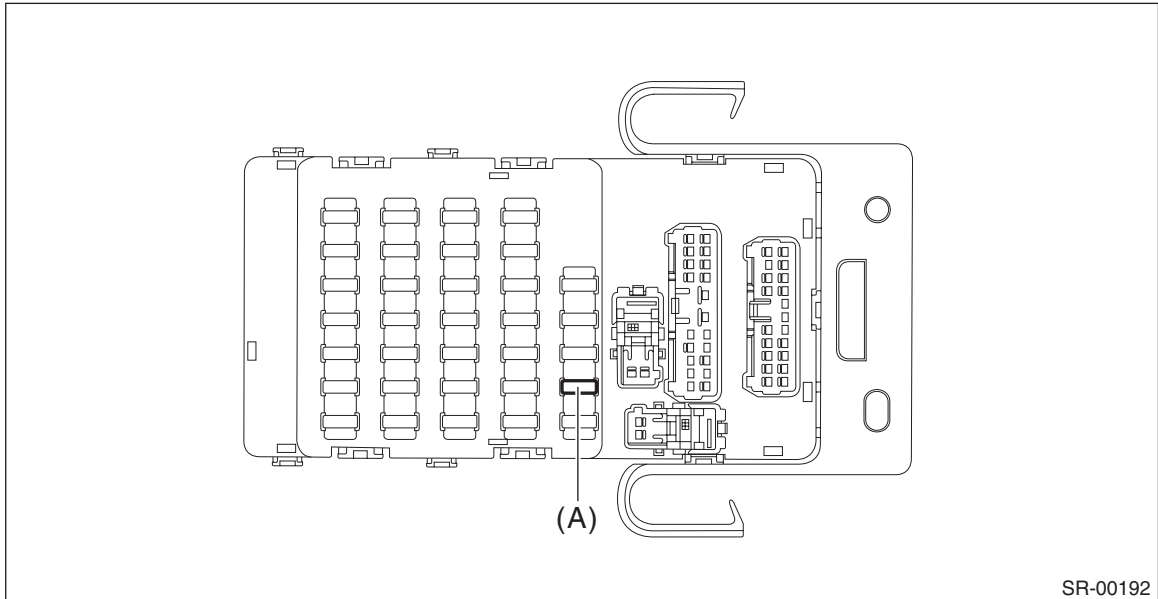

Relay & fuse box	Fuse 10A (IG 2)	(A)
------------------	-----------------	-----

#### NOTE:

For other related fuses, refer to the wiring diagram. <Ref. to WI(w/o HEV)-16, Power Supply Circuit.>

### B: INSPECTION

#### 1. CHECK FUSE

- 1) Remove the fuse and check visually.
- 2) If the fuse is blown out, replace the fuse.