# 5. Sunroof Assembly

## A: REMOVAL

#### **CAUTION:**

When removing the clip, use great care not to damage the trim panel - roof assembly.


- 1) Remove the lid assembly sunroof.
  - (1) Completely close the lid assembly sunroof, and open the sunshade assembly.
    (2) Remove the TORX<sup>®</sup> bolt, and then remove the lid assembly sunroof.

#### **CAUTION:**

Be careful not to damage the lid assembly - sunroof.


#### PREPARATION TOOL:

TORX® T25

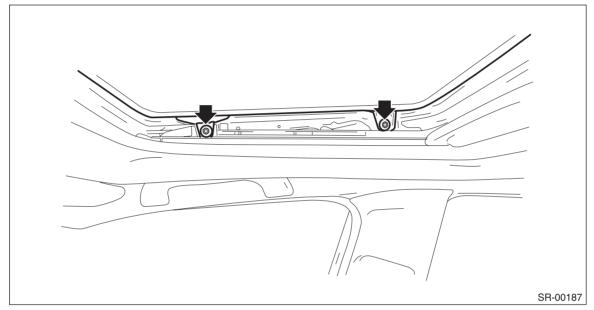


- 2) Remove the trim panel roof assembly. <Ref. to EI-129, REMOVAL, Roof Trim.>
- 3) Disconnect the harness connector of the motor assembly.


- 4) Remove the rail assembly.
  - (1) Remove the drain tube sunroof.

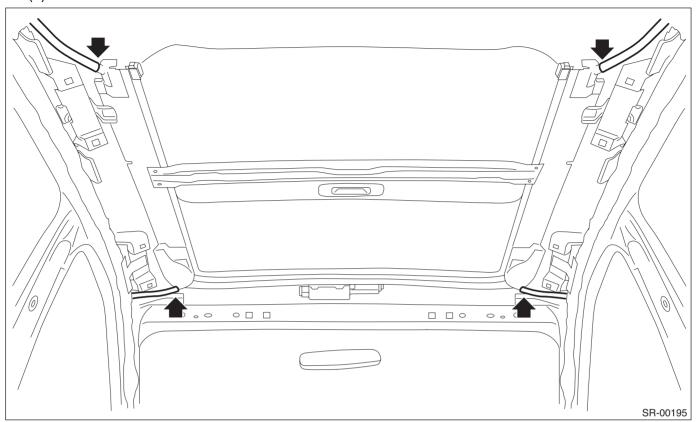


(2) Remove the bracket - assist rail.

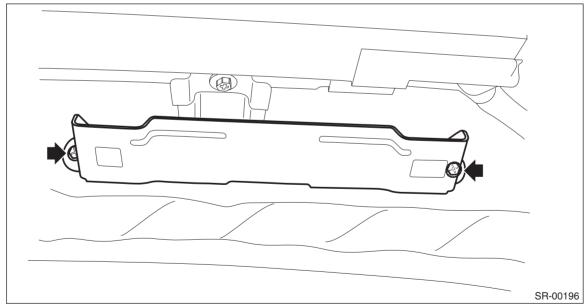

(3) Remove the bolts and then remove the sunroof bracket.

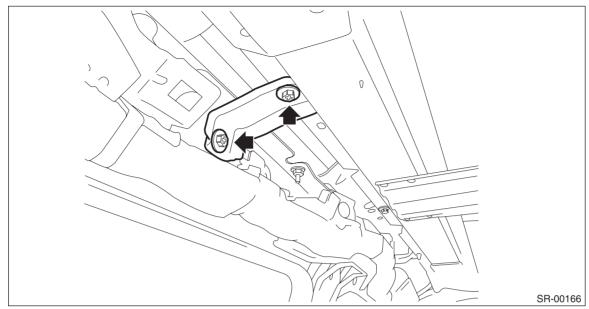

(4) Remove the bolts, then remove the rail assembly.

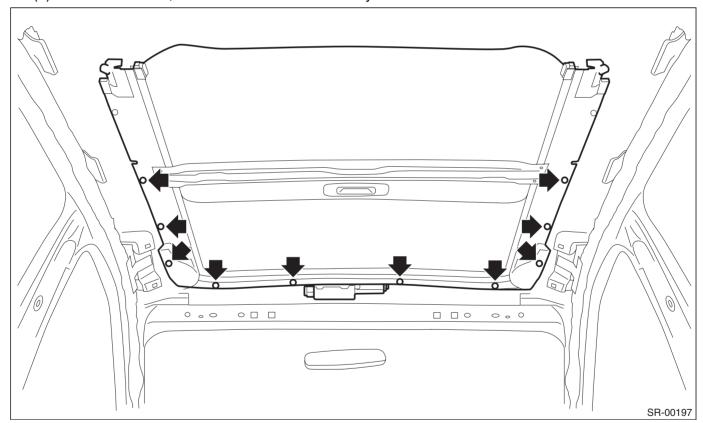

## **B: INSTALLATION**

#### **CAUTION:**

Be careful not to snag the harness.

Install each part in the reverse order of removal.

#### Tightening torque:


Refer to "COMPONENT" of "General Description". <Ref. to SR-2, COMPONENT, General Description.>

#### NOTE:

- Be sure to connect the harness connector.
- When installing the drain tube sunroof, insert it securely into drain pipe.


## Length A:

## 15 mm (0.59 in) or more

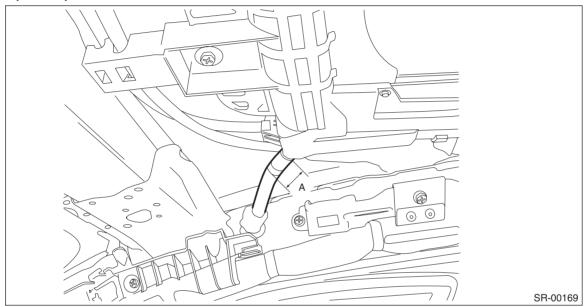


## C: DISASSEMBLY


1) Remove the screw and remove the sunroof motor.

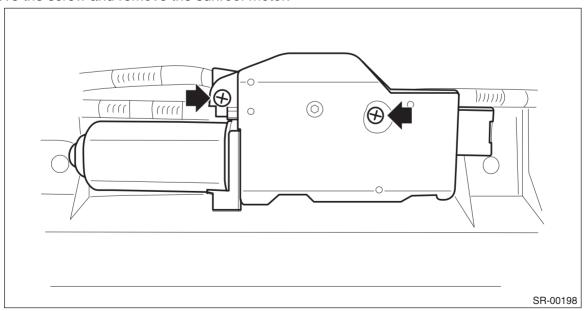


2) Remove the stopper rubber and pull out the sunshade assembly from the rail assembly - sunroof.

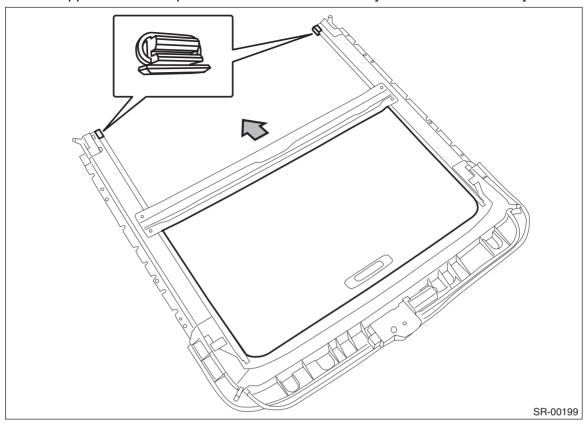

3) Disconnect the claws and then remove the drain holder.

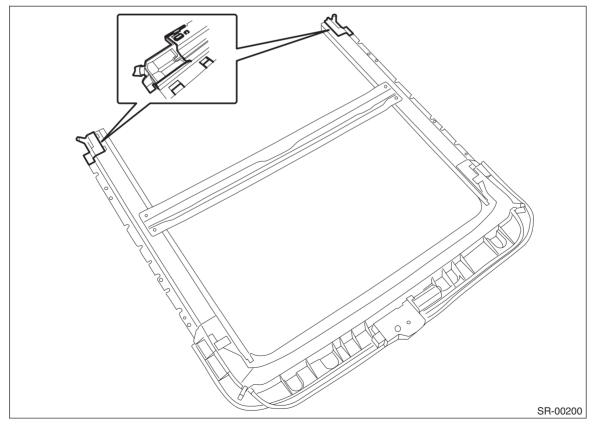

4) Remove the screw and pull out the cable assembly from the rail assembly - sunroof.

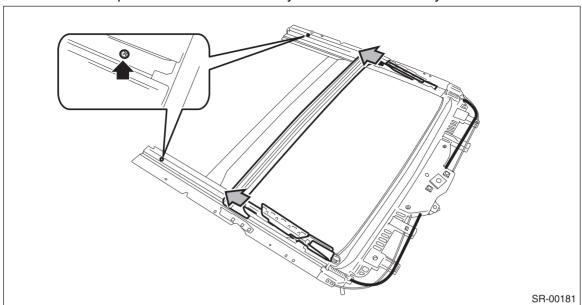

# D: ASSEMBLY

Install each part in the reverse order of removal.