


2. Relay and Fuse

A: LOCATION

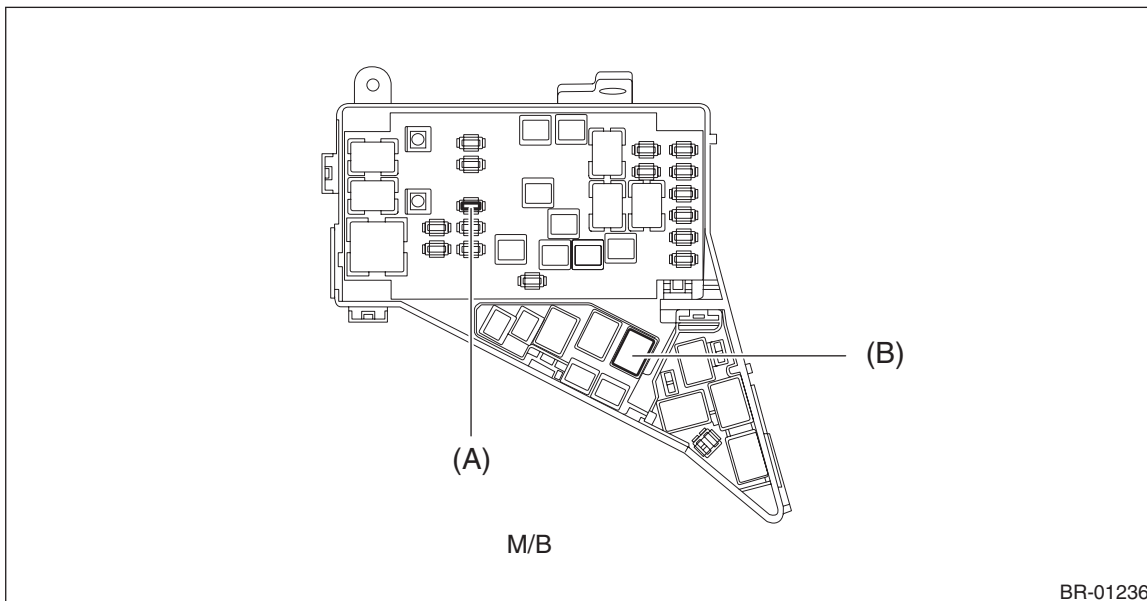

BR-01236

Main fuse box	Fuse 15 A (vacuum pump - relay)	(A)
	Fuse 30 A (vacuum pump - relay)	(B)

NOTE:

For other related fuses, refer to the wiring diagram.

- Gasoline engine model: <Ref. to WI(w/o HEV)-16, Power Supply Circuit.>
- HEV model: <Ref. to WI(HEV)-21, Power Supply Circuit.>

B: INSPECTION

1. CHECK FUSE

- 1) Remove the fuse and inspect visually.
- 2) If the fuse is blown out, replace the fuse.

NOTE:

If the fuse is blown again, check the system wiring harness.

2. CHECK RELAY

- 1) Check the resistance between relay terminals.

Terminal No.	Inspection conditions	Standard	Circuit
1 — 2	Always	1 MΩ or more	
1 — 2	4 — Apply battery voltage between three terminals.	Less than 1 Ω	

LI-01273

- 2) Replace the relay if the inspection result is not within the standard value.