9. General Diagnostic Table

A: INSPECTION

NOTE:

Vibration while cruising may be caused by an unbalanced tire, improper tire inflation pressure, improper wheel alignment, etc.

Symptoms	Possible cause	Corrective action
Noise or vibration from propeller shaft	Center bearingRunout of propeller shaftLoose or gap at connections	Inspect the propeller shaft. <ref. ds-15,="" inspection,="" propeller="" shaft.="" to=""></ref.>
Abnormal wheel vibration	Wheel is out of balance.	Check the wheel balance. <ref. and="" balancing,="" inspection,="" tire="" to="" wheel="" wheel.="" wt-5,=""></ref.>
	Front wheel alignment	Check the front wheel alignment. <ref. alignment.="" fs-7,="" inspection,="" to="" wheel=""></ref.>
	Rear wheel alignment	Check the rear wheel alignment. <ref. alignment.="" inspection,="" rs-8,="" to="" wheel=""></ref.>
	Front strut	Check the front strut. <ref. front="" fs-48,="" inspection,="" strut.="" to=""></ref.>
	Rear shock absorber	Check the rear shock absorber. <ref. absorber.="" inspection,="" rear="" rs-35,="" shock="" to=""></ref.>
	Front axle shaft	Check the front axle shaft. <ref. drive="" ds-71,="" front="" inspection,="" shaft.="" to=""></ref.>
	Rear axle shaft	Check the rear axle shaft. <ref. drive="" ds-86,="" inspection,="" rear="" shaft.="" to=""></ref.>
	Hub unit COMPL - front axle	Check the hub unit COMPL - front axle. <ref. bearing.="" ds-33,="" front="" hub="" inspection,="" to="" unit=""></ref.>
	Hub unit COMPL - rear axle	Check the hub unit COMPL - rear axle. <ref. bearing.="" ds-55,="" hub="" inspection,="" rear="" to="" unit=""></ref.>
Noise from the underbody	Wheel is out of balance.	Check the wheel balance. <ref. and="" balancing,="" inspection,="" tire="" to="" wheel="" wheel.="" wt-5,=""></ref.>
	Front wheel alignment	Check the front wheel alignment. <ref. alignment.="" fs-7,="" inspection,="" to="" wheel=""></ref.>
	Rear wheel alignment	Check the rear wheel alignment. <ref. alignment.="" inspection,="" rs-8,="" to="" wheel=""></ref.>
	Front strut	Check the front strut. <ref. front="" fs-48,="" inspection,="" strut.="" to=""></ref.>
	Rear shock absorber	Check the rear shock absorber. <ref. absorber.="" inspection,="" rear="" rs-35,="" shock="" to=""></ref.>

General Diagnostic Table

VEHICLE DYNAMICS CONTROL (VDC) VDC

		Page
1.	General Description	2
2.	Relay and Fuse	8
3.	Vehicle Dynamics Control System	9
4.	VDC Control Module and Hydraulic Control Unit (VDCCM&H/U)	
5.	ABS Sequence Control	
6.	VDC Sequence Control	31
7.	Yaw Rate and G Sensor	34
8.	Steering Angle Sensor	35
9.	Front ABS Wheel Speed Sensor	
10.	Rear ABS Wheel Speed Sensor	43
11.	Front Magnetic Encoder	52
12.	Rear Magnetic Encoder	
13.	VDC OFF Switch	54