

## **Read Diagnostic Trouble Code (DTC)**

POWER ASSISTED SYSTEM (POWER STEERING) (DIAGNOSTICS)

---

### **7. Read Diagnostic Trouble Code (DTC)**

#### **A: OPERATION**

- For detailed operation procedures, refer to “PC application help for Subaru Select Monitor”.
- For details concerning the DTC, refer to “List of Diagnostic Trouble Code (DTC)”. <Ref. to PS(diag)-26, List of Diagnostic Trouble Code (DTC).>