

## 2. Power Steering System

### A: WIRING DIAGRAM

Refer to “Electric Power Steering System” in the wiring diagram. <Ref. to WI(w/o HEV)-222, WIRING DIAGRAM, Vehicle Dynamics Control System.>

### B: ELECTRICAL SPECIFICATION

Refer to Control Module I/O Signal of “POWER ASSISTED SYSTEM (POWER STEERING) (DIAGNOSTICS)”. <Ref. to PS(diag)-10, ELECTRICAL SPECIFICATION, Control Module I/O Signal.>

### C: INSPECTION

Refer to “POWER ASSISTED SYSTEM (POWER STEERING) (DIAGNOSTICS)”. <Ref. to PS(diag)-2, Basic Diagnostic Procedure.>

### D: NOTE

For procedure of each component in the power steering system, refer to the respective section.

- Steering wheel: <Ref. to PS-8, Steering Wheel.>
- Universal joint assembly - steering: <Ref. to PS-14, Universal Joint.>
- Steering column: <Ref. to PS-19, Steering Column.>
- Electric power steering gearbox: <Ref. to PS-28, Electric Power Steering Gearbox.>
- Power steering control module: <Ref. to PS-44, Power Steering Control Module.>