

# Power Steering Control Module

POWER ASSISTED SYSTEM (POWER STEERING)

## 7. Power Steering Control Module

### A: REMOVAL

1) Disconnect the ground cable from battery. <Ref. to NT-5, BATTERY, NOTE, Note.>


NOTE:

For the 12 volt engine restart battery of HEV model, disconnect the ground terminal from 12V engine restart battery sensor.

2) Remove the power steering control module.

(1) Disconnect the connector of the power steering control module.

(2) Remove the nuts, and remove the power steering control module.

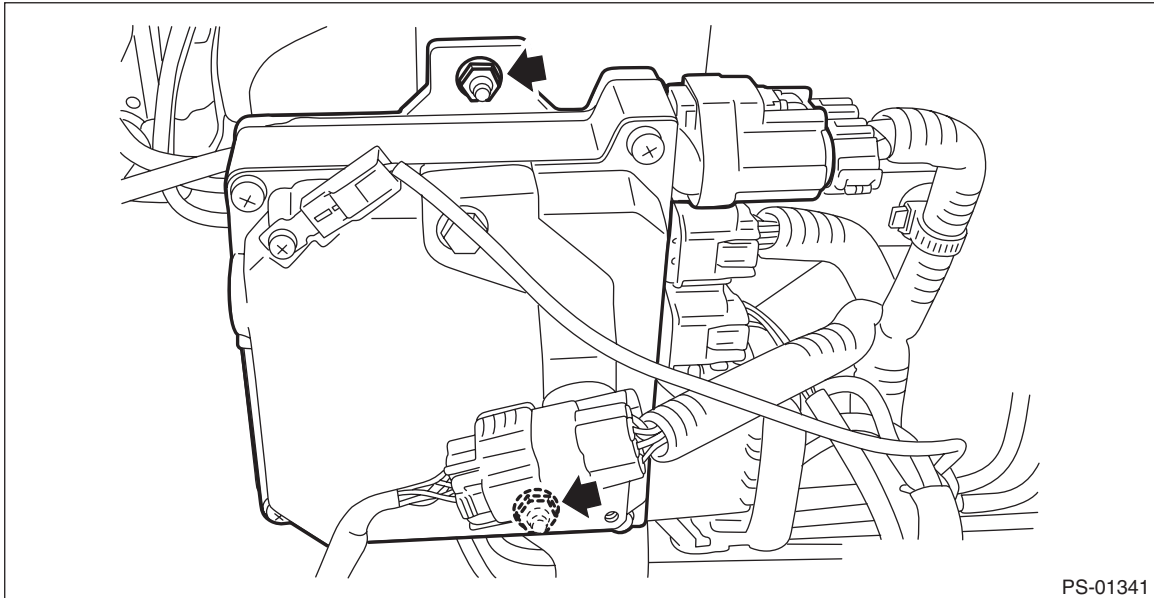

PS-01341

### B: INSTALLATION

1) Install each part in the reverse order of removal.

**CAUTION:**

**Make sure that the connector is securely locked.**

**Tightening torque:**

**Power steering control module: 7.5 N·m (0.76 kgf-m, 5.5 ft-lb)**