


Electrical Component Location

TIRE PRESSURE MONITORING SYSTEM (DIAGNOSTICS)

3. Electrical Component Location

A: LOCATION

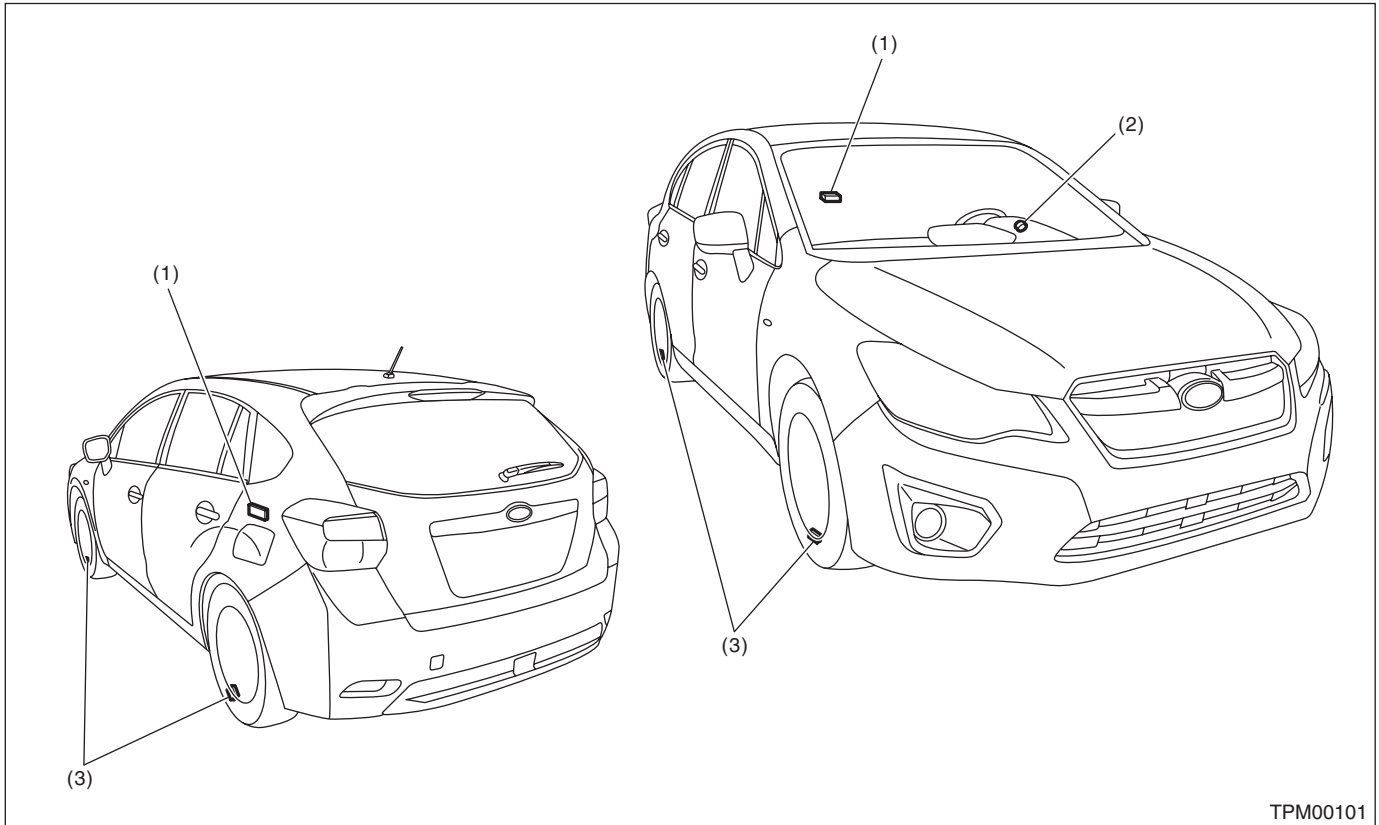

TPM00101

(1) TPMS & keyless entry CM or
TPMS CM


(2) Tire pressure warning light

(3) Snap-in type transmitter


Electrical Component Location

TIRE PRESSURE MONITORING SYSTEM (DIAGNOSTICS)




- 5 door model (model without keyless access)

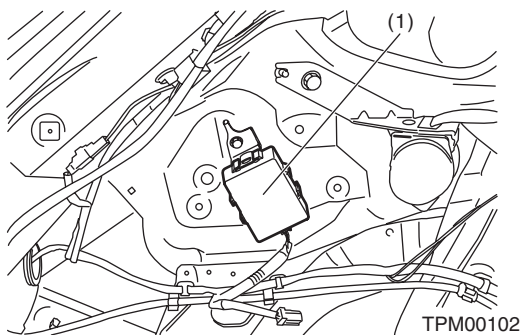

- 5 door model (model with keyless access)

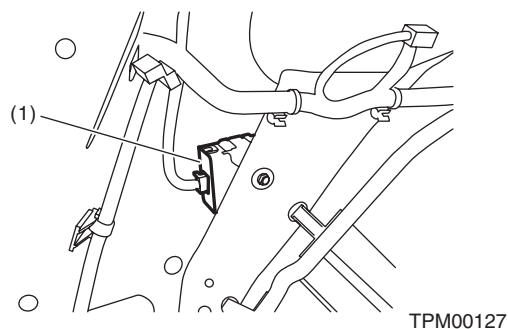

- 4 door model

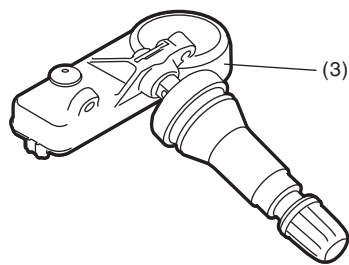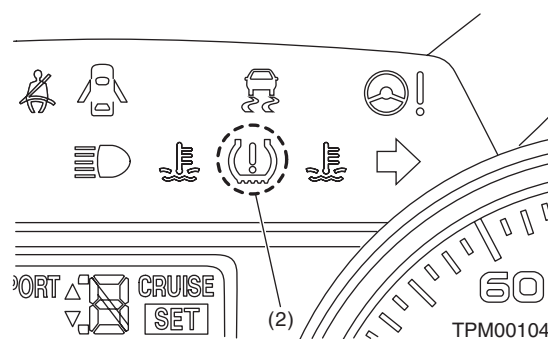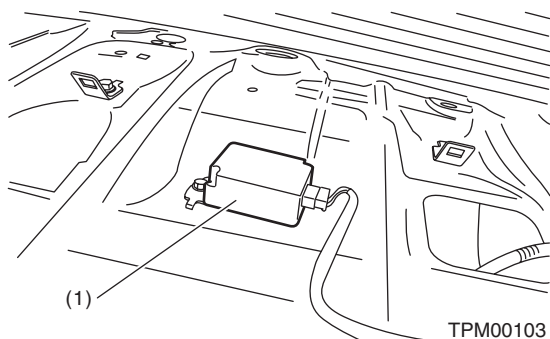

SUBARU