

General Diagnostic Table

TIRE PRESSURE MONITORING SYSTEM (DIAGNOSTICS)

15.General Diagnostic Table

A: INSPECTION

Symptoms		Faulty parts
Tire pressure warning light illuminates.	Tire pressure is reduced.	<ul style="list-style-type: none">• Improper tire pressure adjustment• Punctured tire
Tire pressure warning light blinks 25 times and then illuminates.	Tire pressure monitoring system has malfunction.	<ul style="list-style-type: none">• Air pressure sensor malfunction• Air pressure sensor is out of battery.• Defective TPMS & keyless entry CM or TPMS CM• Defective vehicle harness• Defective combination meter
Tire pressure is dropping but the warning light does not illuminate.	Tire pressure warning light does not illuminate.	<ul style="list-style-type: none">• Air pressure sensor is faulty.• Defective TPMS & keyless entry CM or TPMS CM• Defective combination meter

General Diagnostic Table

TIRE PRESSURE MONITORING SYSTEM (DIAGNOSTICS)

DIFFERENTIALS

DI

	Page
1. General Description	2
2. Differential Gear Oil	19
3. Front Differential Assembly	21
4. Rear Differential (T-type)	22
5. Rear Differential (VA-type)	41
6. Rear Differential Front Oil Seal	55
7. Rear Differential Side Oil Seal	57
8. Rear Differential Front Member	58
9. Rear Differential Mount Bushing	59
10. Rear Differential Inspection Mode	63
11. General Diagnostic Table	65