

5. Oil Seal

A: NOTE

For removal, installation and inspection, refer to “CVT” or “5MT” section.

CVT model:

<Ref. to CVT(TR580)-89, Extension Case Oil Seal.> <Ref. to CVT(TH58A)-91, Extension Case Oil Seal.>

5MT model:

<Ref. to 5MT-31, Oil Seal.>