


Relay and Fuse

VEHICLE DYNAMICS CONTROL (VDC)

2. Relay and Fuse

A: LOCATION

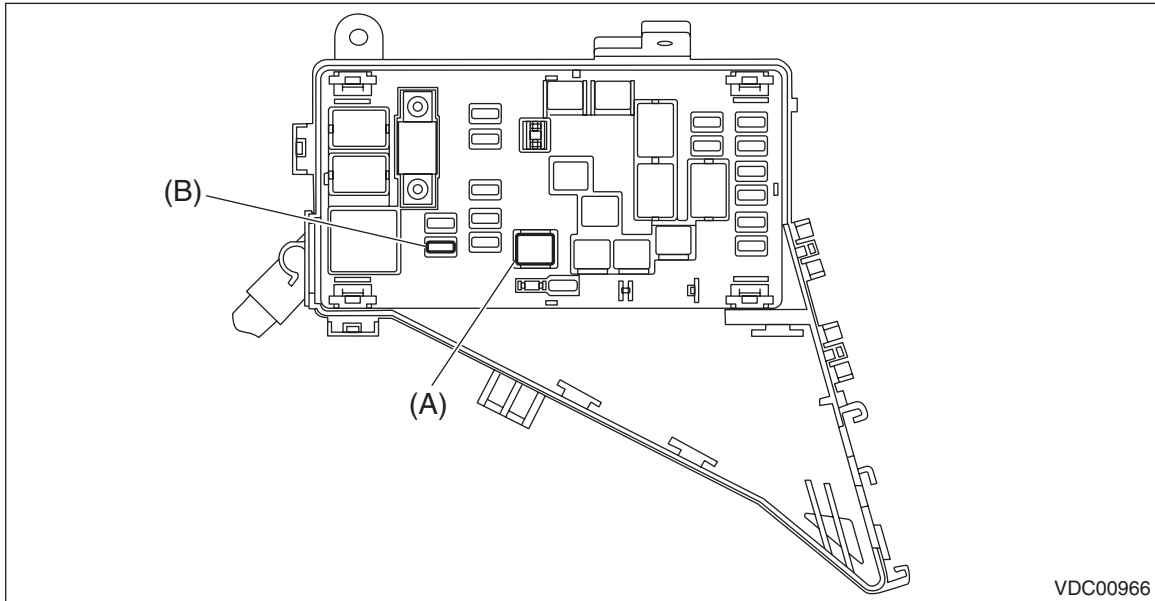

Main fuse box	Fuse 50A (VDC CM&H/U)	(A)
	Fuse 30A (VDC CM&H/U)	(B)

NOTE:

For other related fuses, refer to the wiring diagram. <Ref. to WI(w/o HEV)-16, Power Supply Circuit.>

B: INSPECTION

1. CHECK FUSE

- 1) Remove the fuse and inspect visually.
- 2) If the fuse is blown out, replace the fuse.