

# Front Catalytic Converter

EMISSION CONTROL (AUX. EMISSION CONTROL DEVICES)

---

## 2. Front Catalytic Converter

### A: REMOVAL

The front catalytic converter is integrated into the front exhaust pipe; therefore, refer to “Front Exhaust Pipe” for the removal procedure. <Ref. to EX(H4DO(w/o HEV))-6, REMOVAL, Front Exhaust Pipe.>

### B: INSTALLATION

The front catalytic converter is integrated into the front exhaust pipe; therefore, refer to “Front Exhaust Pipe” for the installation procedure. <Ref. to EX(H4DO(w/o HEV))-8, INSTALLATION, Front Exhaust Pipe.>

### C: INSPECTION

- 1) Check the connections and welded parts for exhaust leaks.
- 2) Make sure there are no holes or rusting.