

Fuel Level Sensor

EMISSION CONTROL (AUX. EMISSION CONTROL DEVICES)

9. Fuel Level Sensor

A: REMOVAL

For removal procedures, refer to the “FU (H4DO (w/o HEV))” section. <Ref. to FU(H4DO(w/o HEV))-143, REMOVAL, Fuel Level Sensor.>

B: INSTALLATION

For installation procedures, refer to the “FU (H4DO (w/o HEV))” section. <Ref. to FU(H4DO(w/o HEV))-144, INSTALLATION, Fuel Level Sensor.>

C: INSPECTION

For inspection procedures, refer to the “FU (H4DO (w/o HEV))” section. <Ref. to FU(H4DO(w/o HEV))-145, INSPECTION, Fuel Level Sensor.>