

### 10. Fuel Sub Level Sensor

#### A: REMOVAL

For removal procedures, refer to the “FU (H4DO (w/o HEV))” section. <Ref. to FU(H4DO(w/o HEV))-146, REMOVAL, Fuel Sub Level Sensor.>

#### B: INSTALLATION

For installation procedures, refer to the “FU (H4DO (w/o HEV))” section. <Ref. to FU(H4DO(w/o HEV))-150, INSTALLATION, Fuel Sub Level Sensor.>

#### C: INSPECTION

For inspection procedures, refer to the “FU (H4DO (w/o HEV))” section. <Ref. to FU(H4DO(w/o HEV))-152, INSPECTION, Fuel Sub Level Sensor.>