

Drain Filter

EMISSION CONTROL (AUX. EMISSION CONTROL DEVICES)

11.Drain Filter

A: SPECIFICATION

The leak check valve assembly is a non-disassembled part. Do not remove the drain filter from the leak check valve assembly. Refer to "Leak Check Valve Assembly" for removal and installation procedures. <Ref. to EC(H4DO(w/o HEV))-43, REMOVAL, Leak Check Valve Assembly.> <Ref. to EC(H4DO(w/o HEV))-49, INSTALLATION, Leak Check Valve Assembly.>