

12. Throttle Position Sensor

A: SPECIFICATION

Throttle body is a non-disassembled part, so do not remove the throttle position sensor from throttle body. Refer to “Throttle Body” for removal and installation procedure. <Ref. to FU(H4DO(w/o HEV))-14, REMOVAL, Throttle Body.> <Ref. to FU(H4DO(w/o HEV))-16, INSTALLATION, Throttle Body.>